

FITTING INSTRUCTIONS TO BE FITTED BY A QUALIFIED TECHNICIAN



THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:

Secondary Alternator Cover Part No. EC-V4S-SF-2020-1-GBR / Secondary Clutch Cover Part No. EC-V4S-SF-2020-2-GBR Brake Lever Guard Part No. BLG-14-A160-GBR





ENGINE COVER SET: Part No. EC-V4S-SF-2020-SET-GBR: EC-V4S-SF-2020-1-GBR, EC-V4S-SF-2020-2-GBR



FITTING INSTRUCTIONS




TO BE FITTED BY A QUALIFIED TECHNICIAN

UNIVERSAL BRAKE LEVER GUARD WITH 14mm INSERT (Fits tube inside diameters from 13.6mm to 15.7mm)

PART NO. BLG-14-A160-GBR

- 1 Remove existing bar end and replacing it with supplied bar end.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.

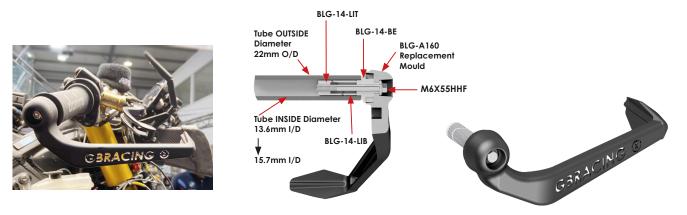

UNIVERSAL CLUTCH LEVER GUARD WITH 14mm INSERT (Fits tube inside diameters from 13.6mm to 15.7mm) PART NO. CLG-14-A160-GBR

- Remove existing bar end and replacing it with supplied bar end. 1
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm. 3

