




EVOTECH[®]
P E R F O R M A N C E

**Z900 Kawasaki
Tail Tidy**


Installation Instructions


Kit Contents PRN013818


- A** 1 x Upper Bracket
- B** 1 x Lower Bracket
- C** 1 x Base Plate
- D** 1 x Number Plate Bracket
- E** 1 x Retro Light
- F** 1 x Loom Connector 5
- G** 2 x M6 Flange Nut
- H** 2 x M4 Flange Nut
- I** 2 x M4 x 6 Black Button Head Bolts
- J** 2 x M4 Black Washers
- K** 3 x M5 x 12 Countersunk Screws
- L** 4 x M6 Black Washers
- M** 6 x M6 x 16 Black Button Head Bolts

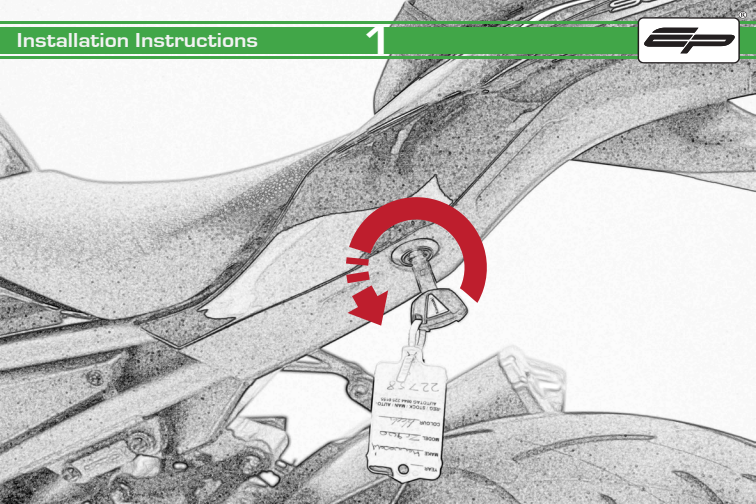





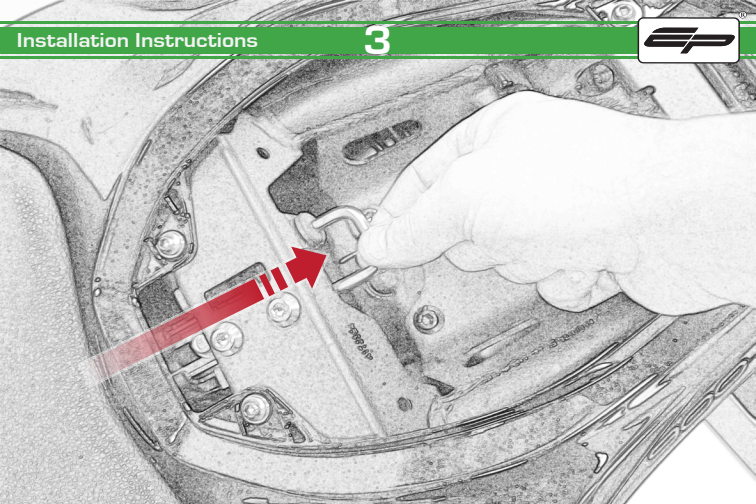



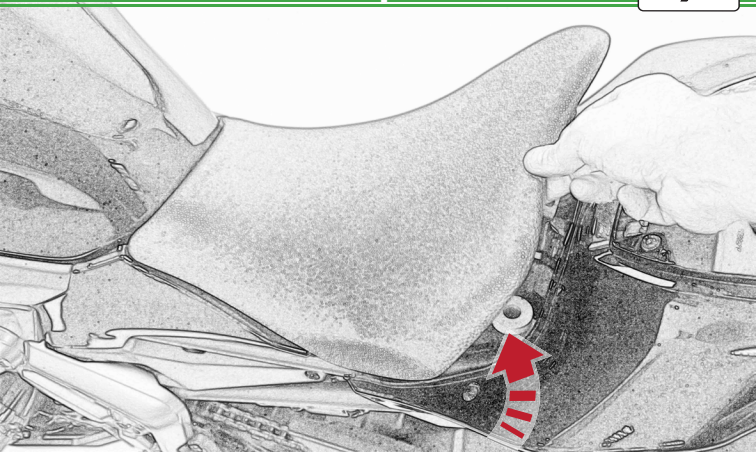


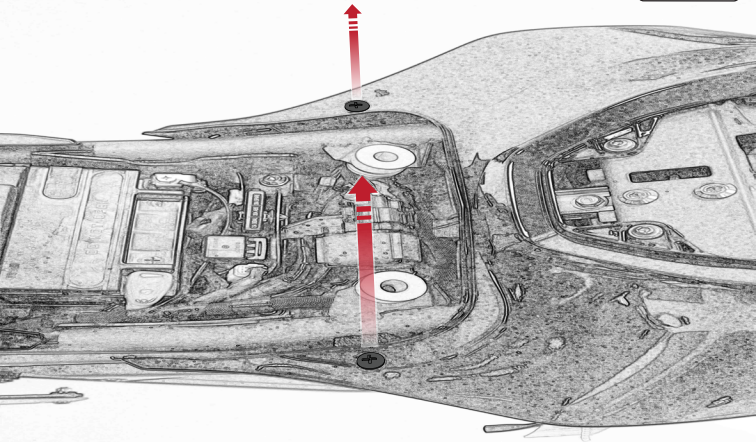


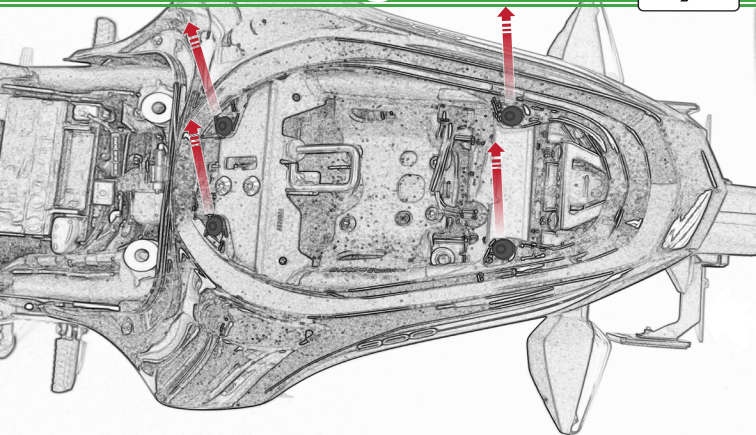


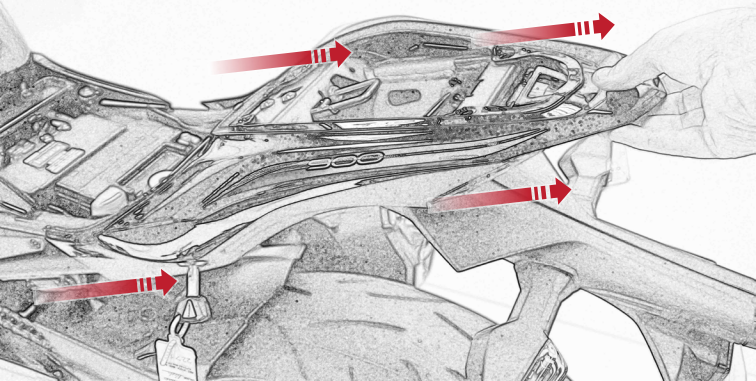


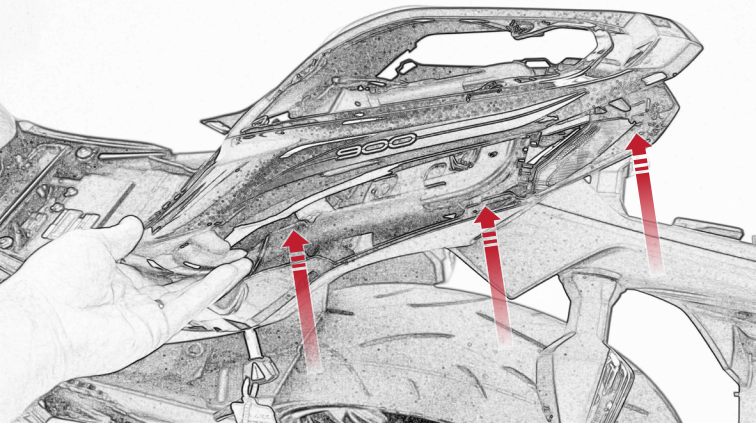


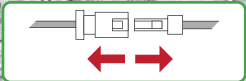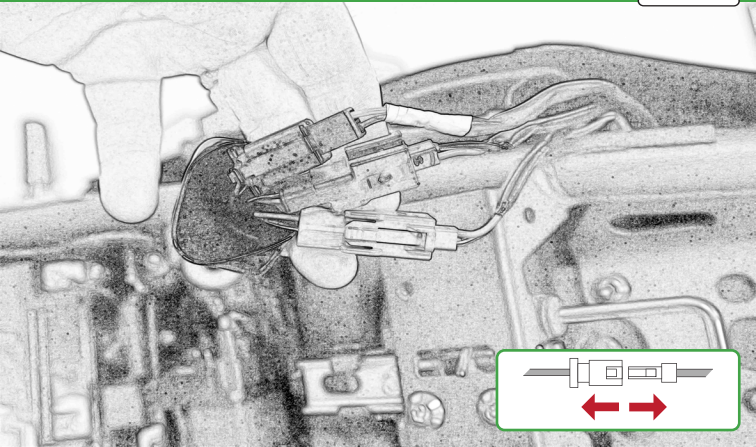


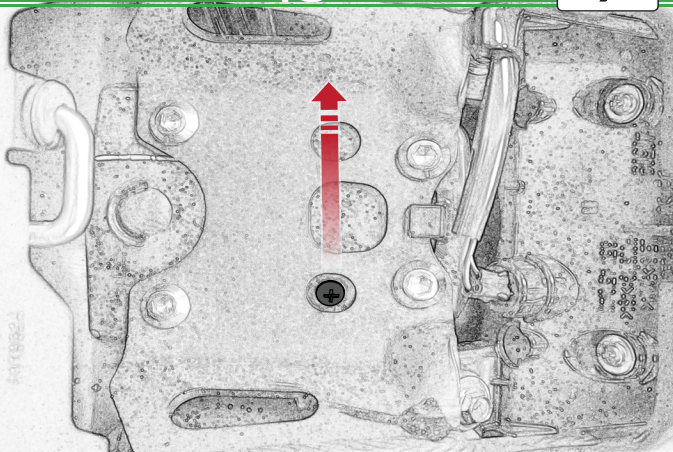


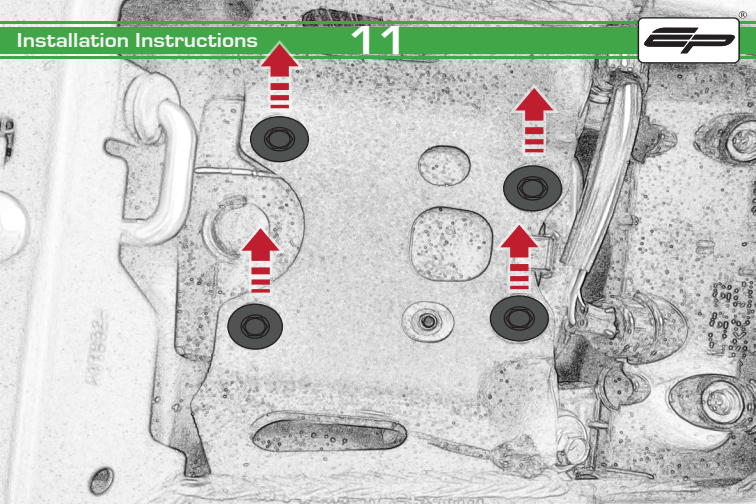


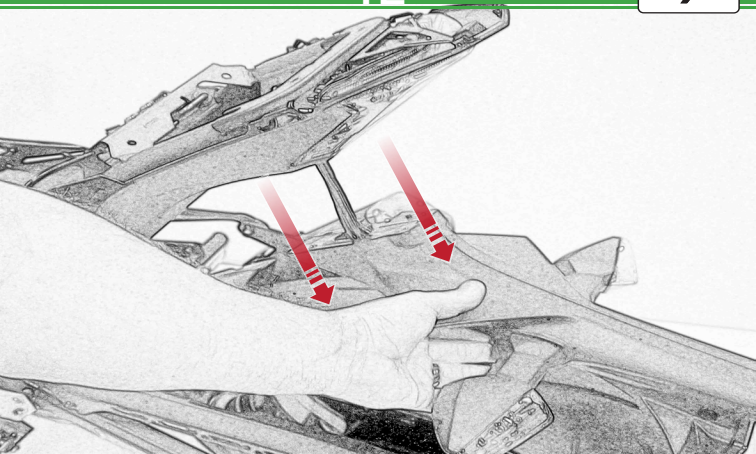

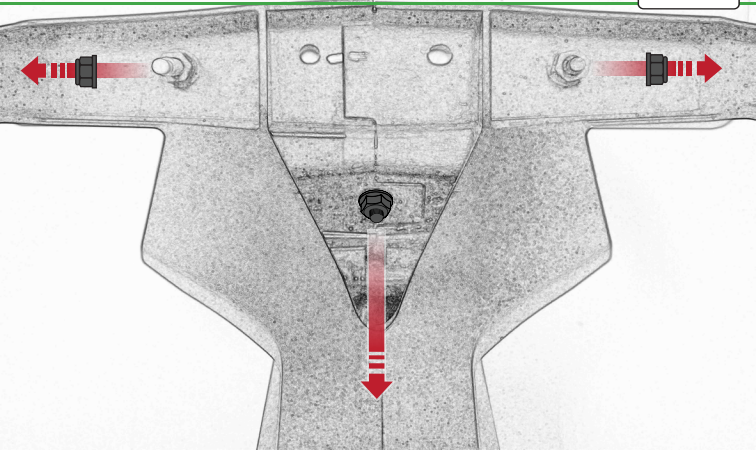


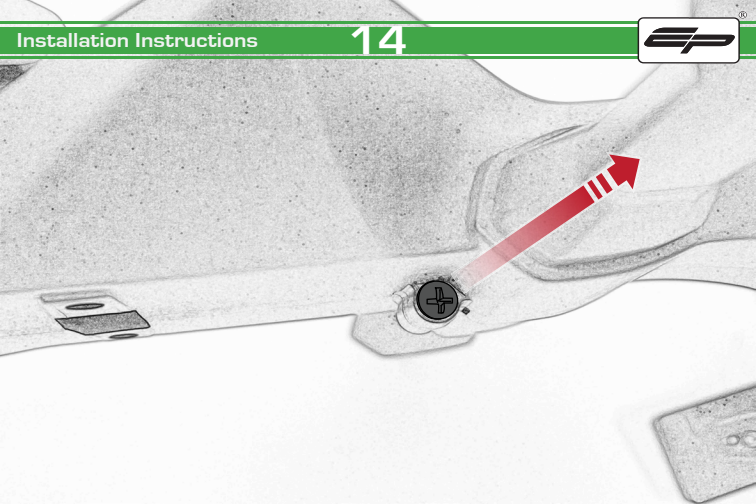

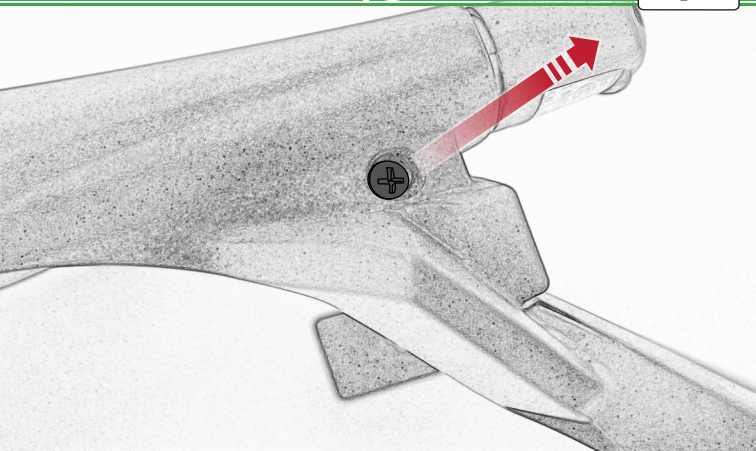


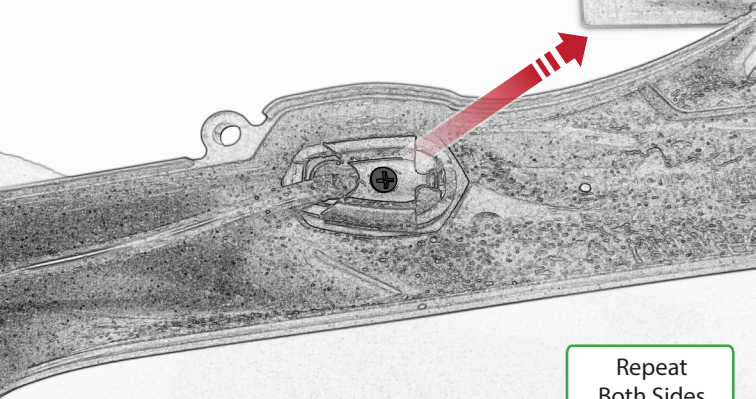


Repeat
Both Sides

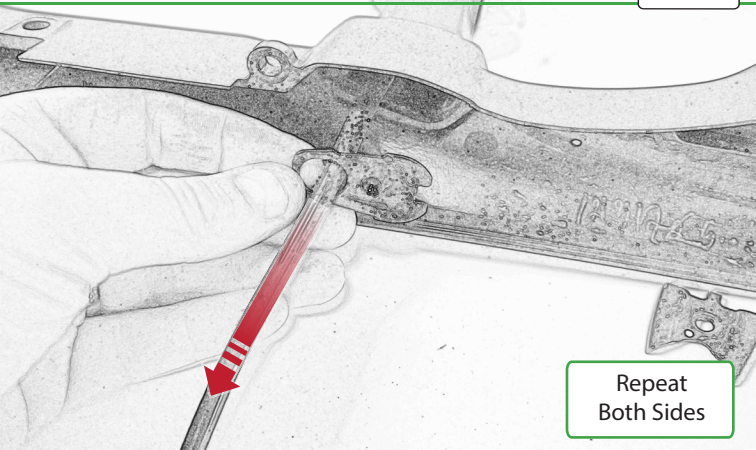



Repeat
Both Sides

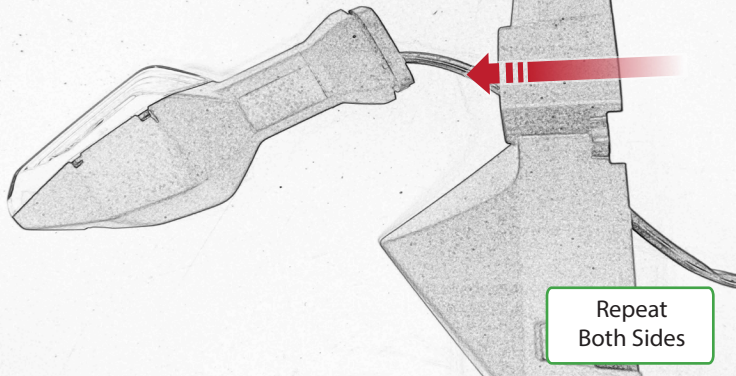


Repeat
Both Sides

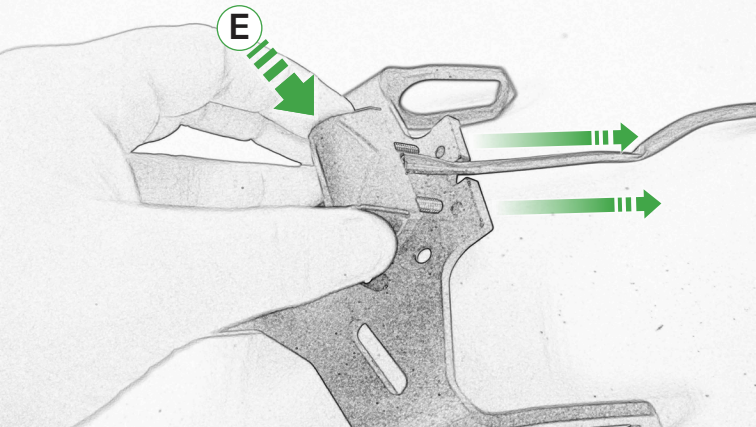

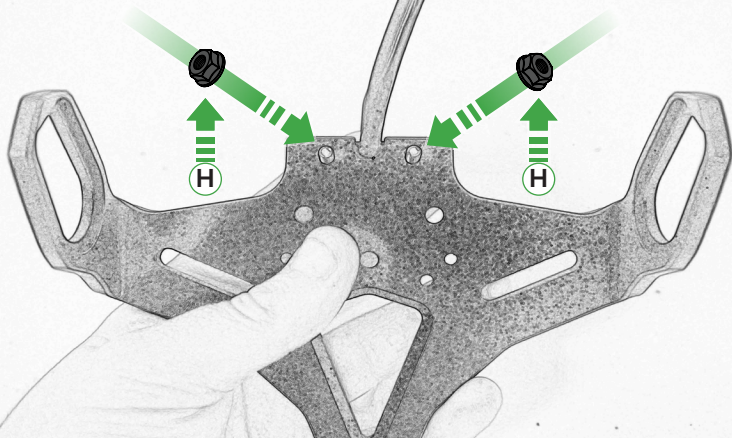


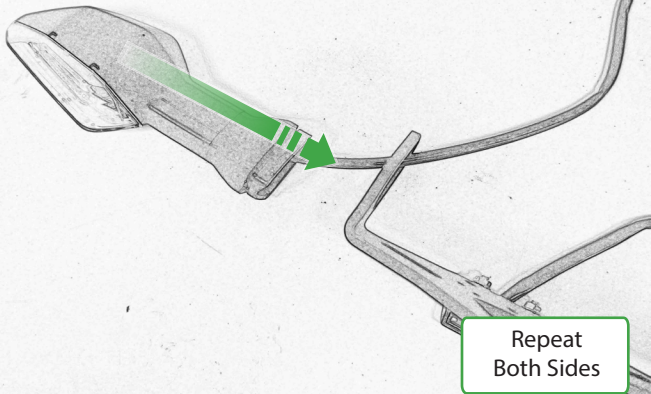

Repeat
Both Sides

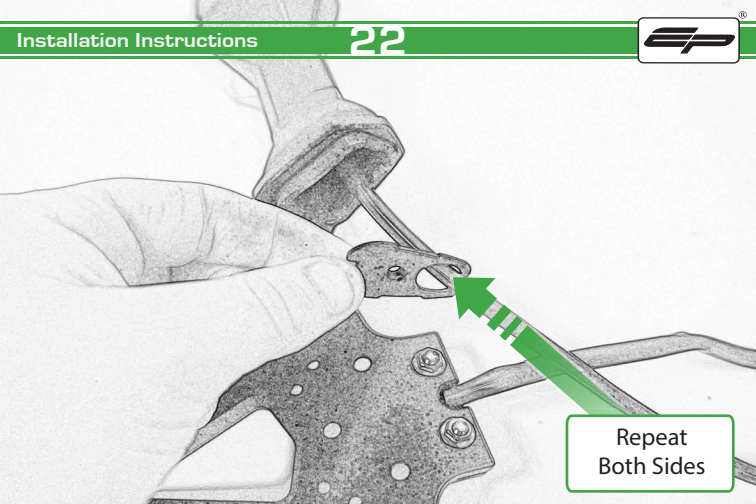


Repeat
Both Sides

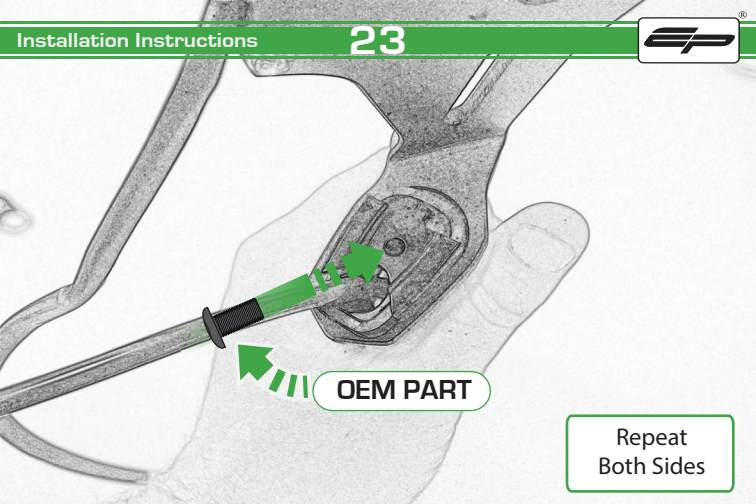


OEM PART

Repeat
Both Sides

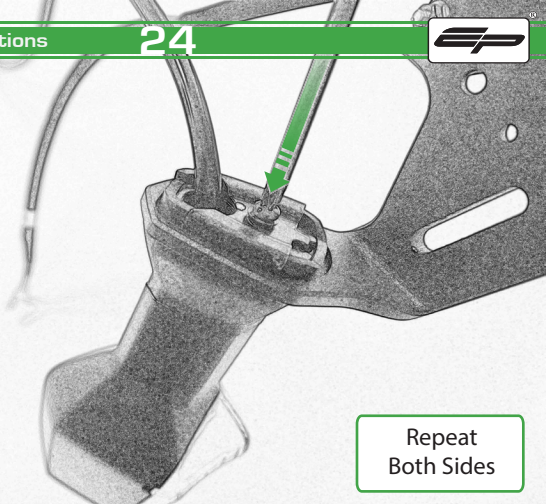


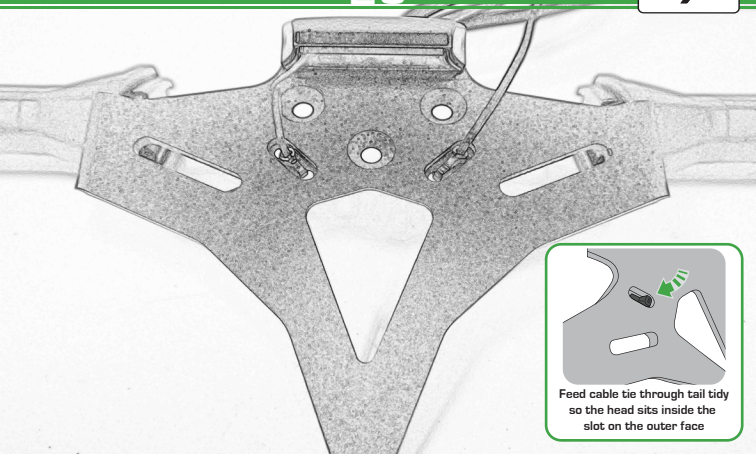
Repeat
Both Sides

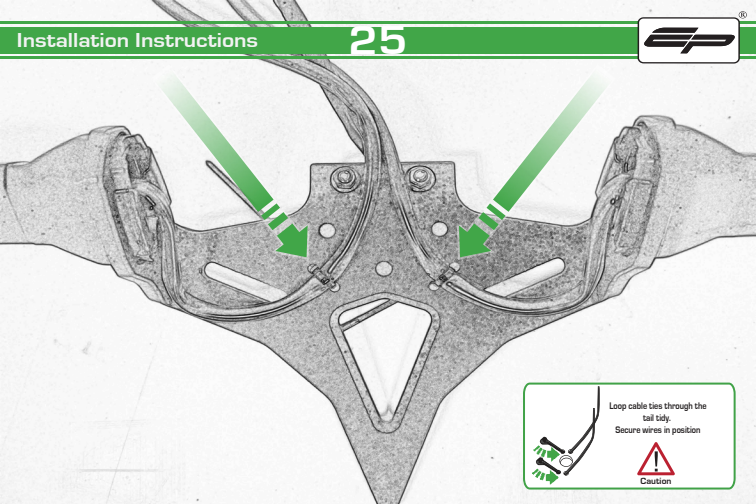

Loop cable ties through the
tail tidy.
Secure wires in position




Caution





Feed cable tie through tail tidy so the head sits inside the slot on the outer face

The inset diagram shows a close-up of a rectangular slot on the metal bracket. A cable tie is being inserted from the right side. A green arrow points to the head of the cable tie, which is positioned to sit inside the slot. The tail of the cable tie extends to the left.

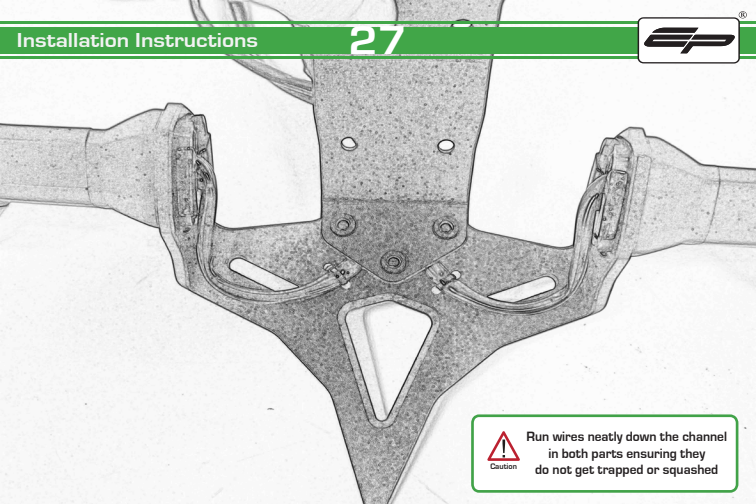


Run wires neatly down the channel
in both parts ensuring they
do not get trapped or squashed

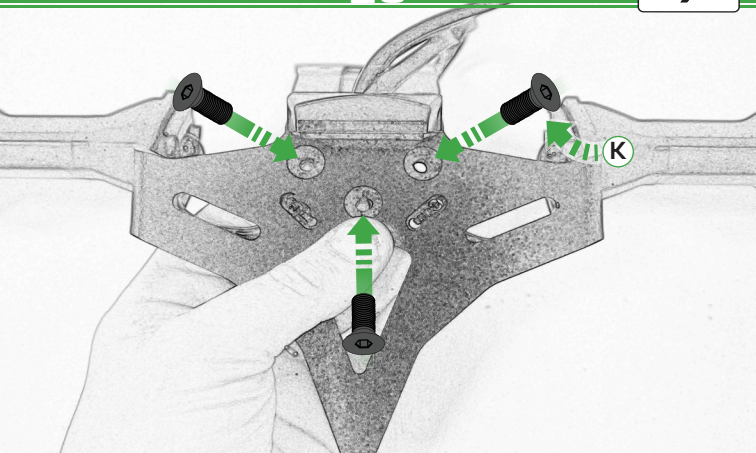


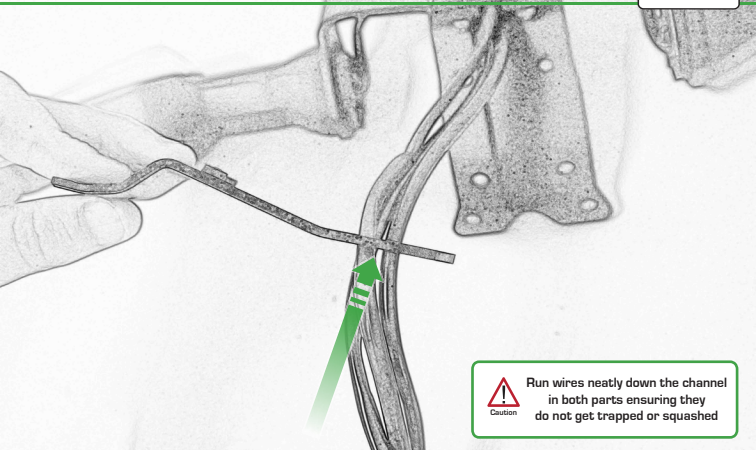



Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

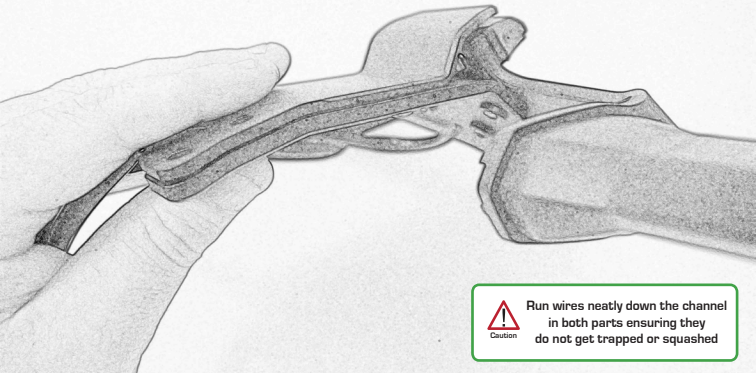


Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

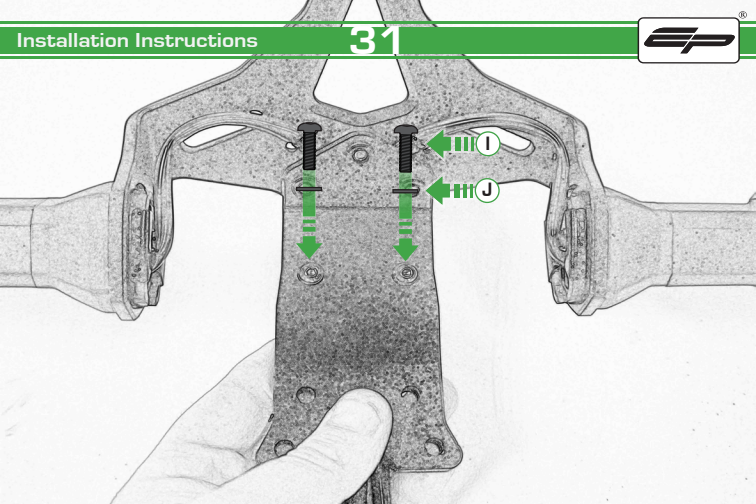

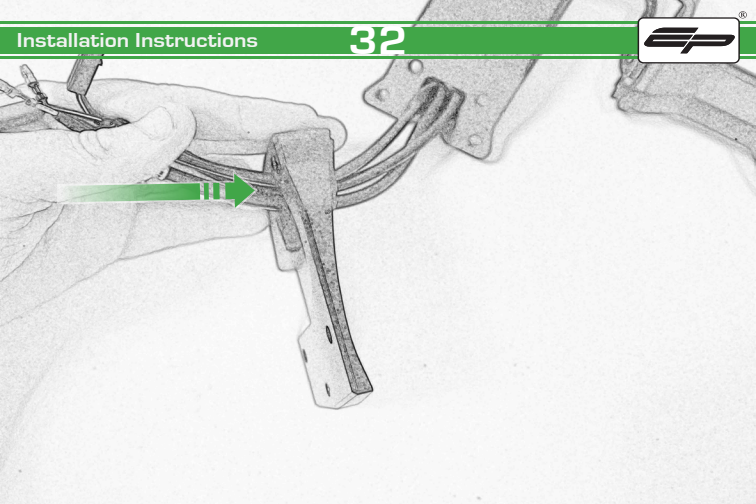

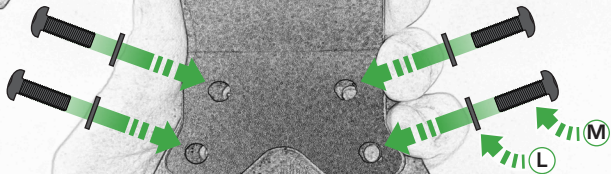


EVOTECH

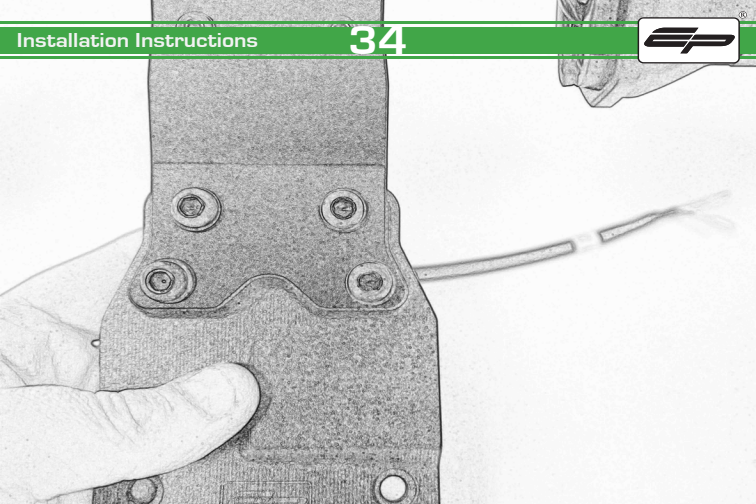



Caution


Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

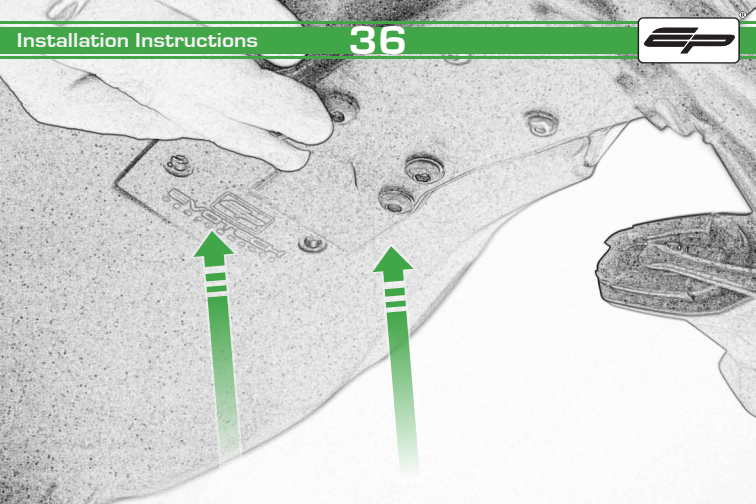







OEM PART



4370324


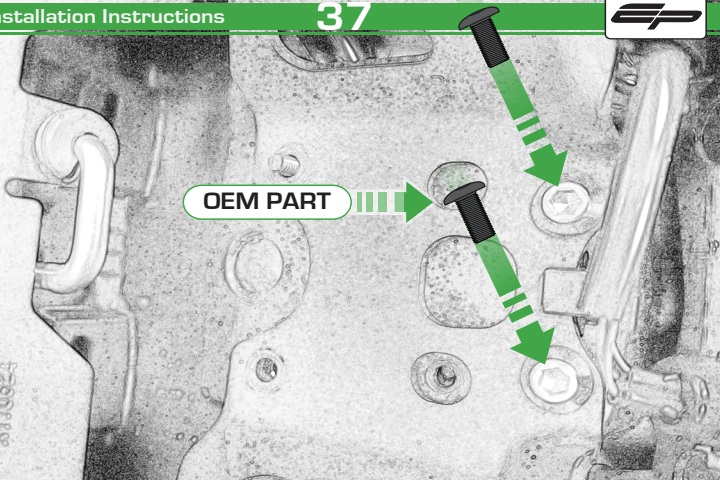


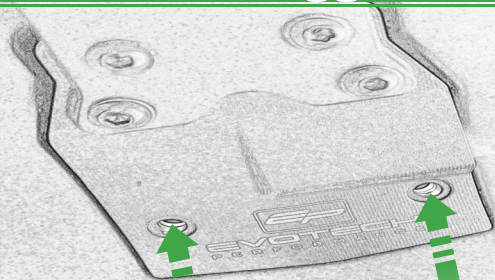

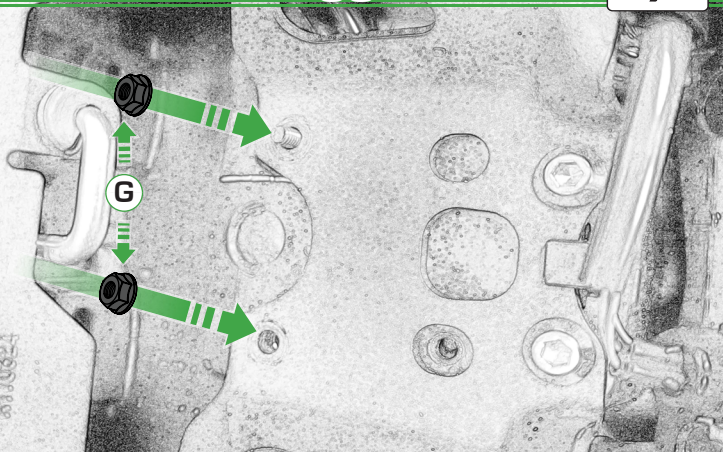

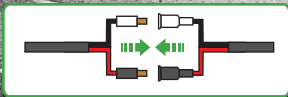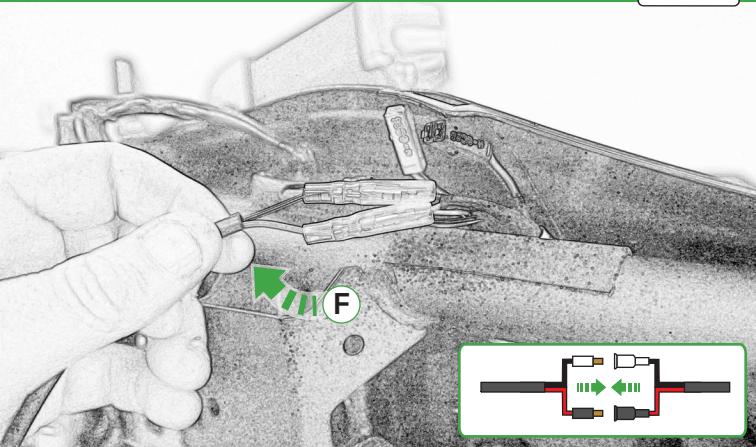

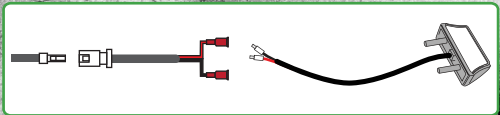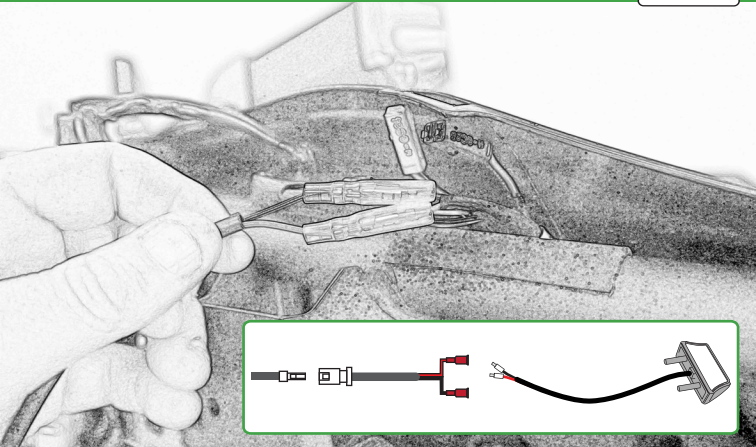

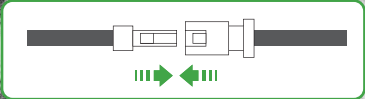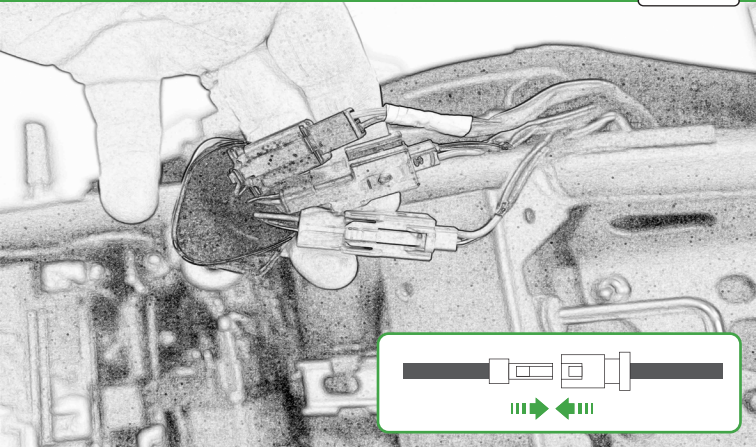



A large, light gray, stylized version of the EP logo is centered on the page, serving as a background for the text. It features a white diagonal slash through the 'P'.

Reverse Stages

A green icon consisting of two chevron-like shapes pointing to the left, positioned to the left of the text '8 - 1'.

8 - 1

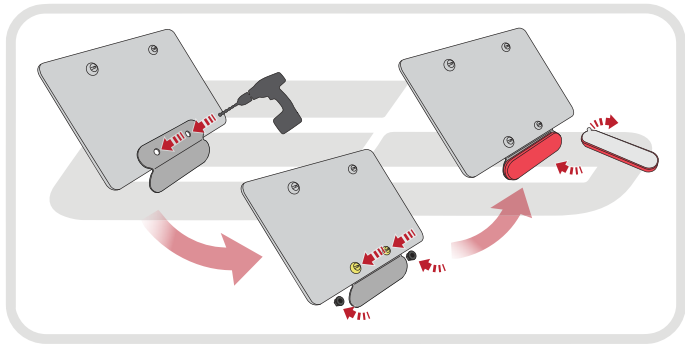

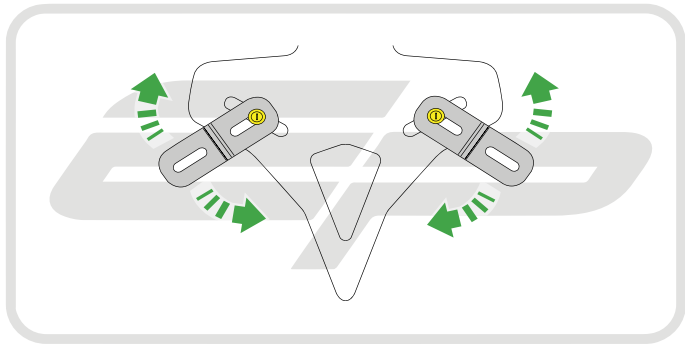



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com