



**EVOTECH**®  
P E R F O R M A N C E

**Installation Instructions**





## KTM 1290 SUPERDUKE GT FOOTREST BLANKING COVER


**Product Reference - 13256**


### **Kit Contents**

- (A)** 1 x Cover
- (B)** 4 x M8 - 16 Socket Button Screws
- (C)** 4 x M8 Plain Washers

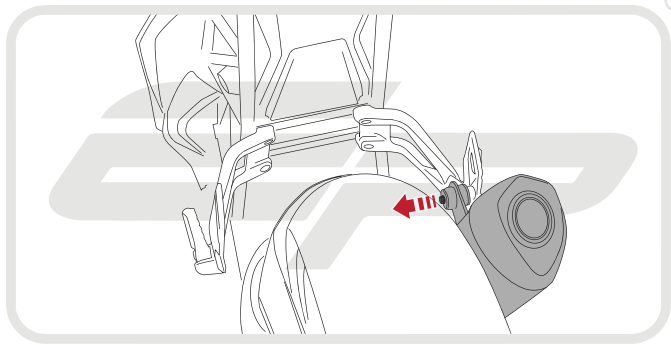


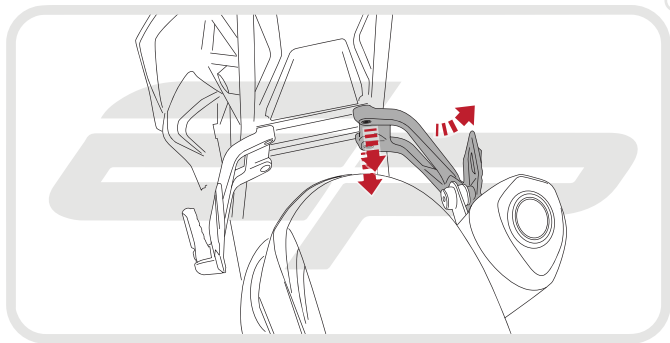


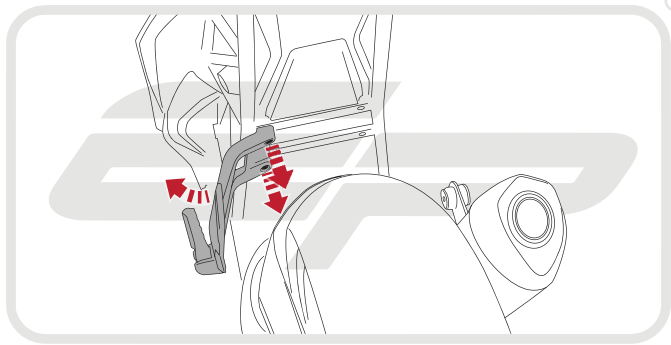

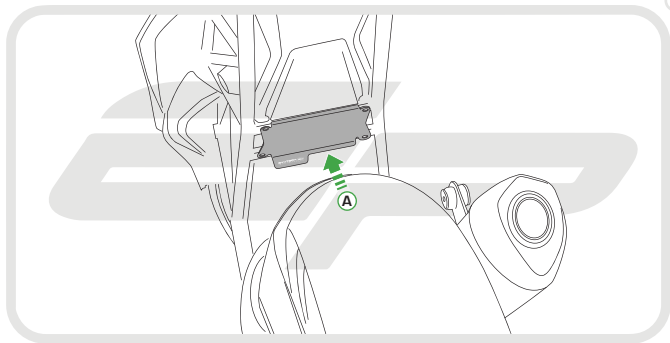

Only follow this stage if fitting an Exhaust System that does not require a hanger.  
If re-fitting with original pegs then skip this stage.

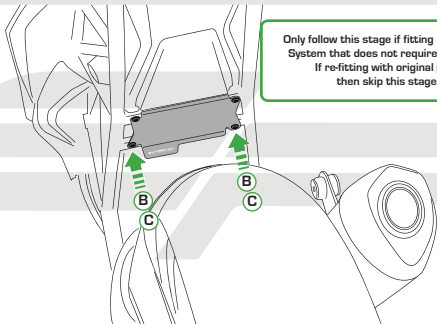

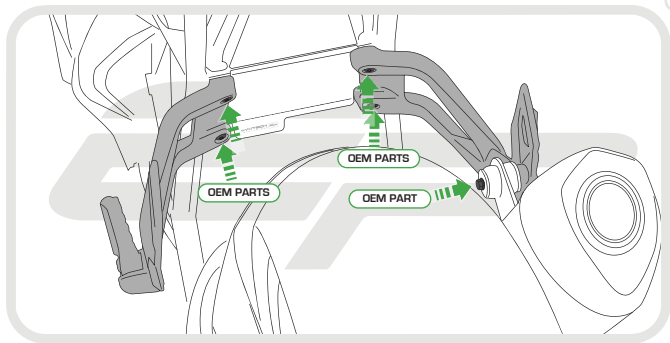





**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)