



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Generic Bar Clamp


Ultimate Addons Sat Nav Mount Instruction




Kit Contents

- Ⓐ 1 x Pivot Plate
- Ⓑ 1 x Left Hand Arm
- Ⓒ 1 x Right Hand Arm
- Ⓓ 1 x Ultimate Addons Plate
- Ⓔ 2 x Lobe Screw
- Ⓕ 2 x M5 x 8mm Black Button Head Bolt
- Ⓖ 2 x Spacer
- Ⓗ 2 x M5 x 12 Caphead Bolt
- Ⓘ 2 x M8 Caphead Bolt

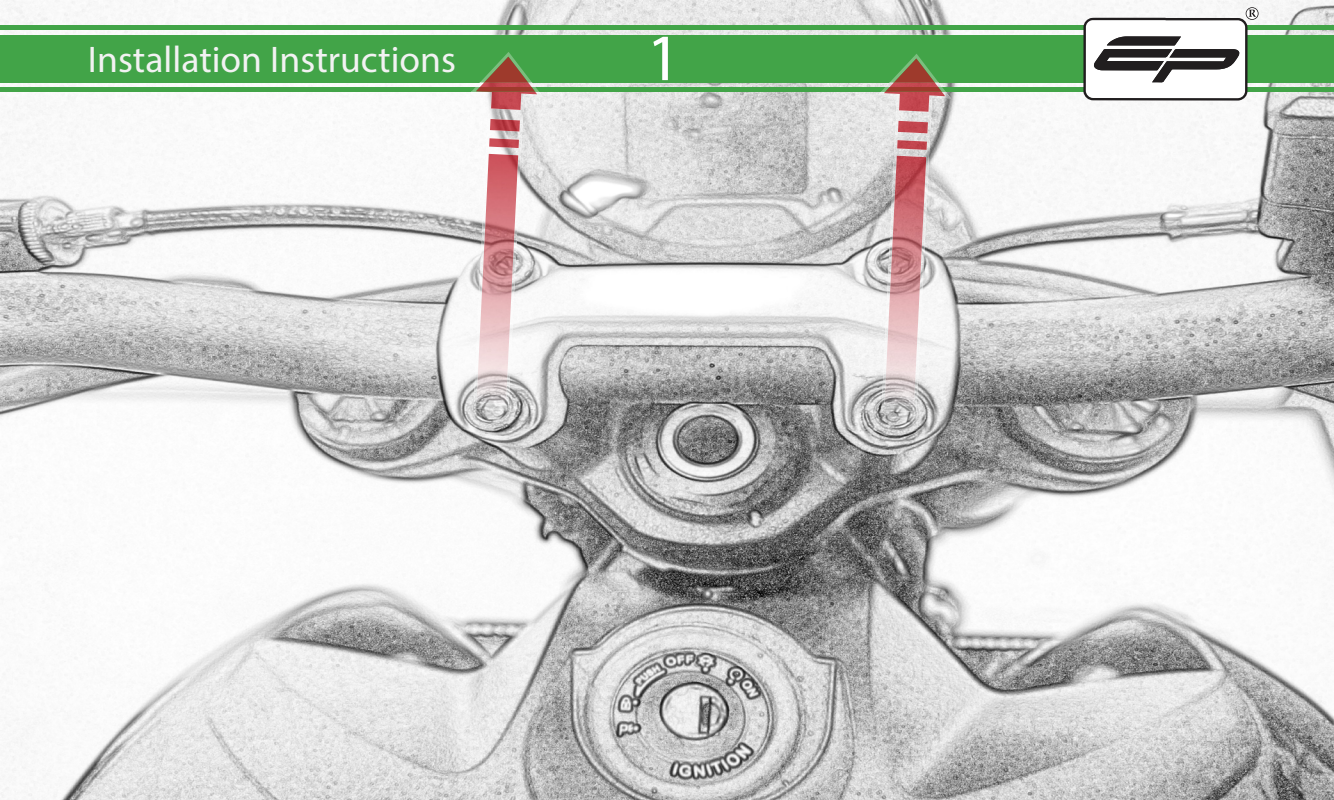


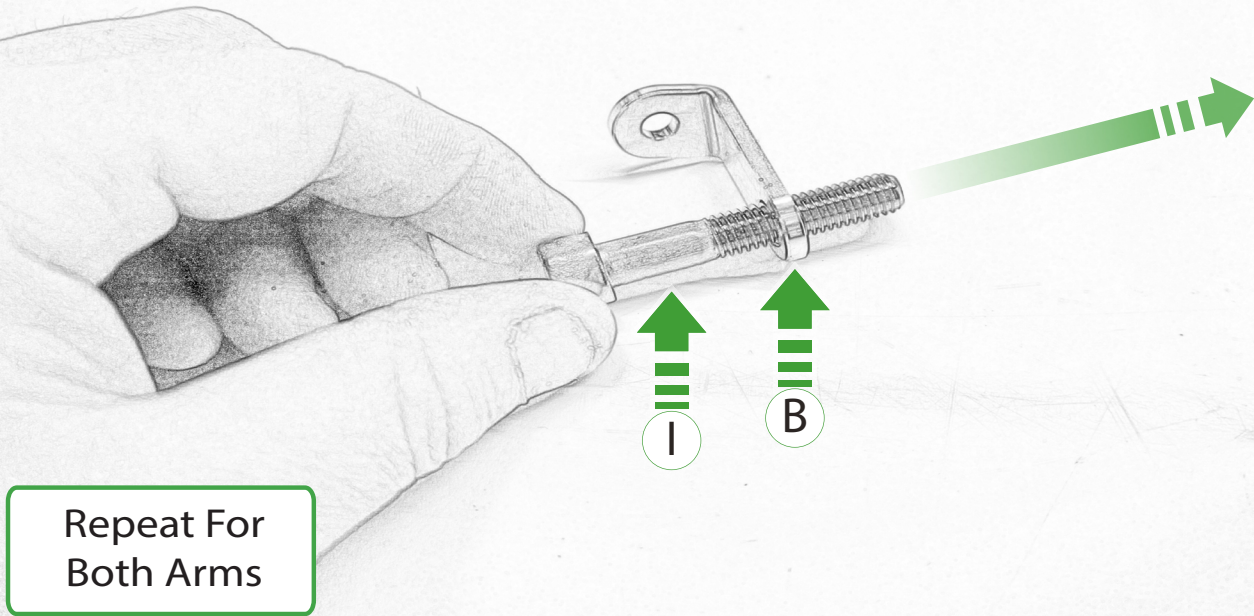



Repeat For
Both Arms

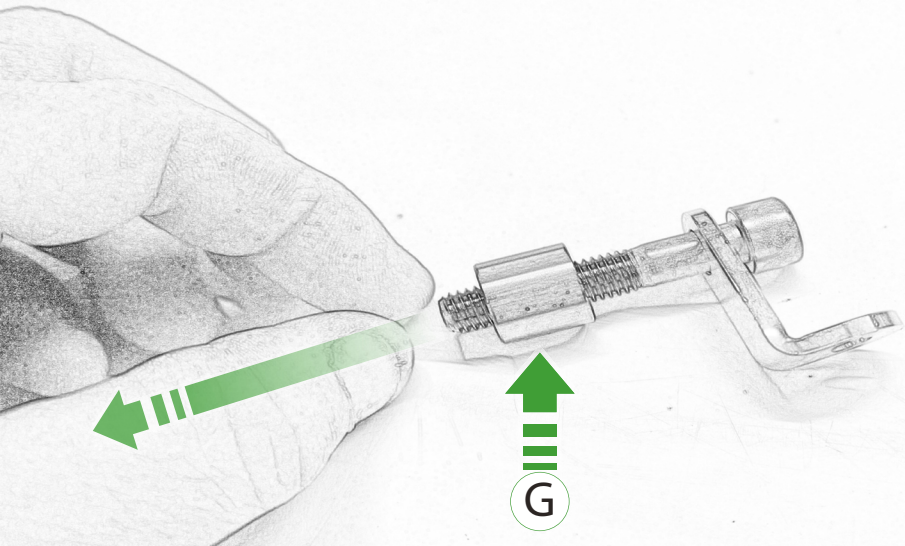

Repeat For
Both Arms

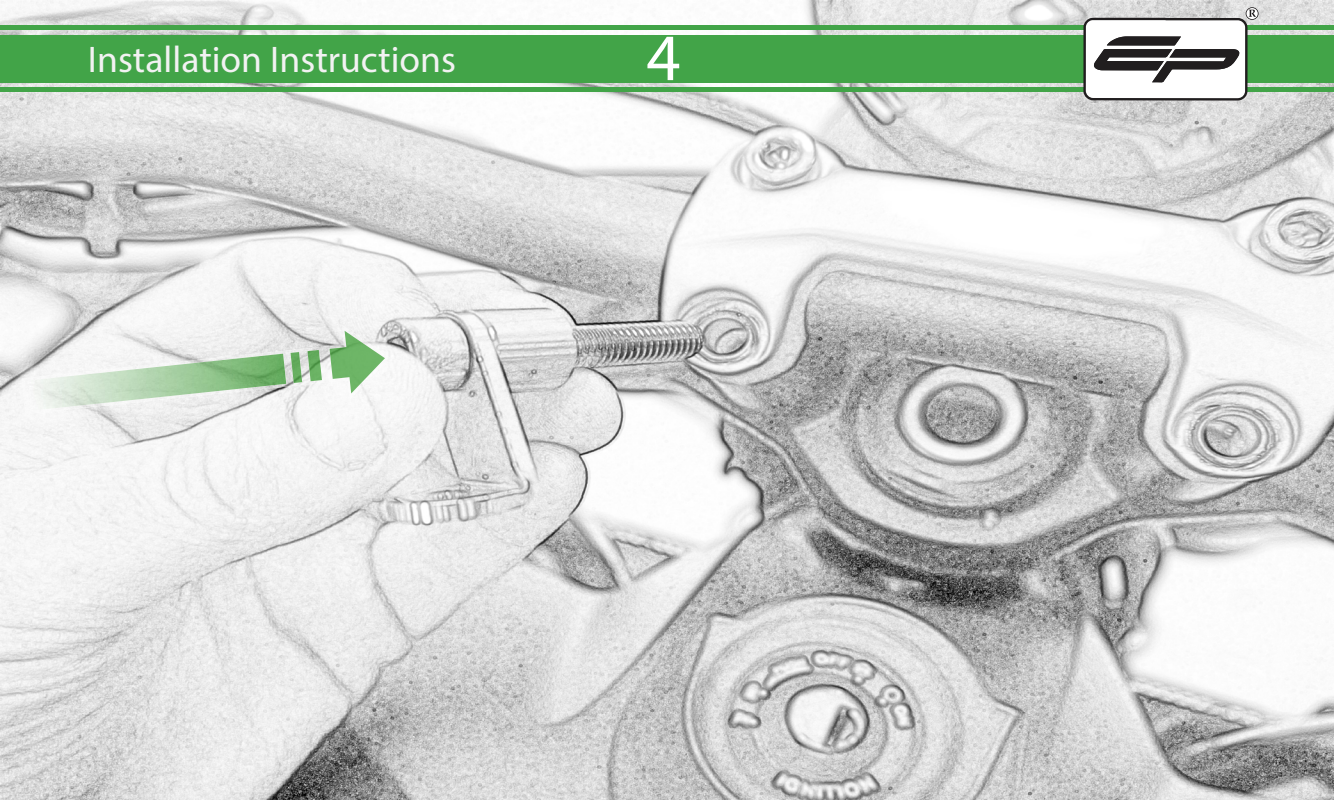


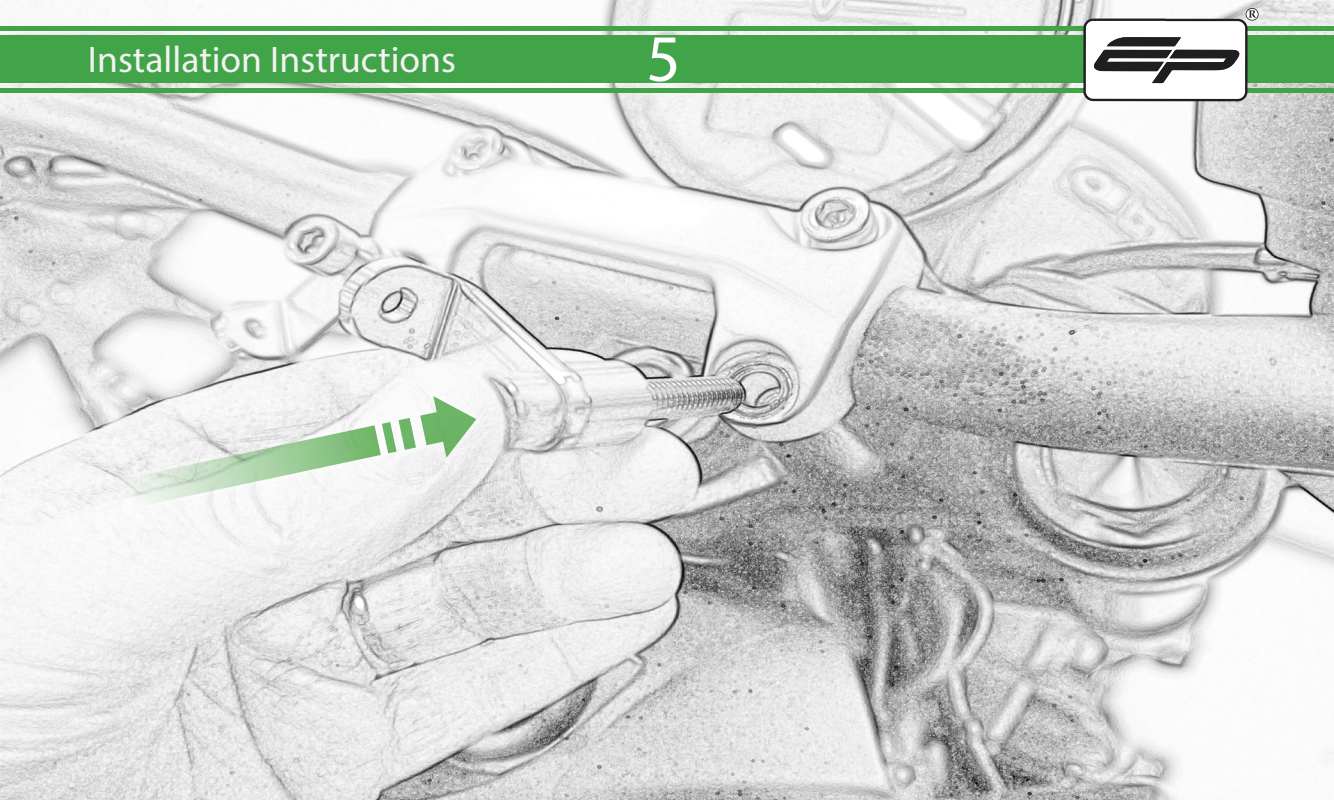


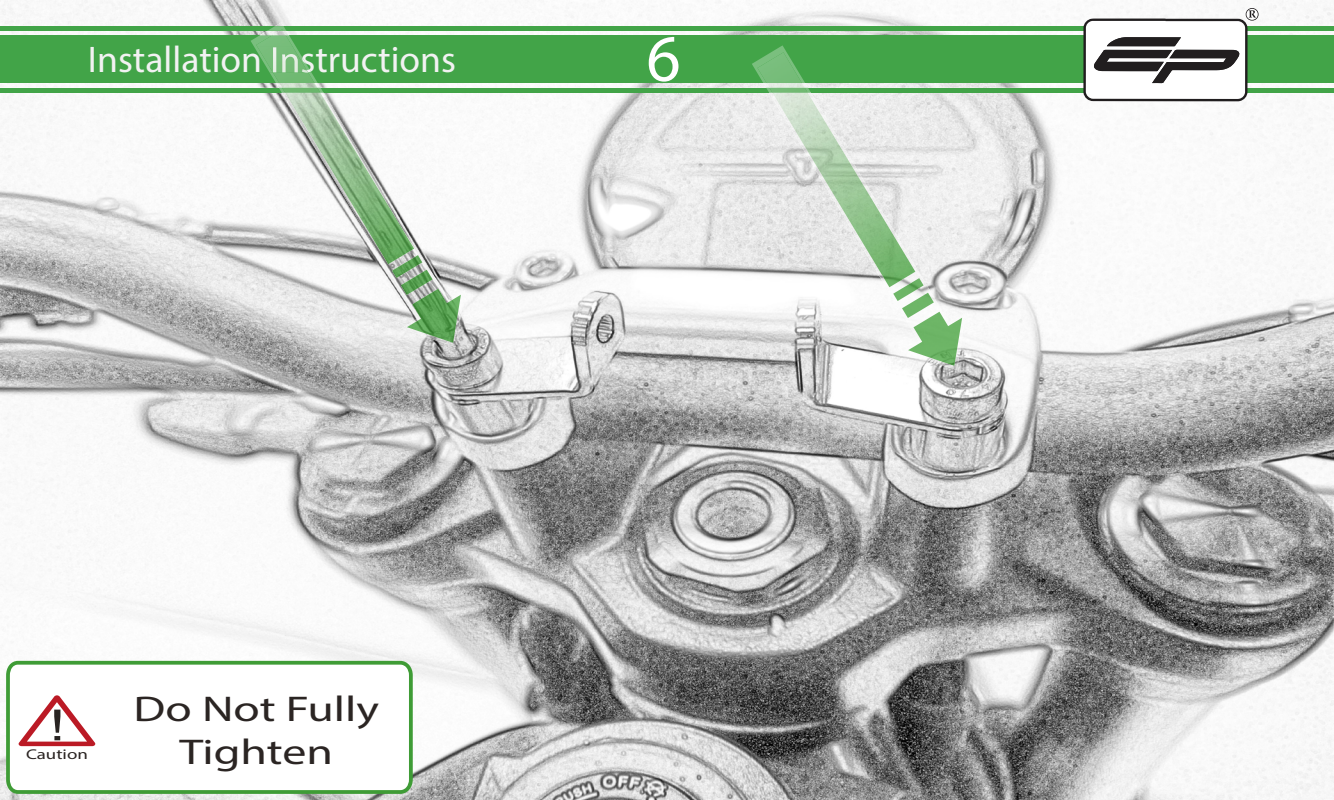


Caution

Do Not Fully Tighten

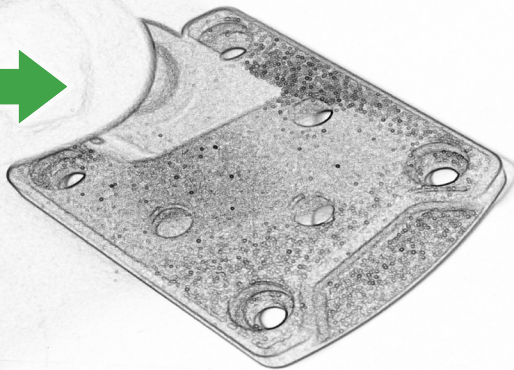


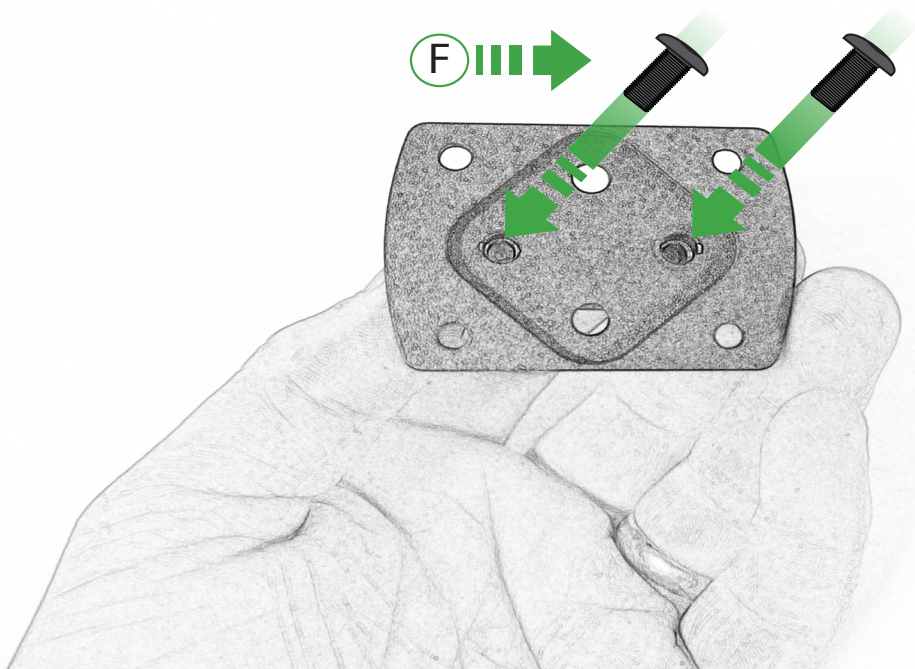


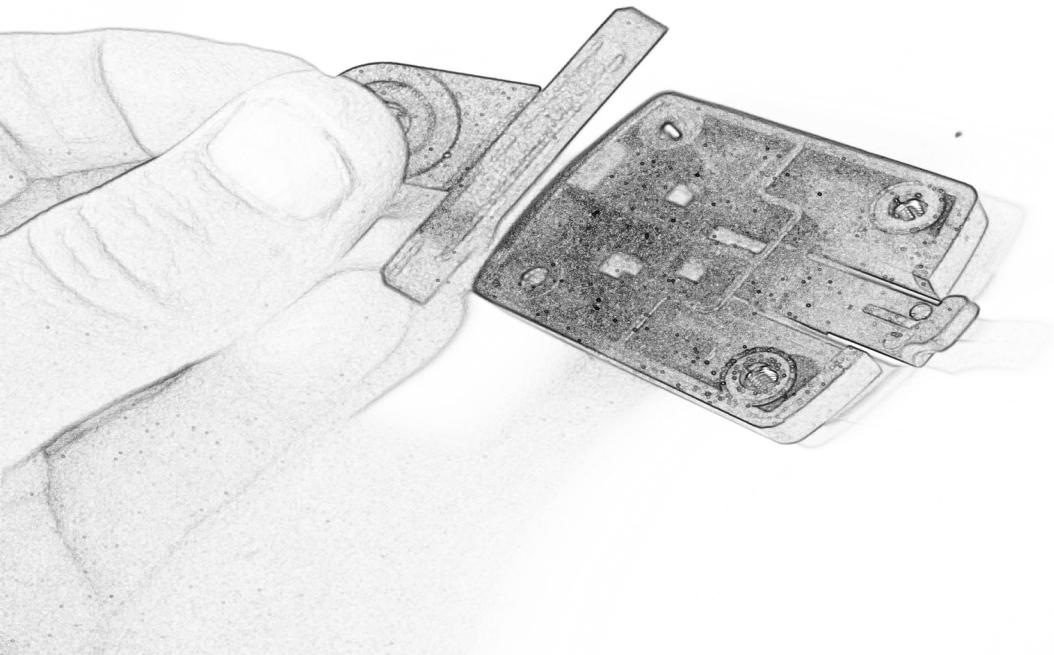





OEM PART

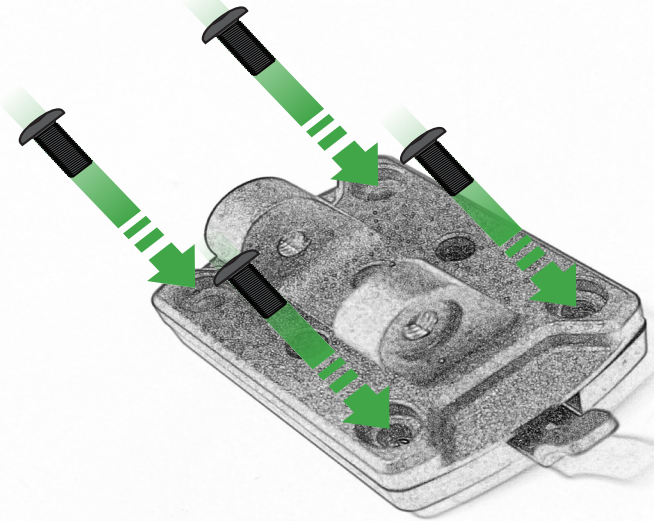


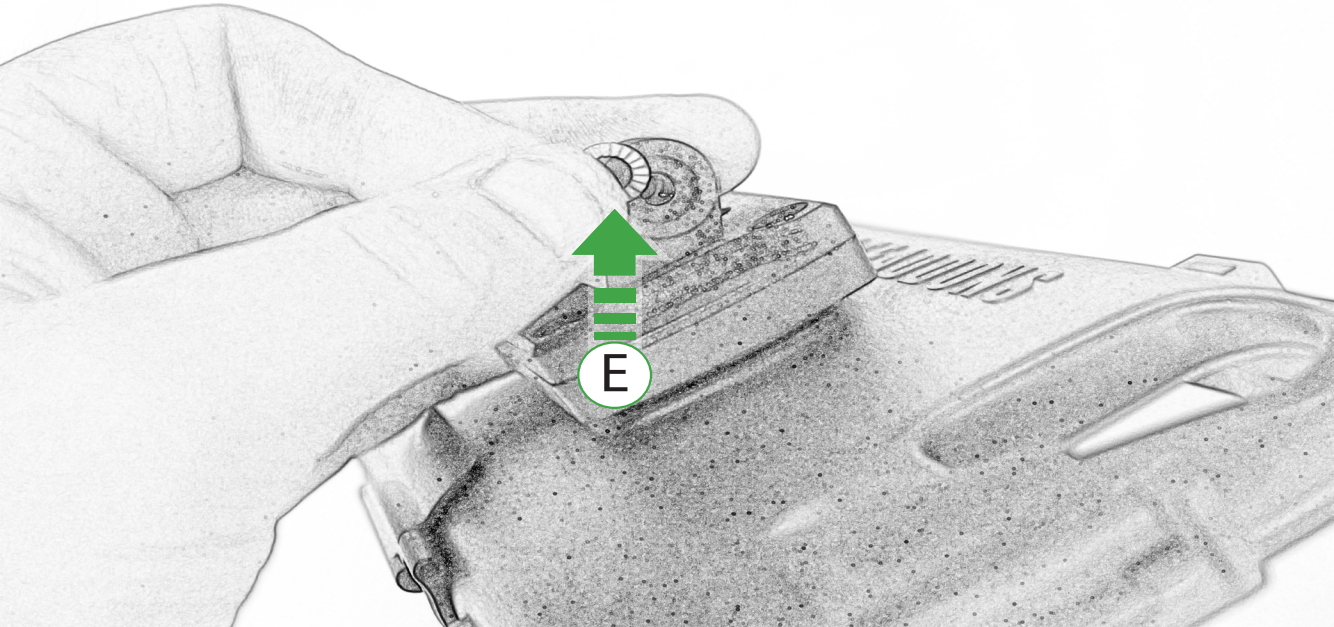


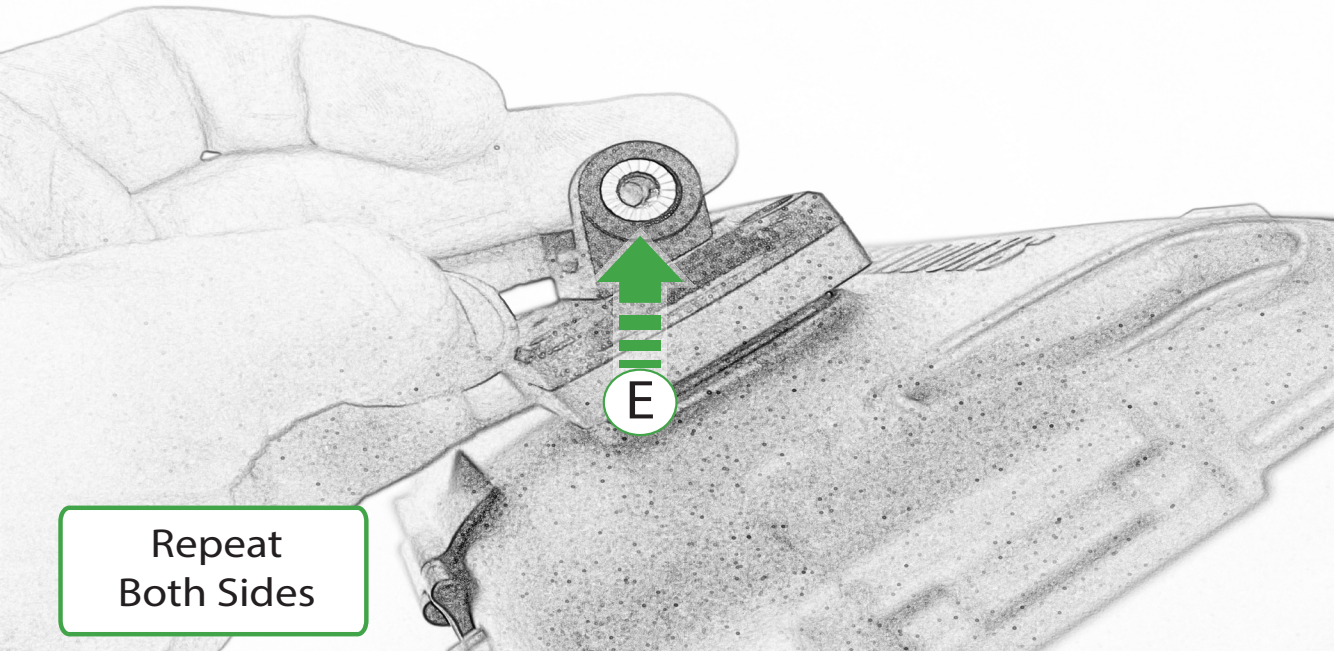

Repeat
Both Sides

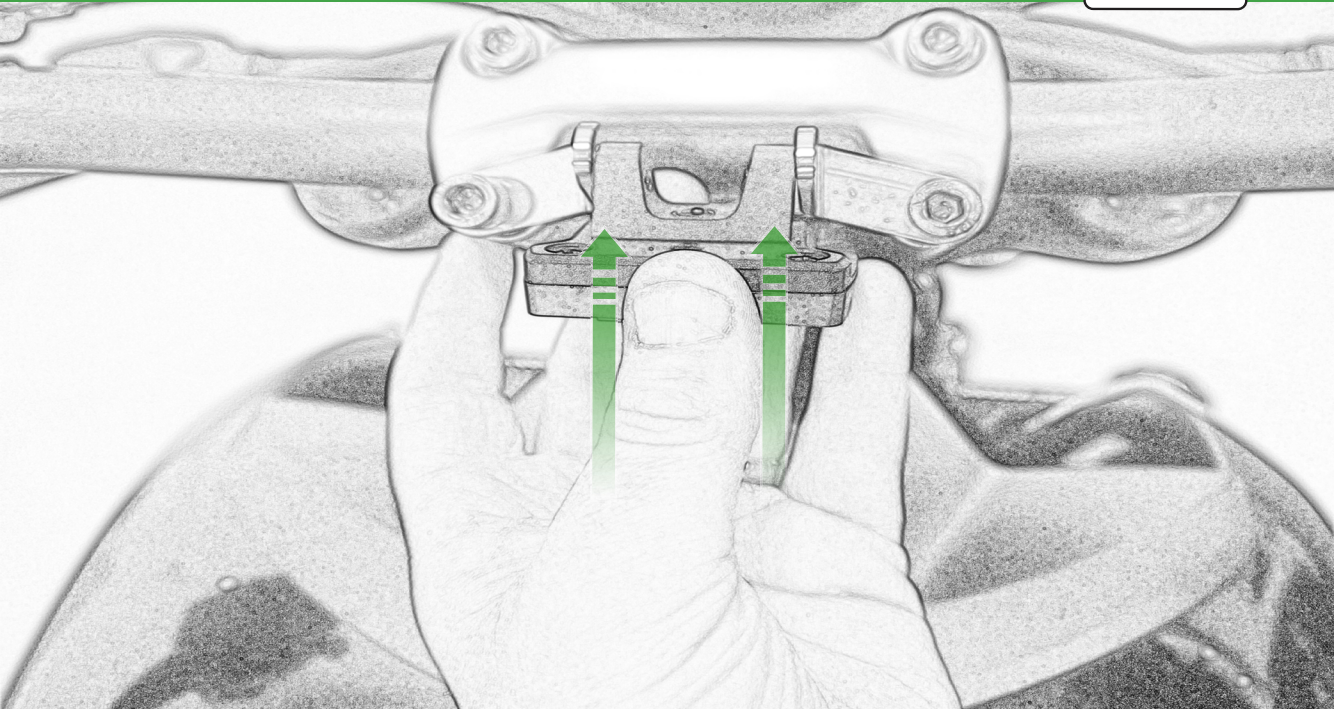

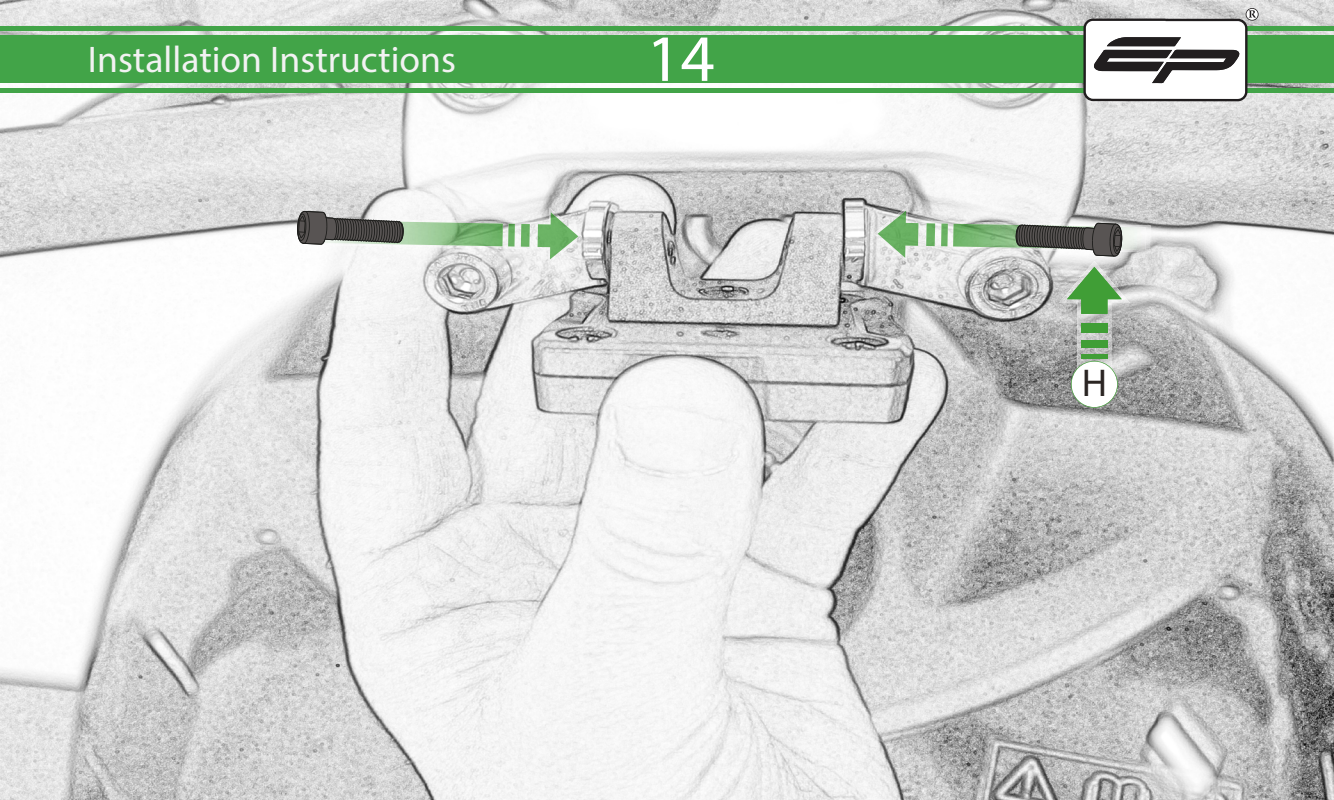

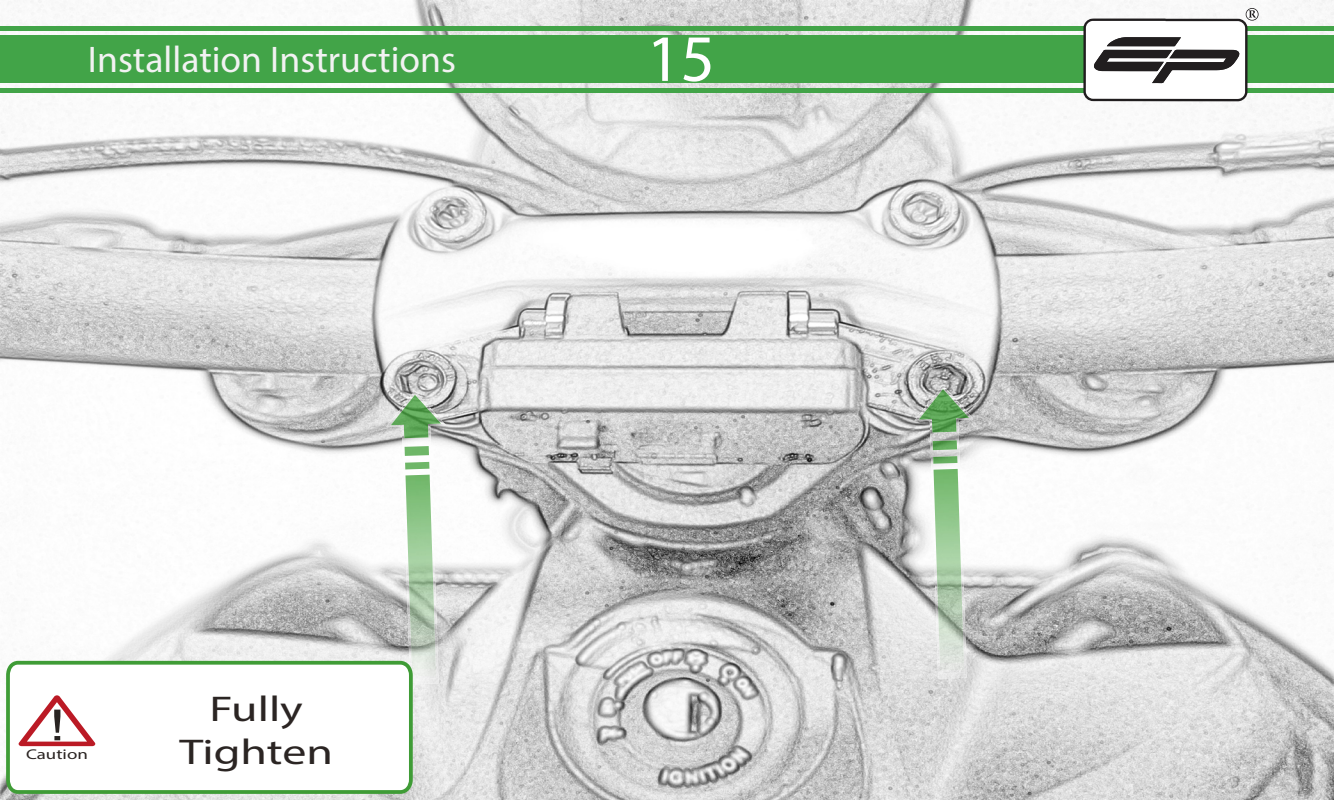

Caution


Fully
Tighten



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

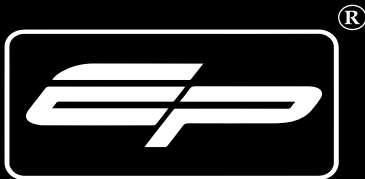

EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com