

www.evotech-performance.com
EP Action / Safety Camera Front
Mudguard Mount

## **Installation Instructions**



## Kit Contents


- A 1 x Thumbscrew
- B 1 x Camera Bracket
- © 1 x M5 Nyloc
- ① 1 x M5 Washer
- © 1 x M5 x 30mm Caphead
- F 1 x O-Ring
- © 1 x Thumb Screw Spacer
- H) 2 x M5 x 12mm Button Head
- 1 2 x M5 Dome Nut
- ① 2 x Support Brackets
- K 2 x Spacer
- L 2 x M6 Bolt












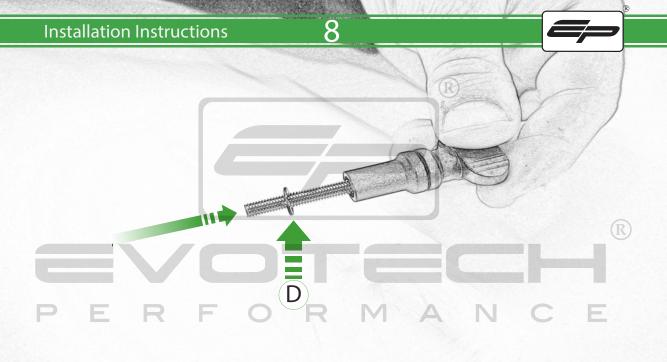


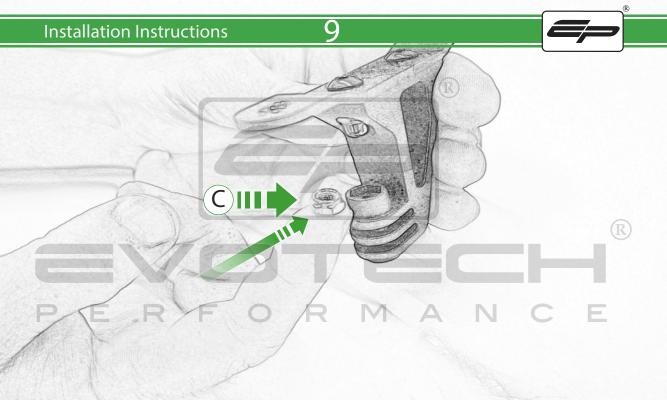

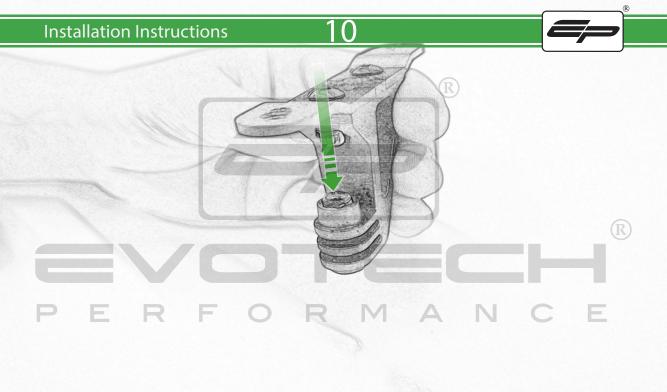

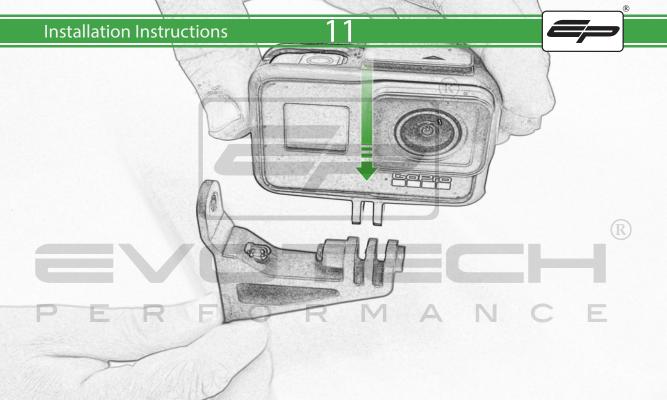




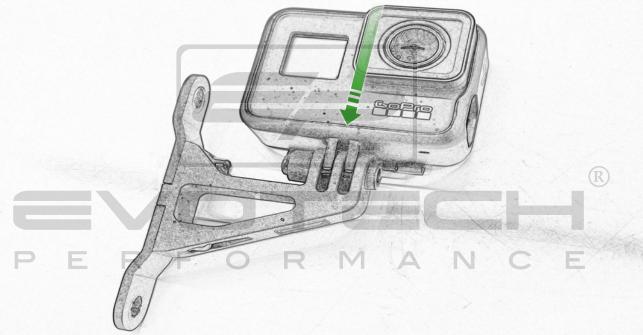








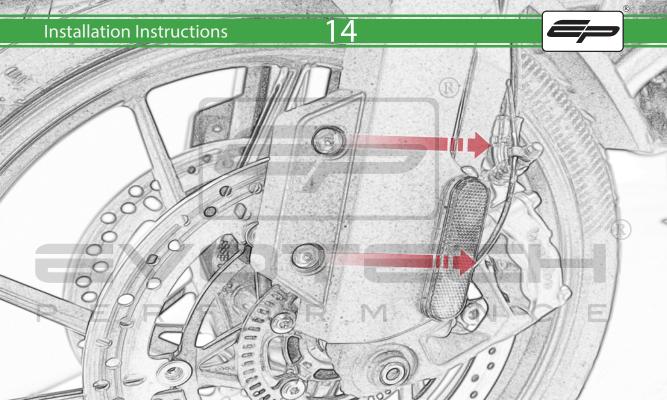





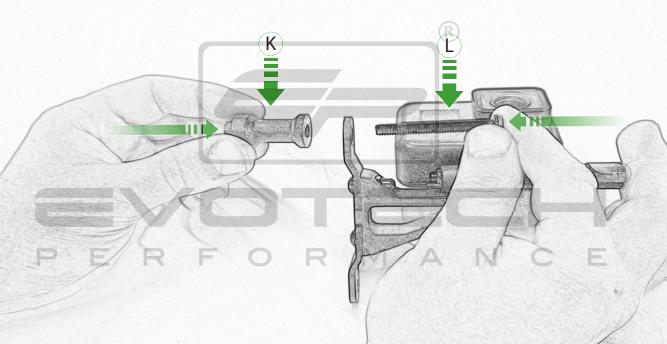

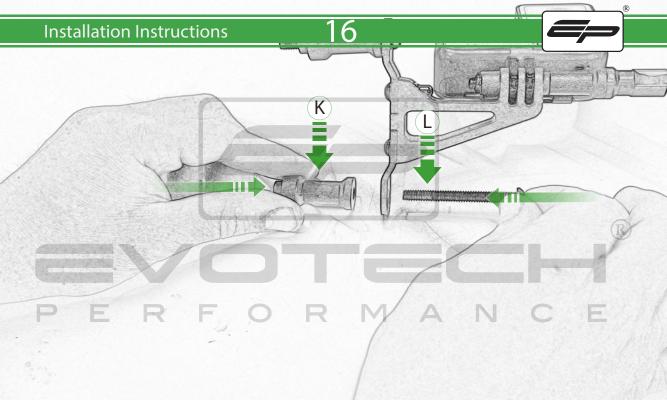

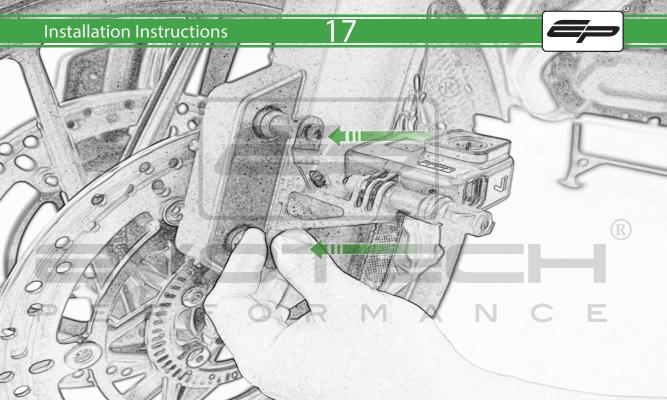

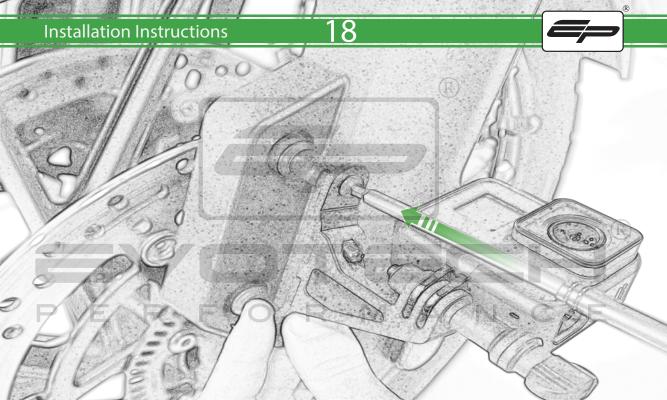

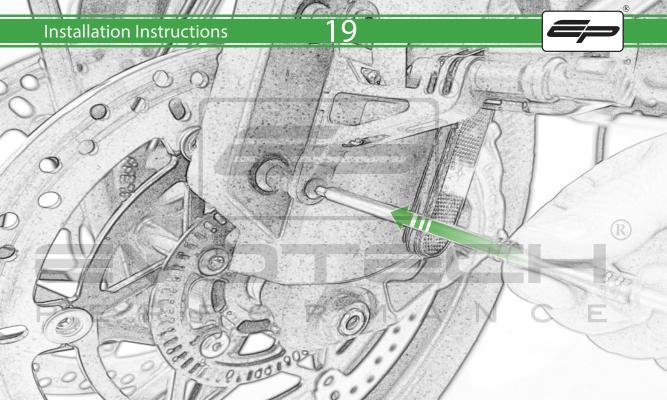





## ESSENTIAL CHECKS 1



It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



www.evotech-performance.com