

EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com

Suzuki V-Strom 650/ 650XT
Hand Guard Instructions





Kit Contents PRN015175


- (A) 1 x R/H Mirror Bracket
- (B) 1 x L/H Mirror Bracket
- (C) 1 x R/H Hand Guard Assembly
- (D) 1 x L/H Hand Guard Assembly
- (E) 4 x M5 x 16 Black Button Head Bolts
- (F) 4 x M5 Black Washers





1

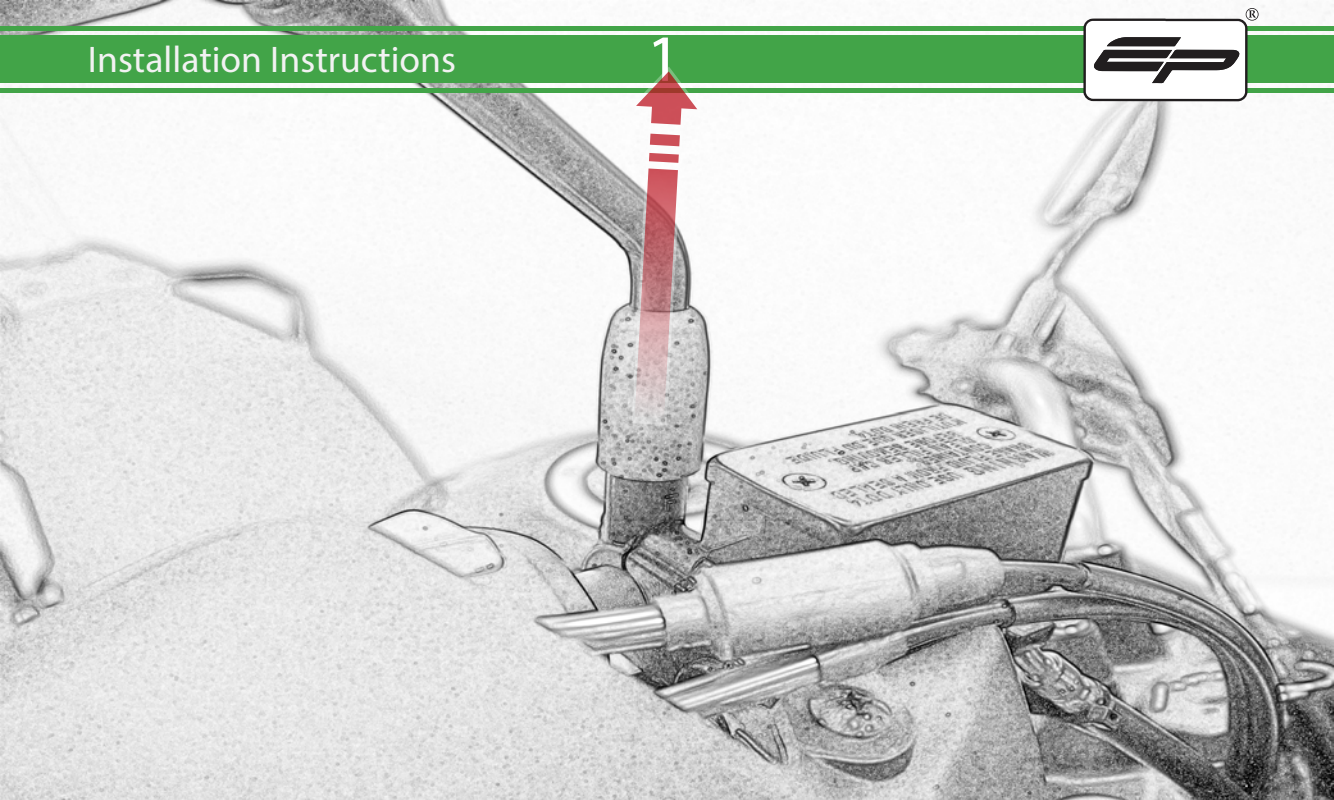


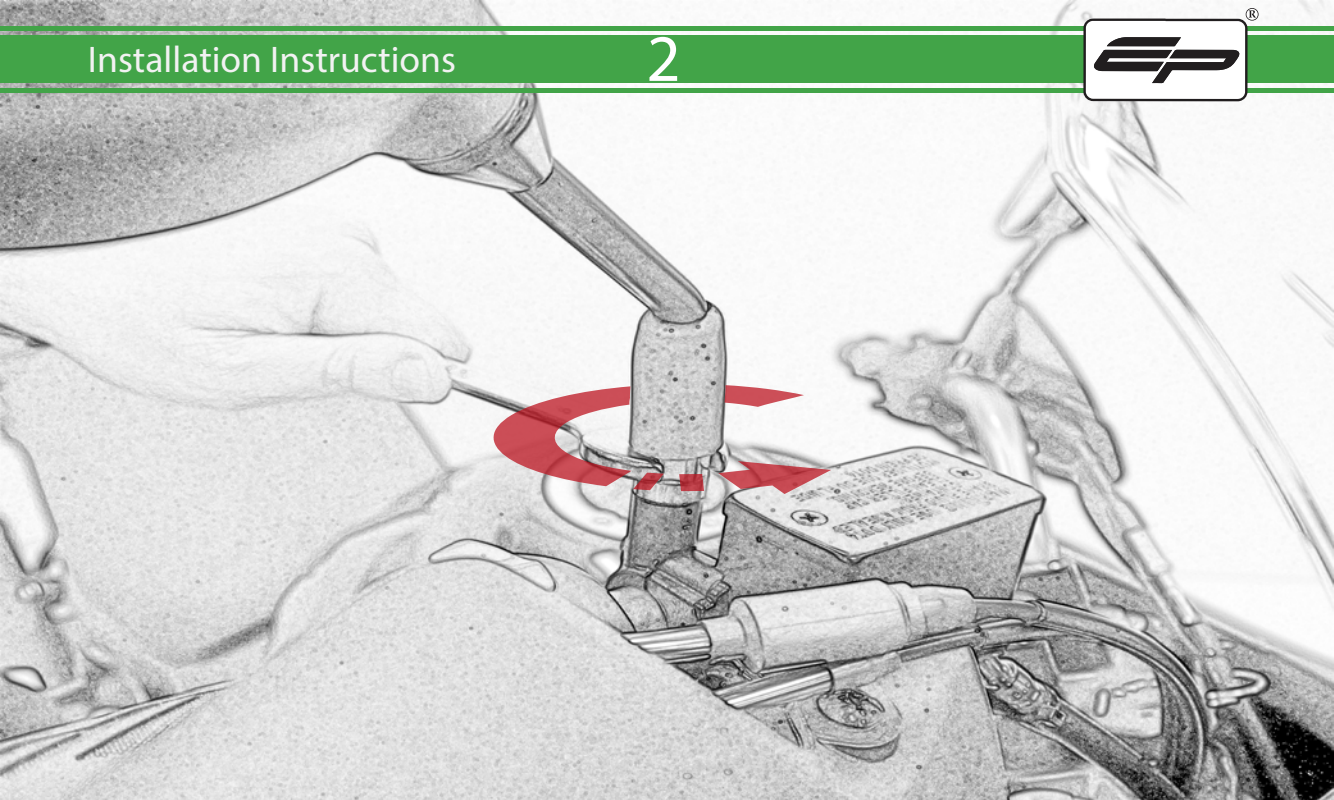


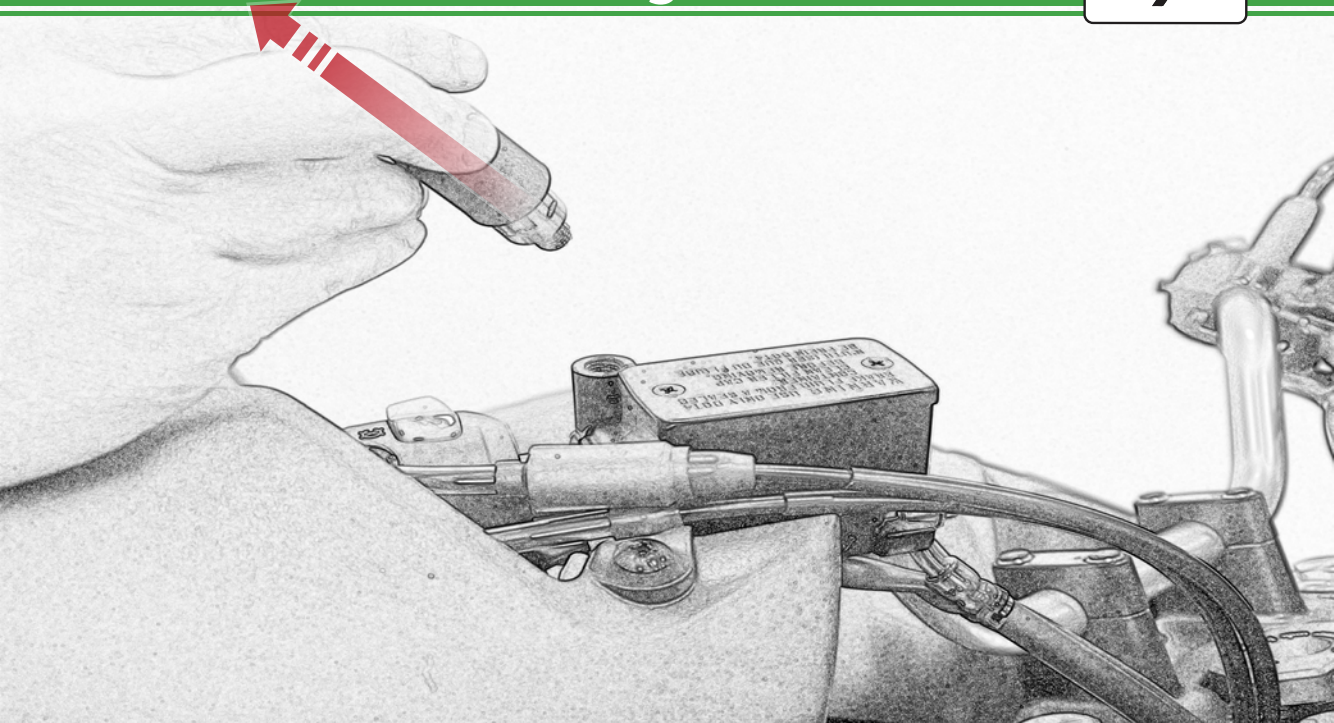


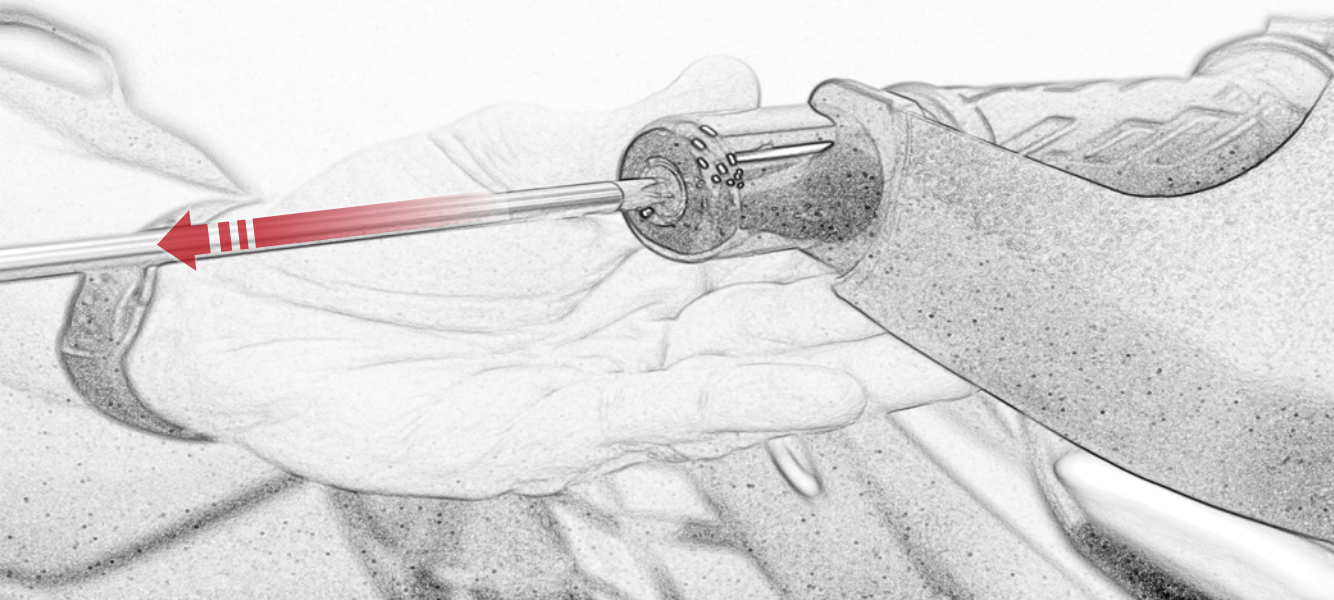


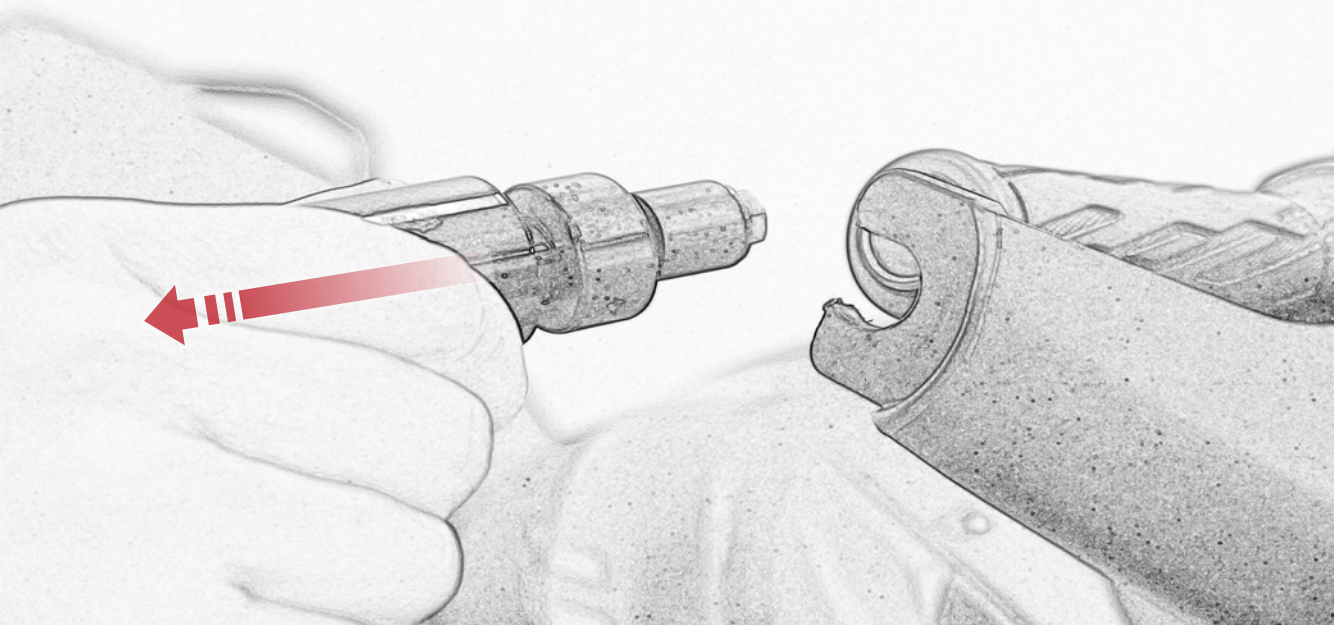


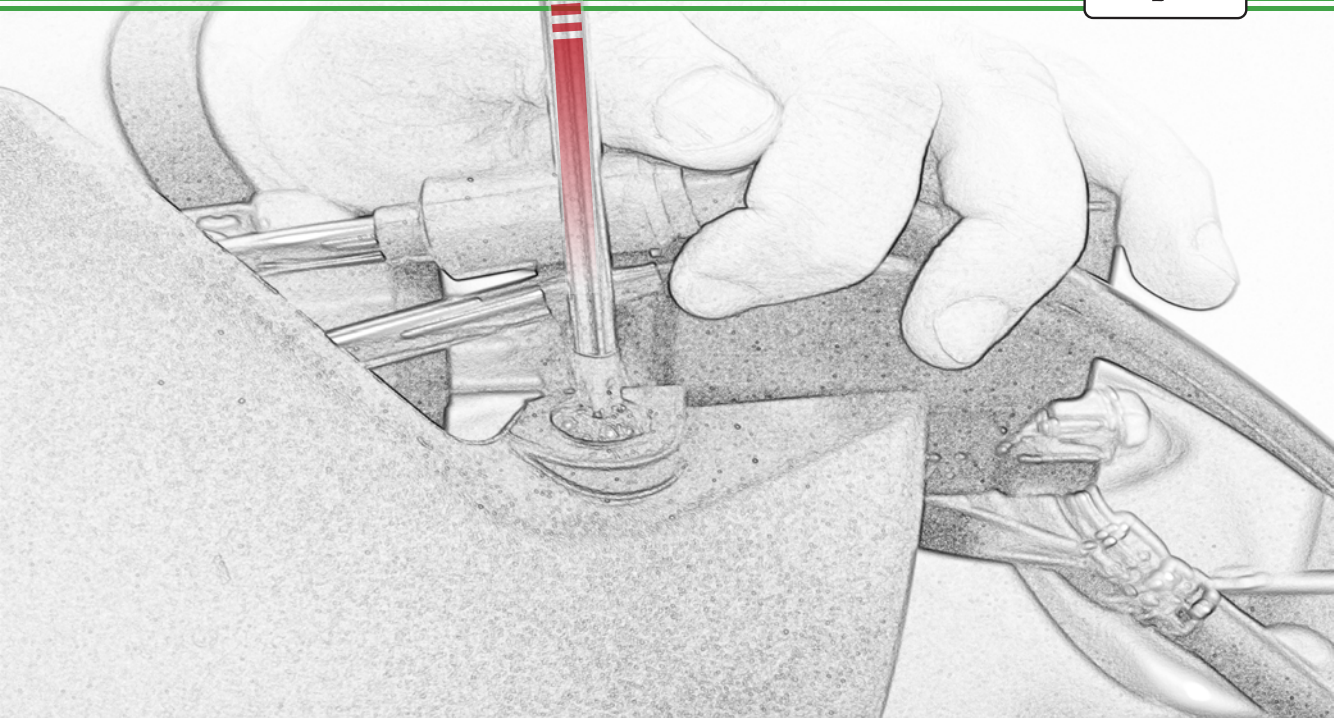

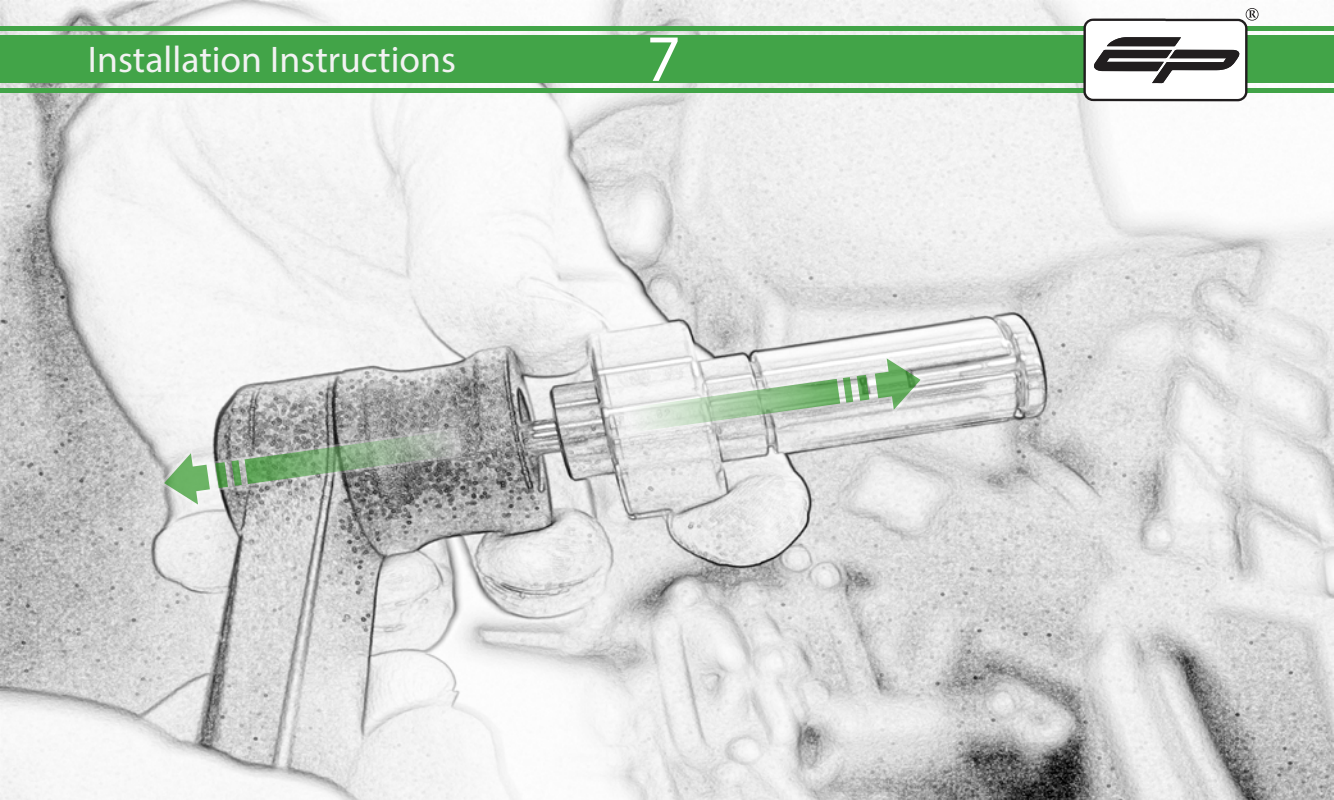


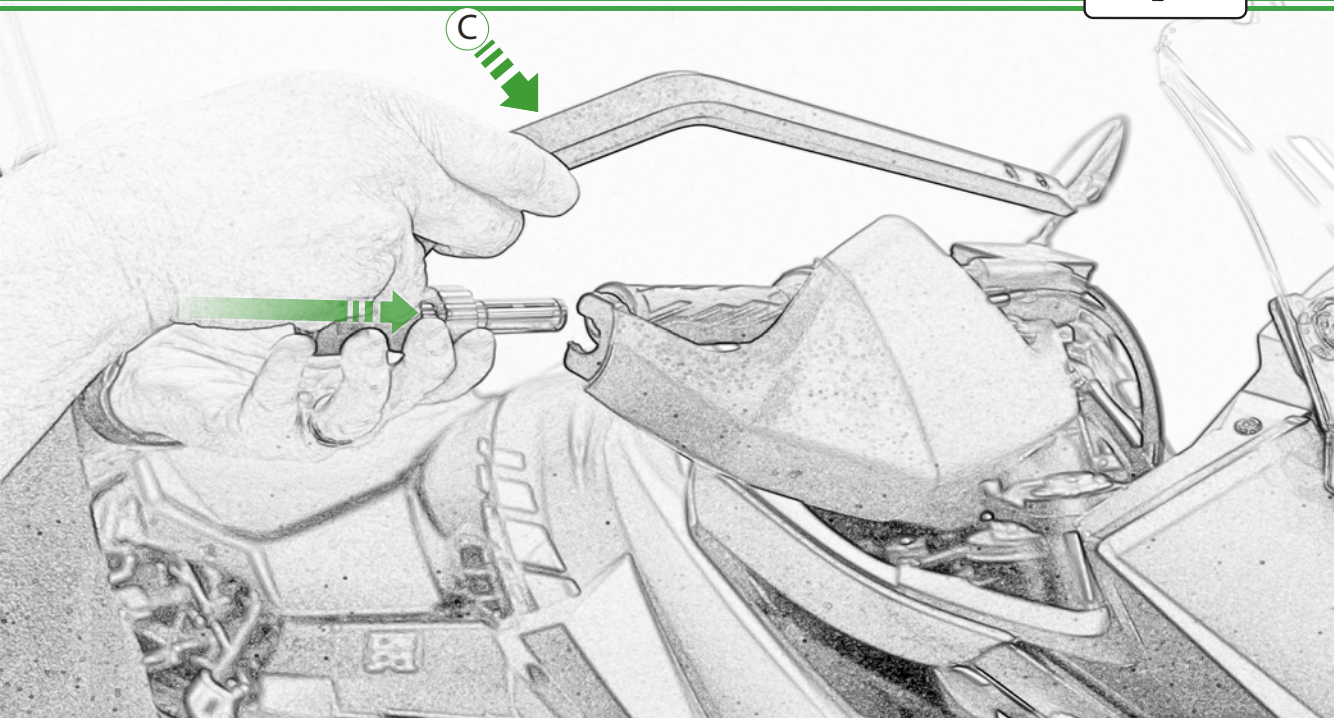


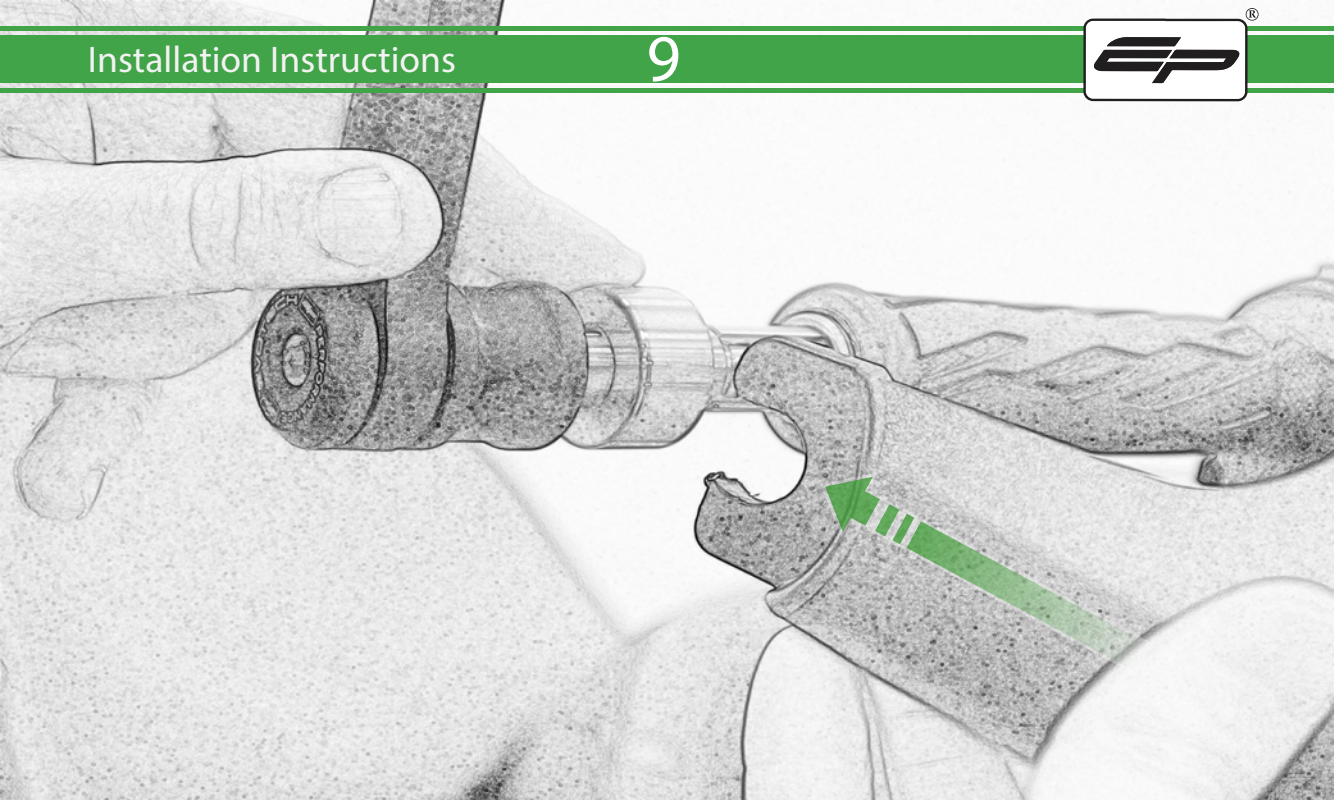

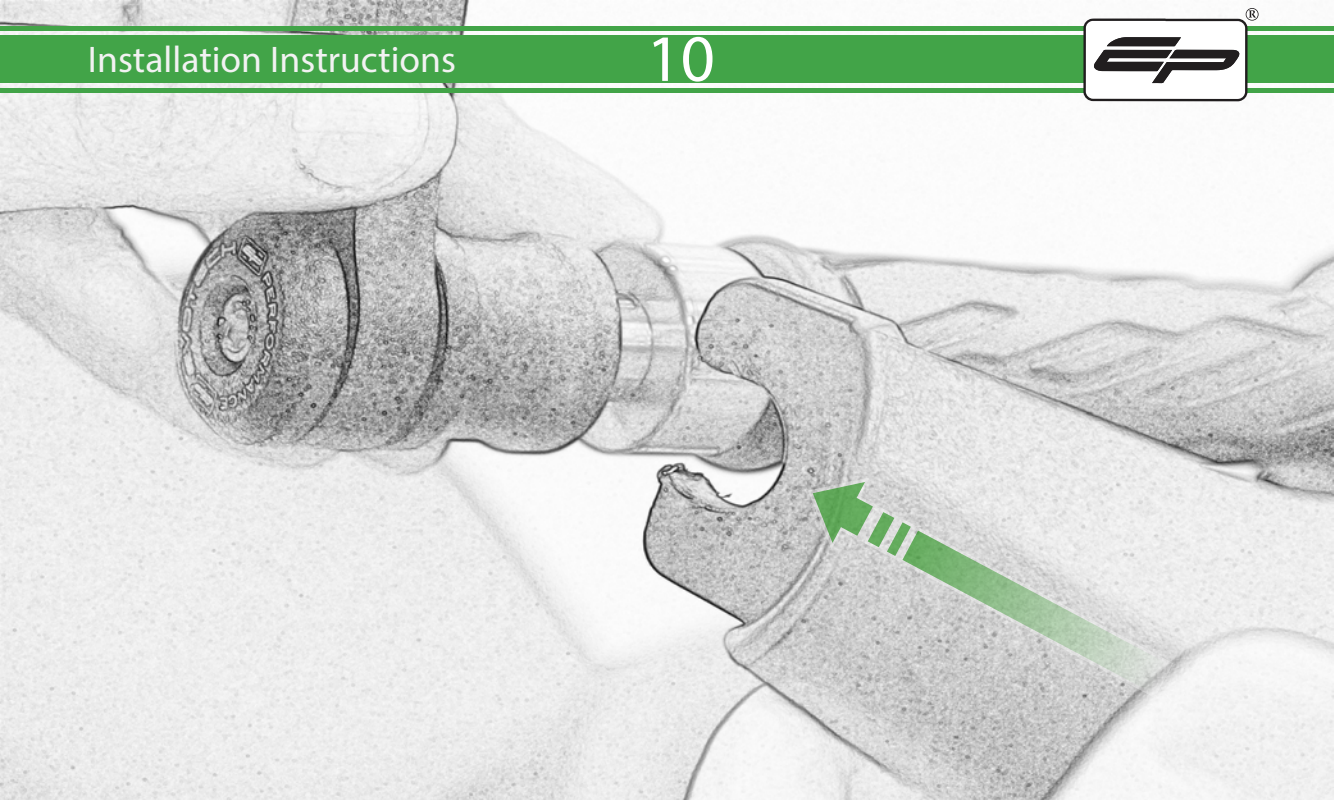





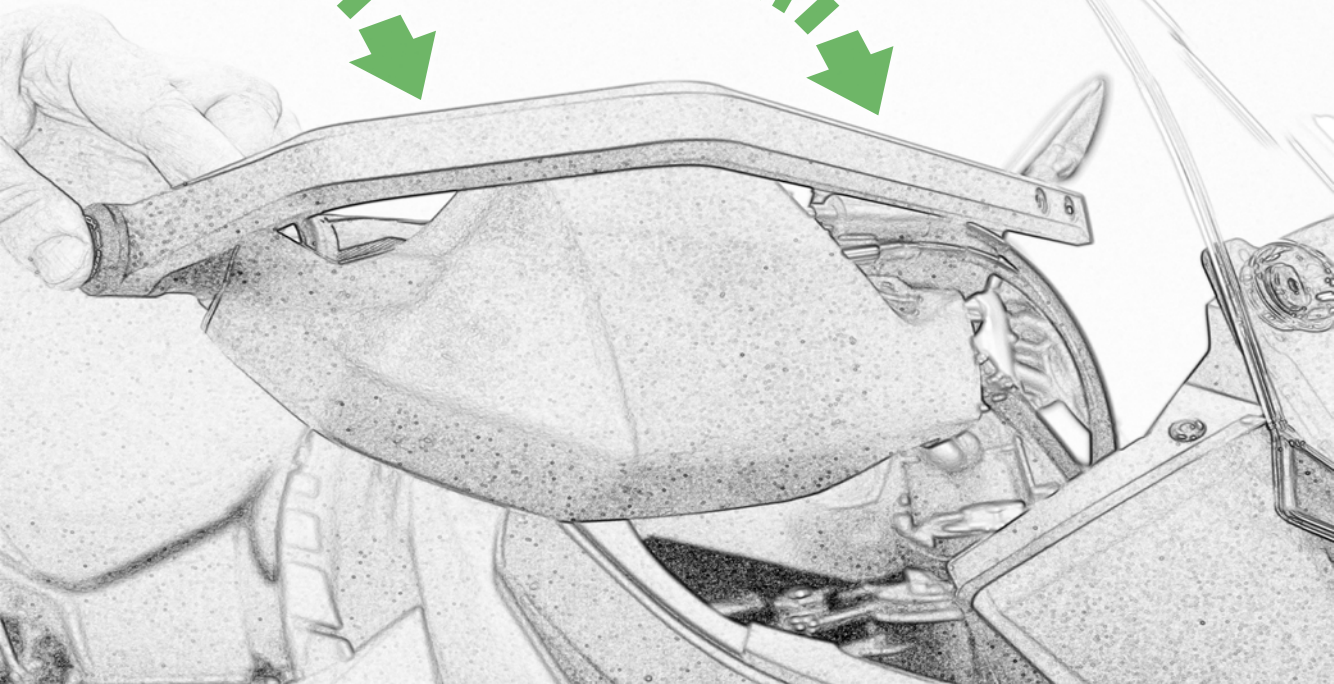


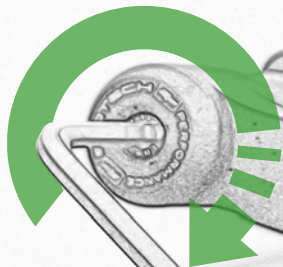


Do Not Fully Tighten

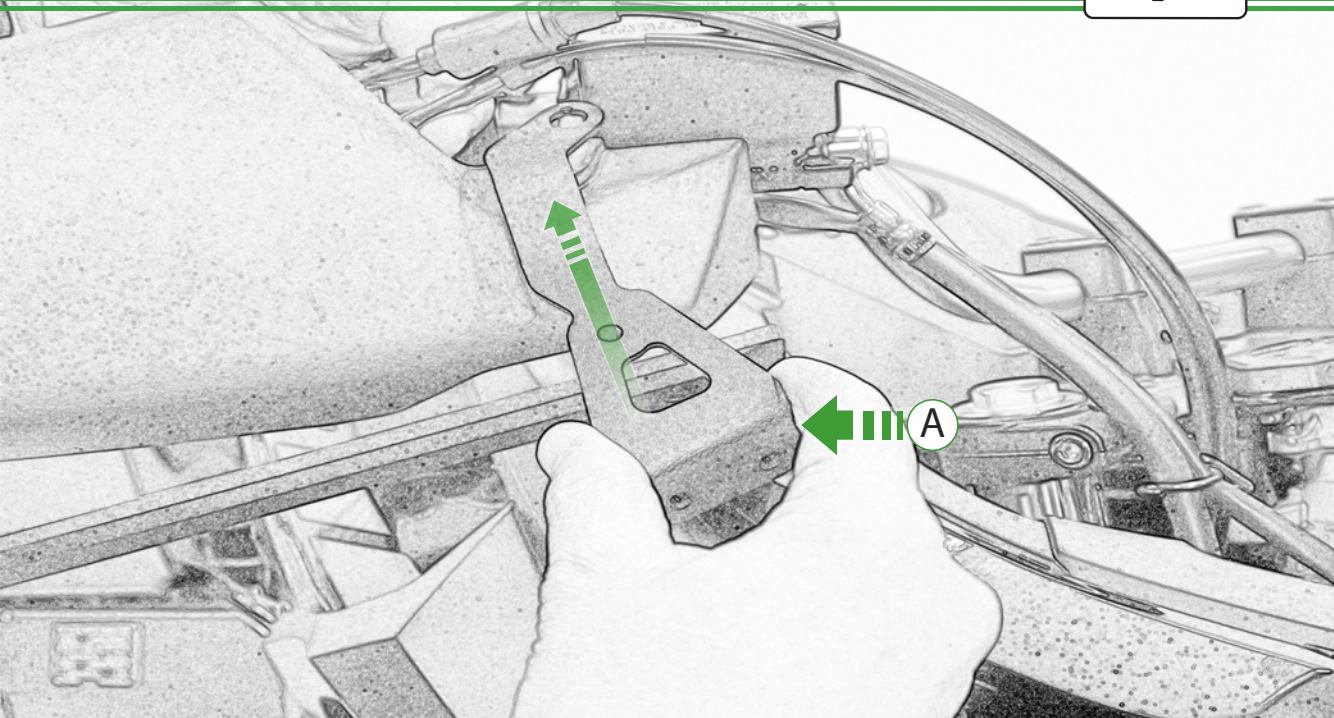

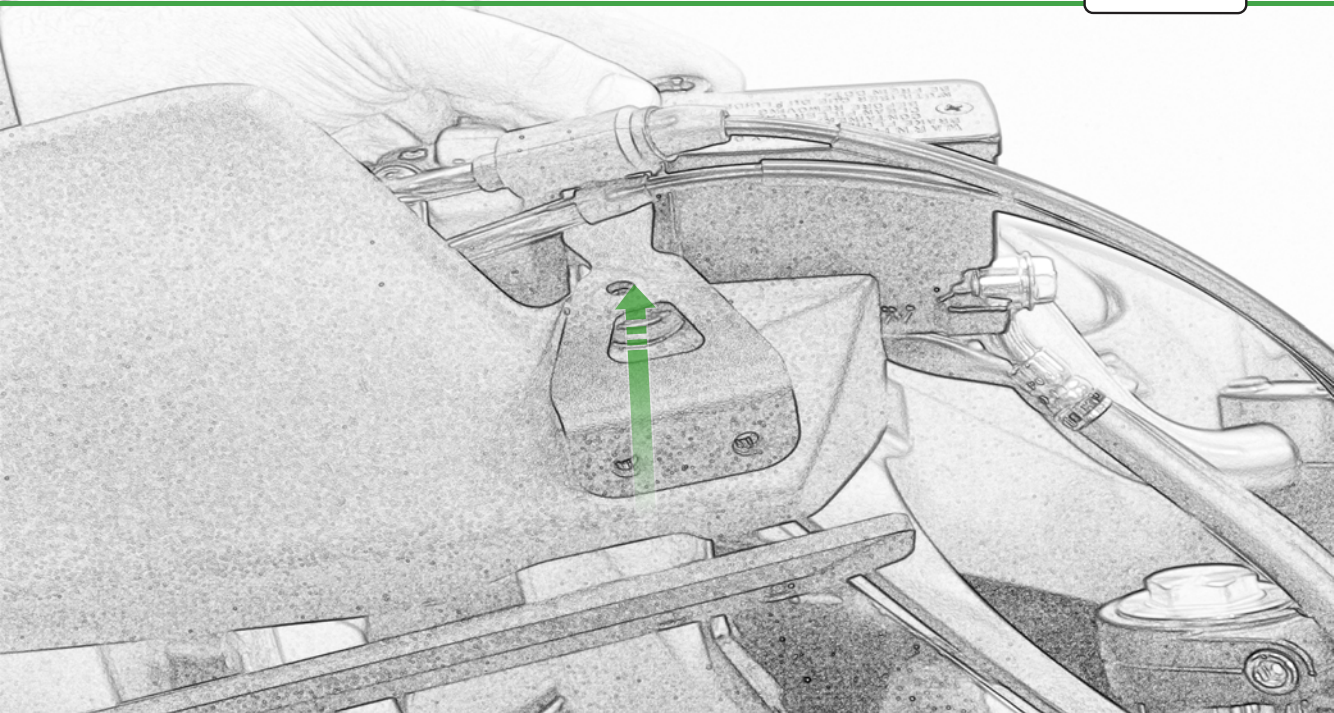

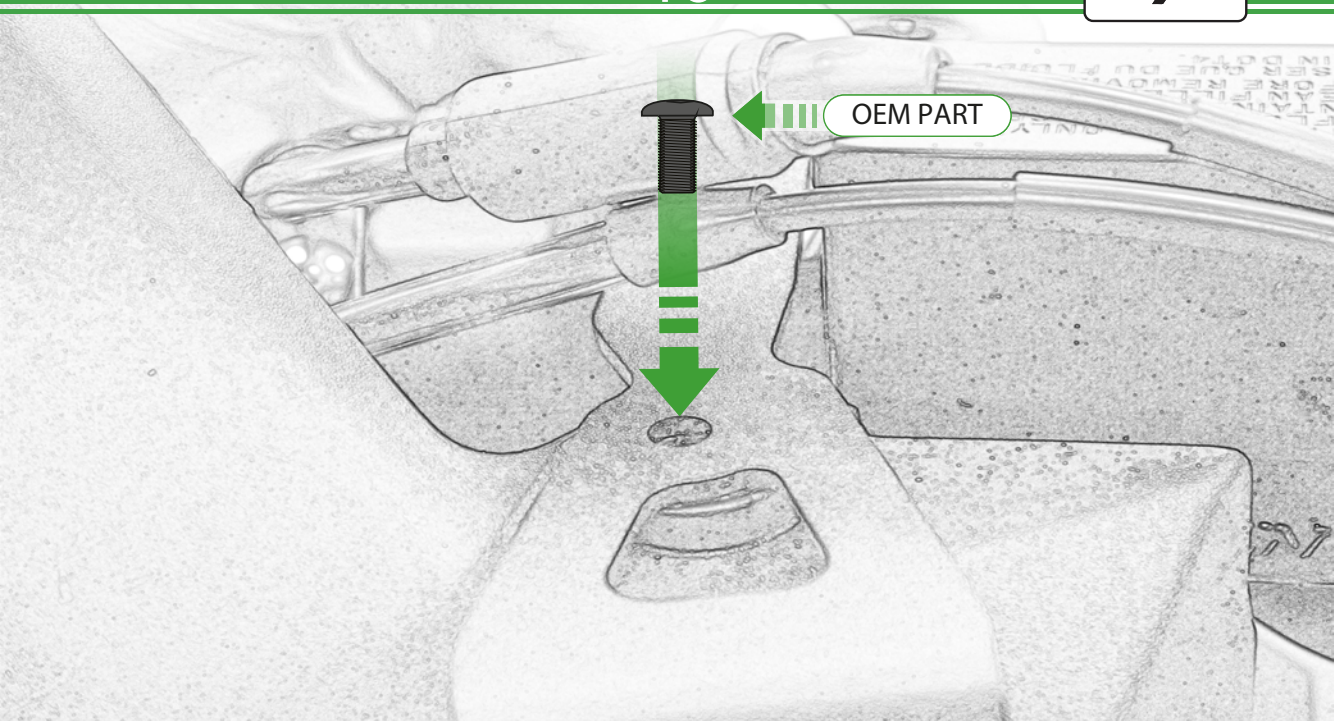



OEM PART

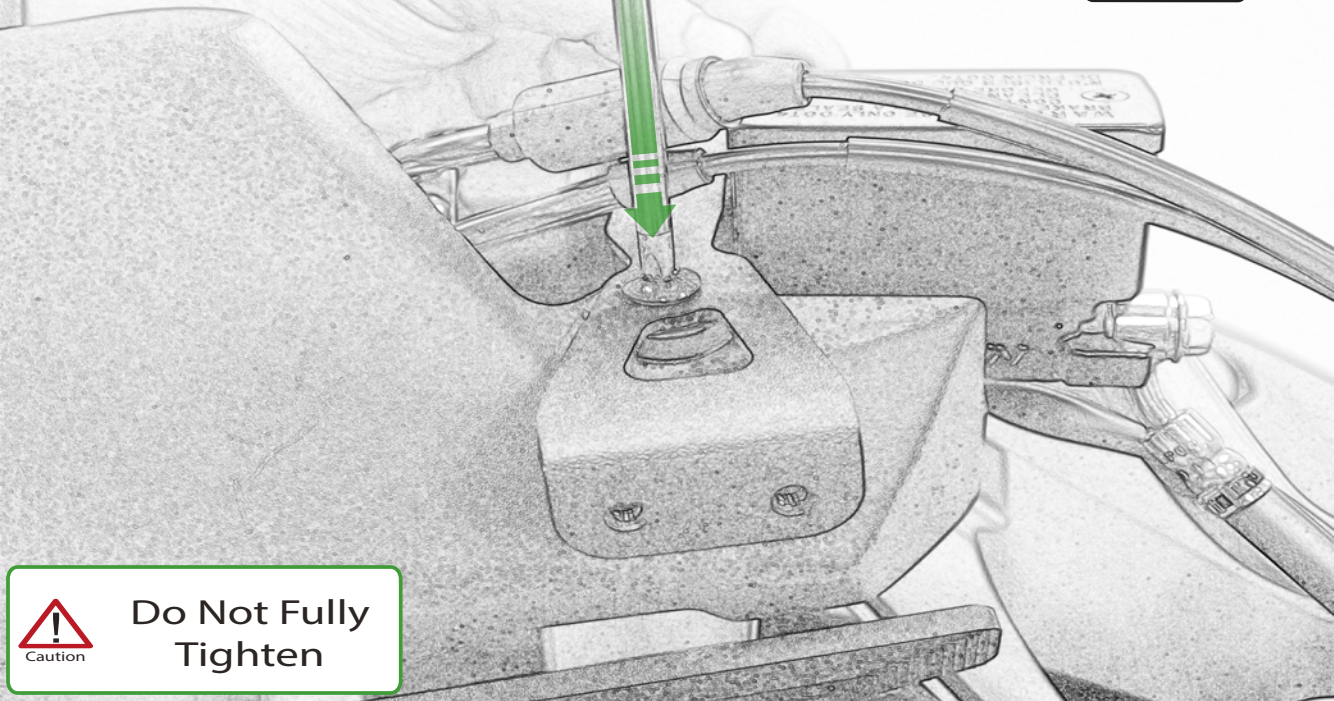

Caution


Do Not Fully
Tighten

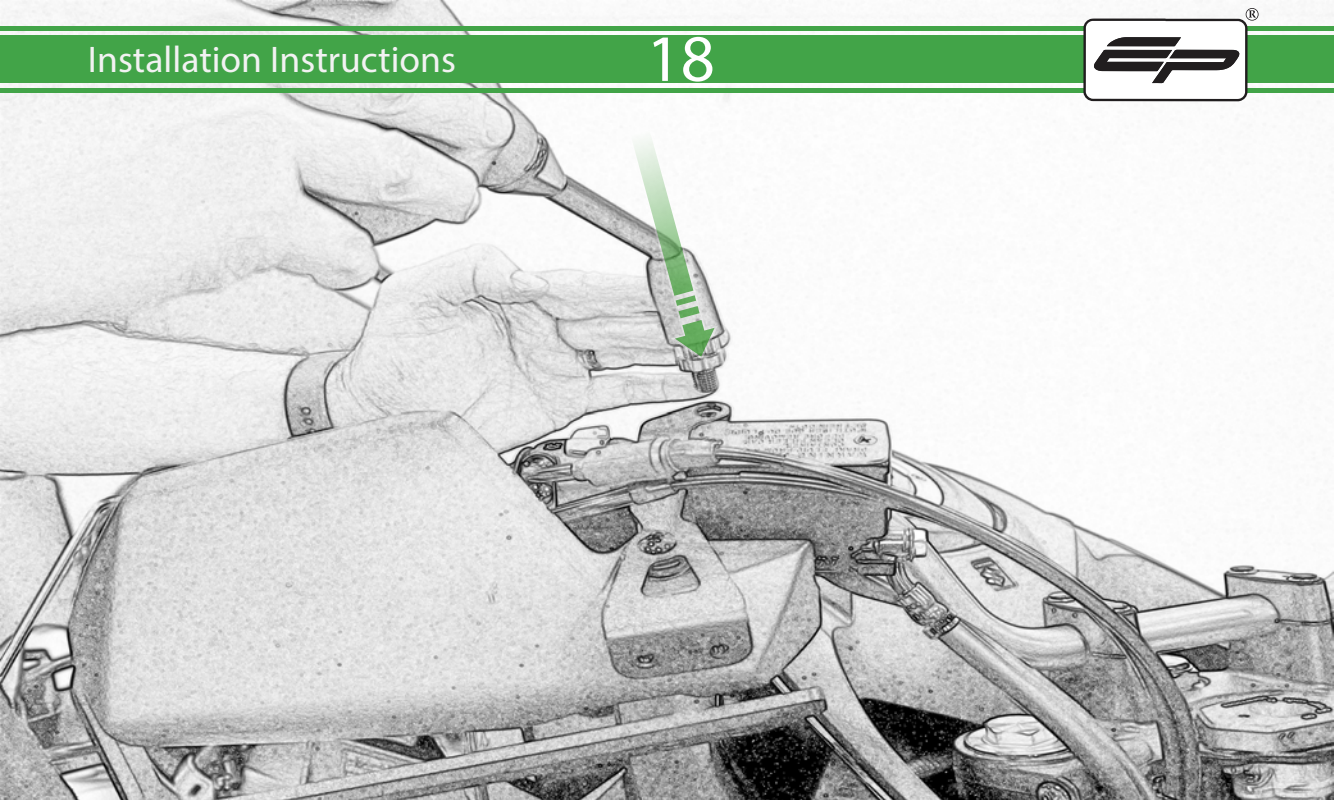


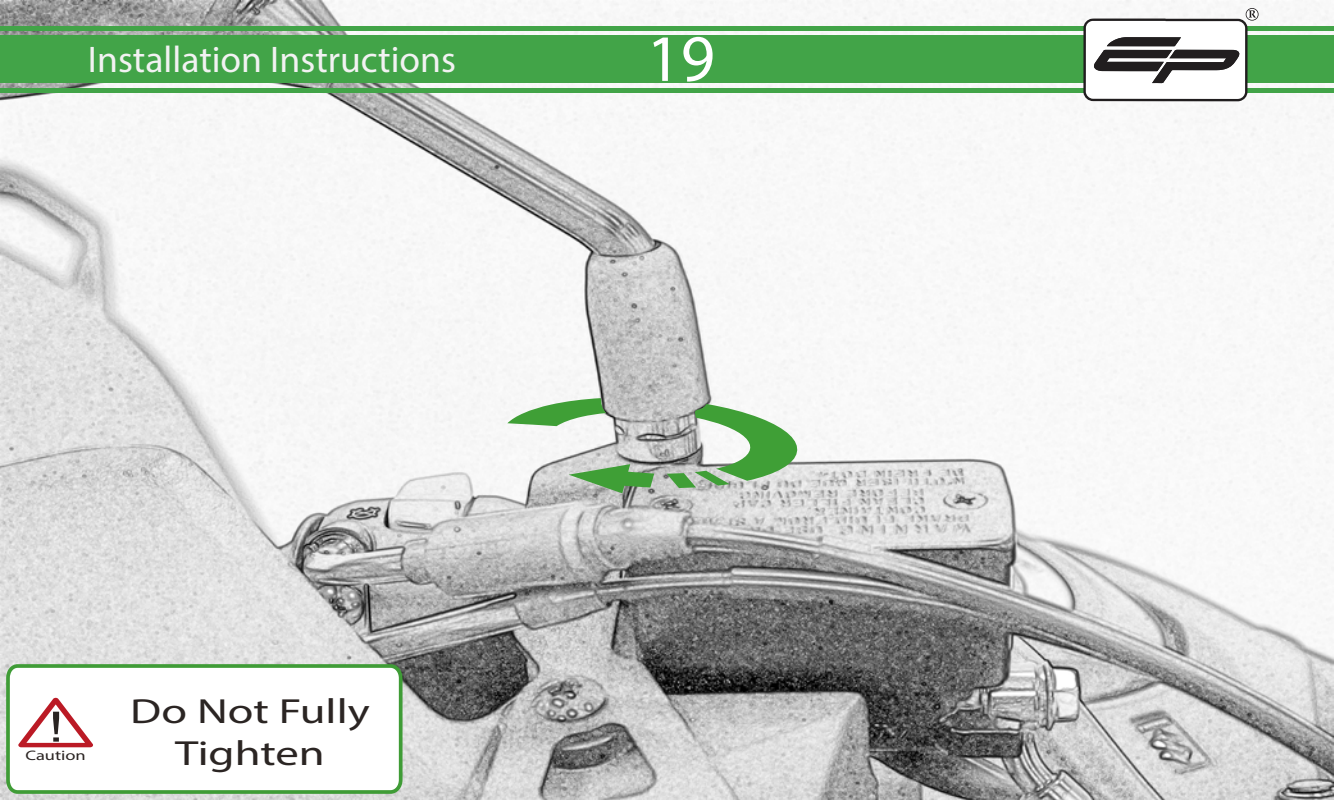

Caution


Do Not Fully
Tighten

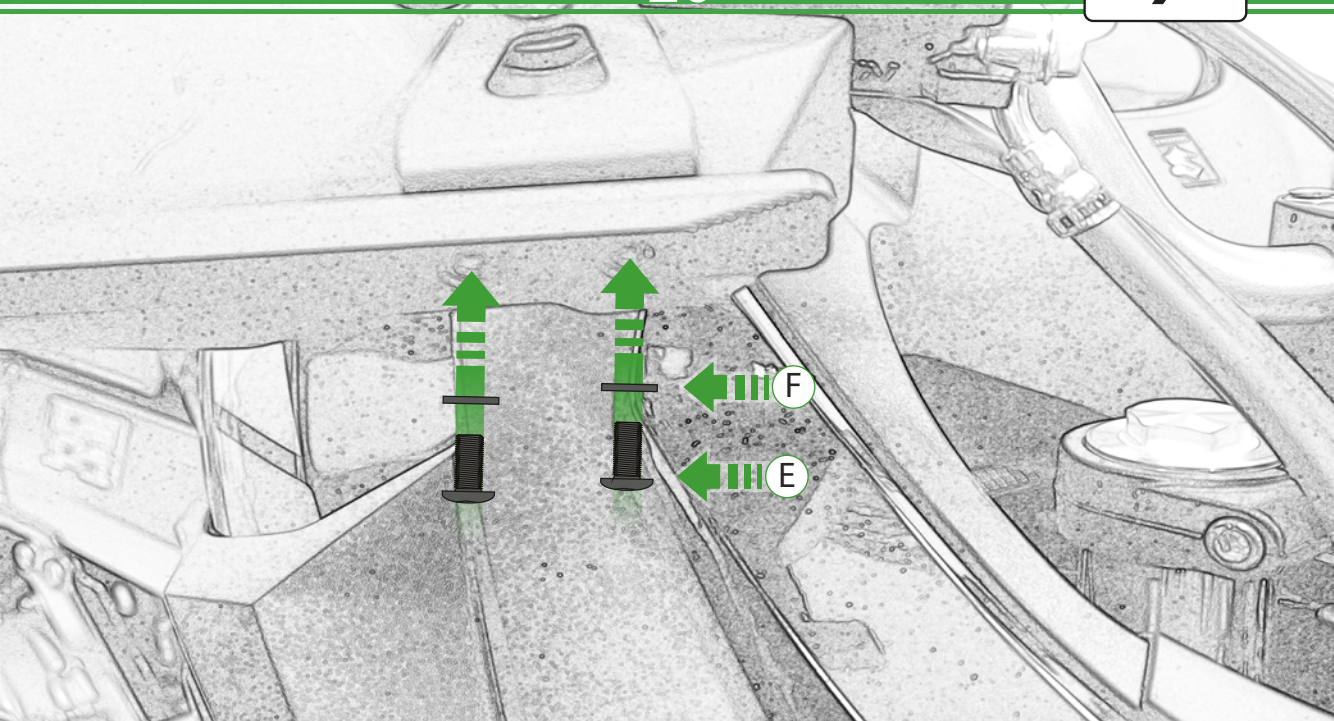

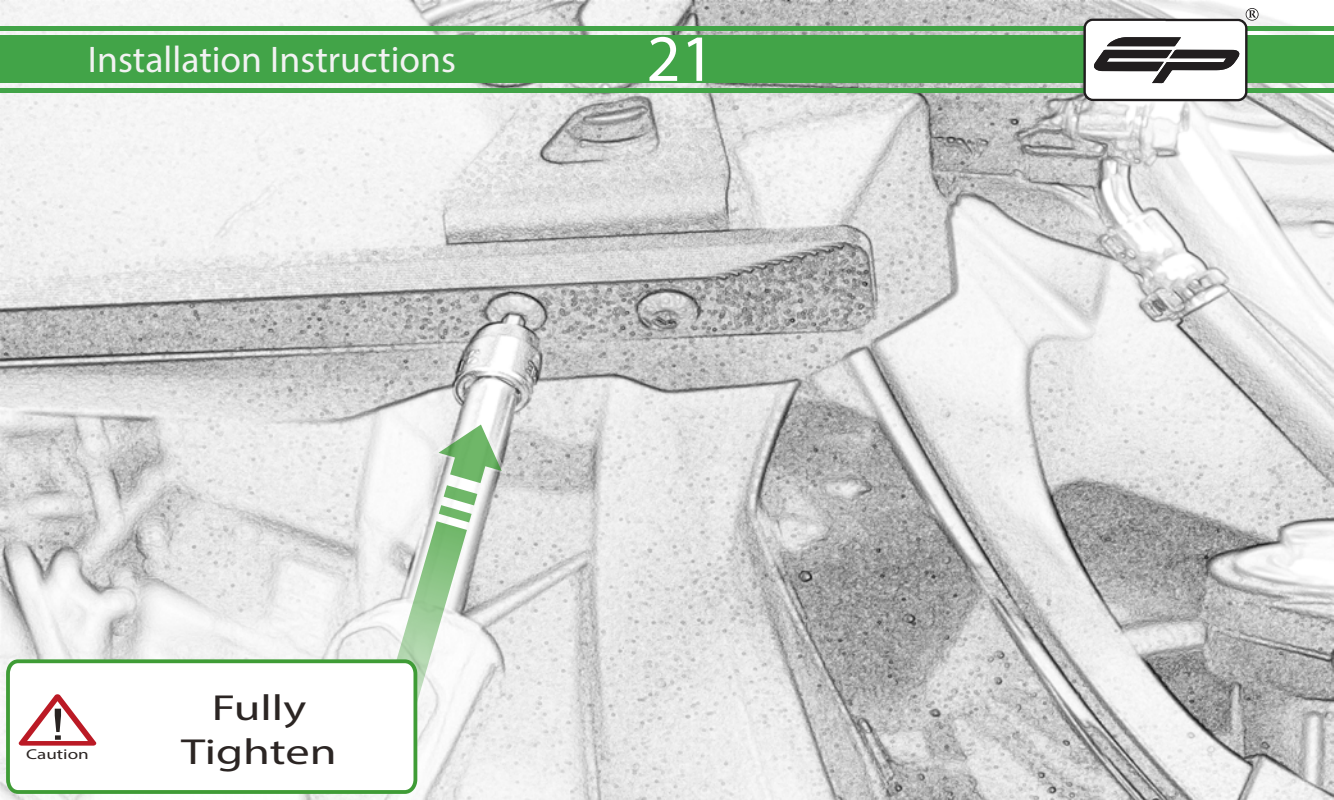


Caution

Fully
Tighten

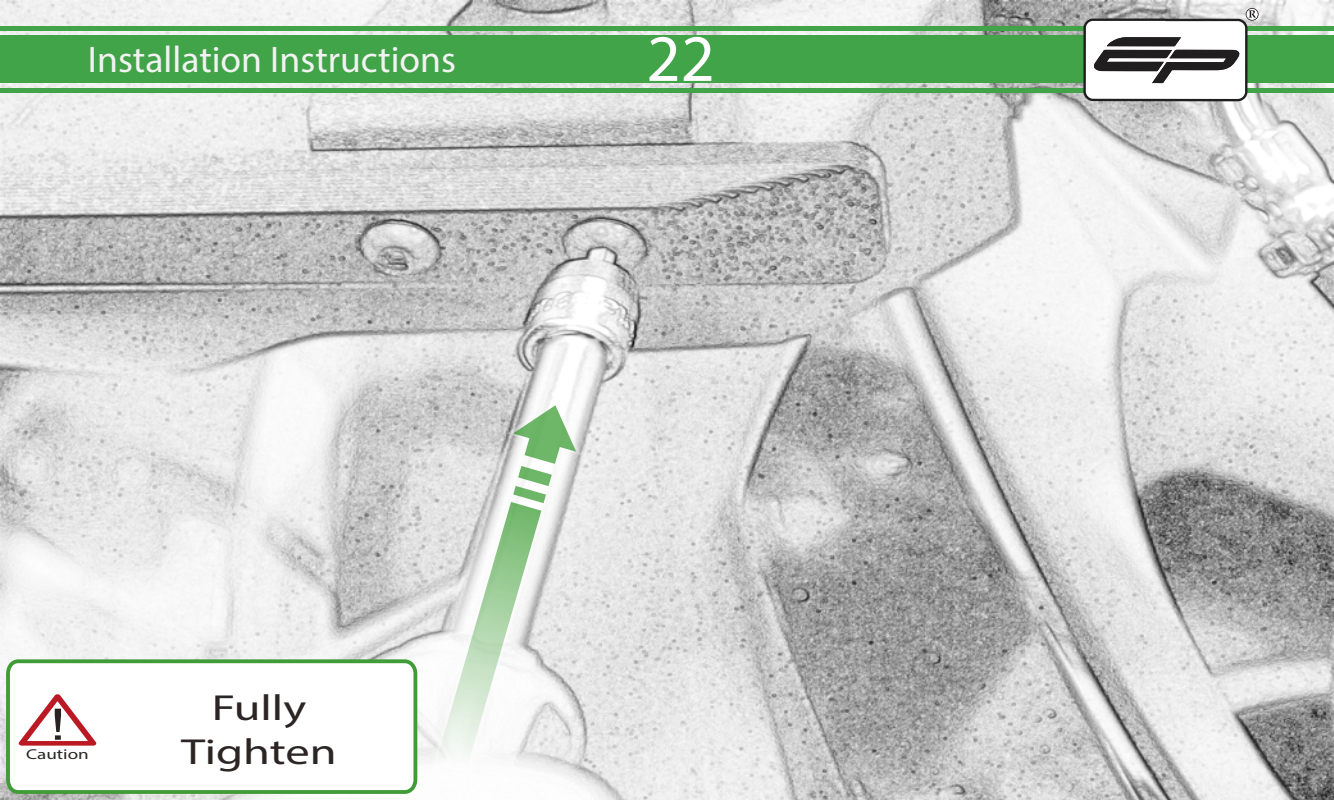


Fully
Tighten

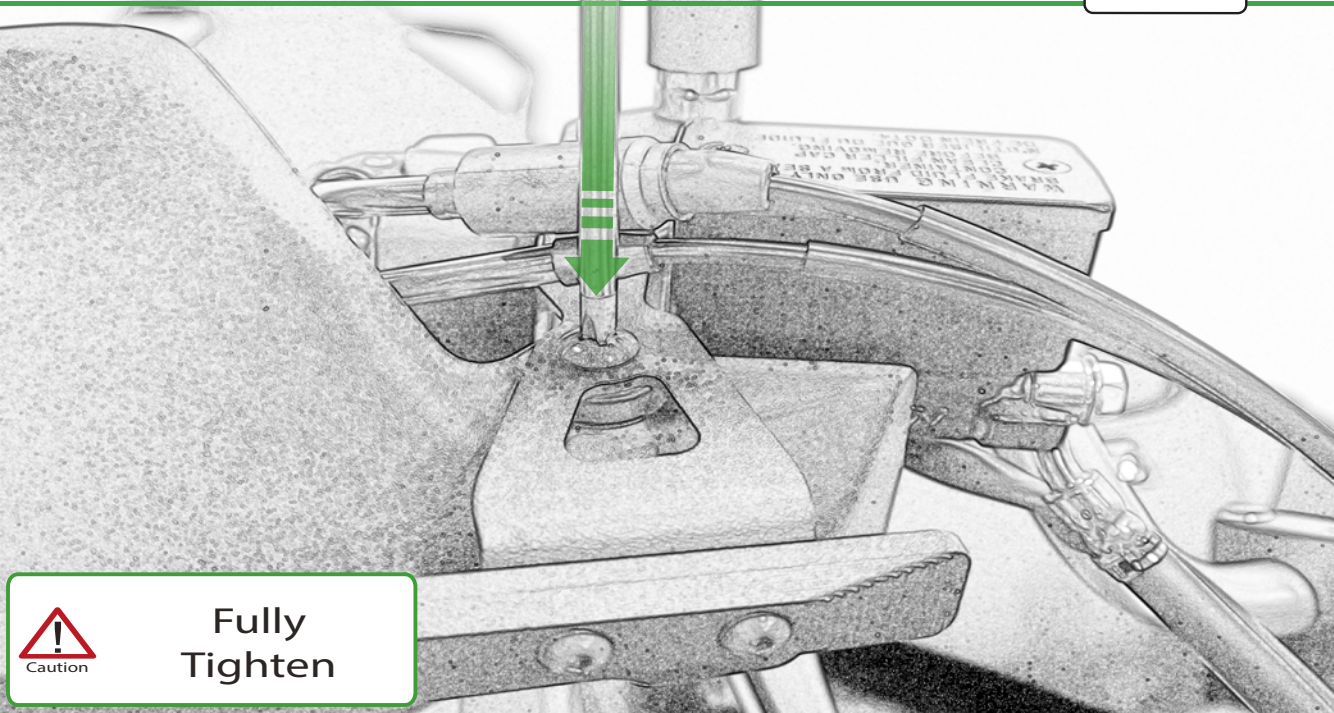


Caution

Fully
Tighten

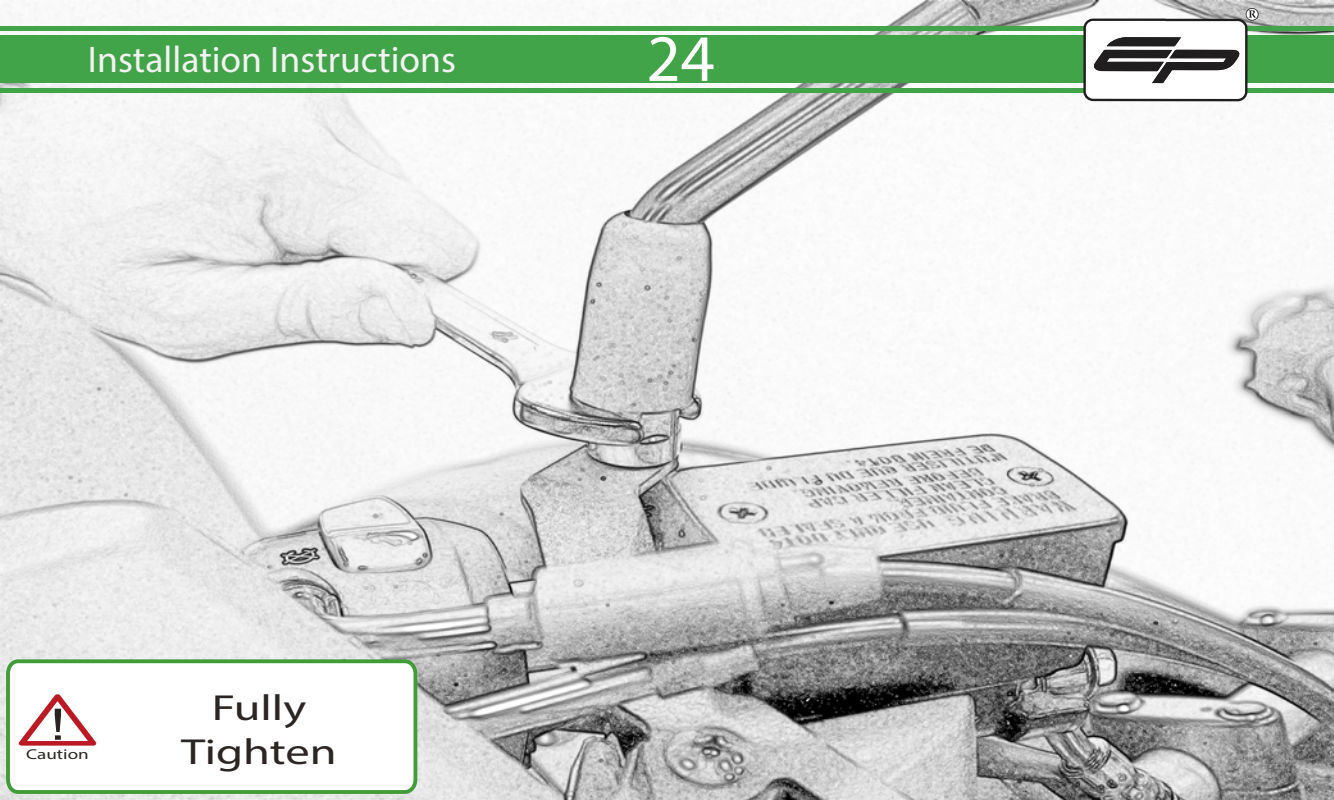


Caution


Fully
Tighten

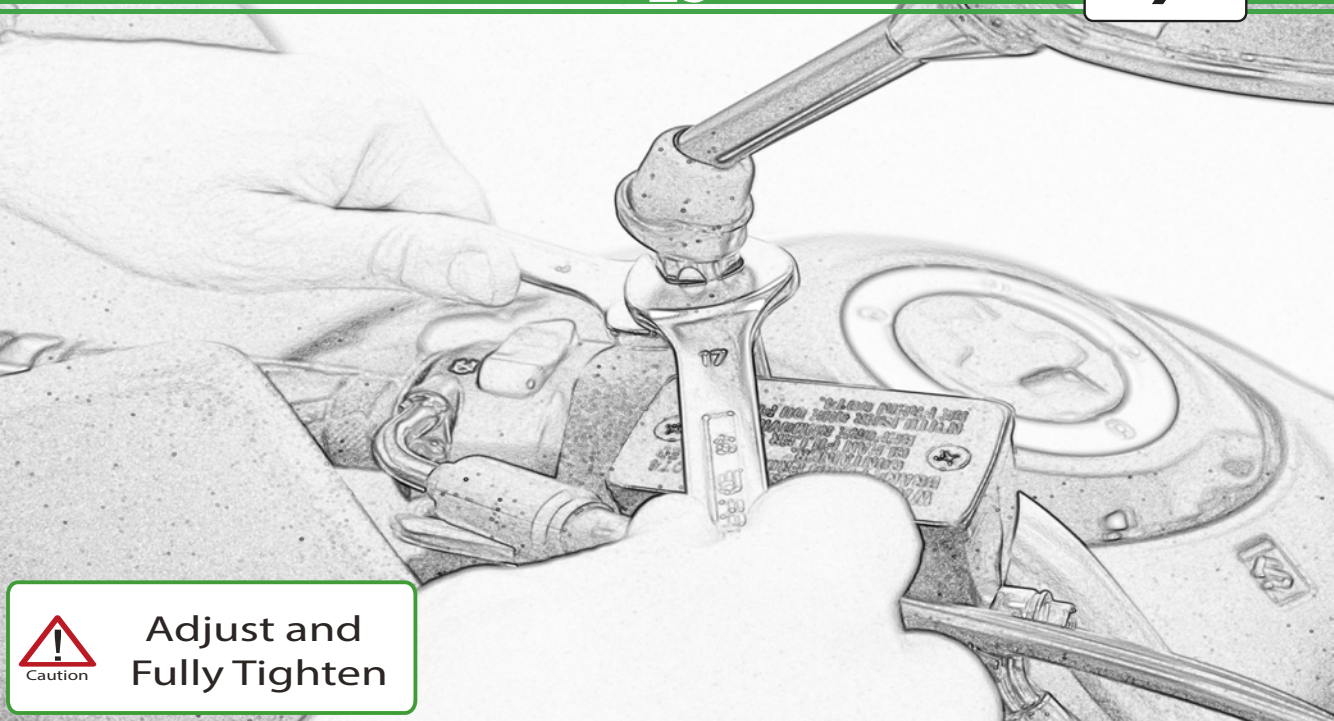

Caution


Adjust and
Fully Tighten

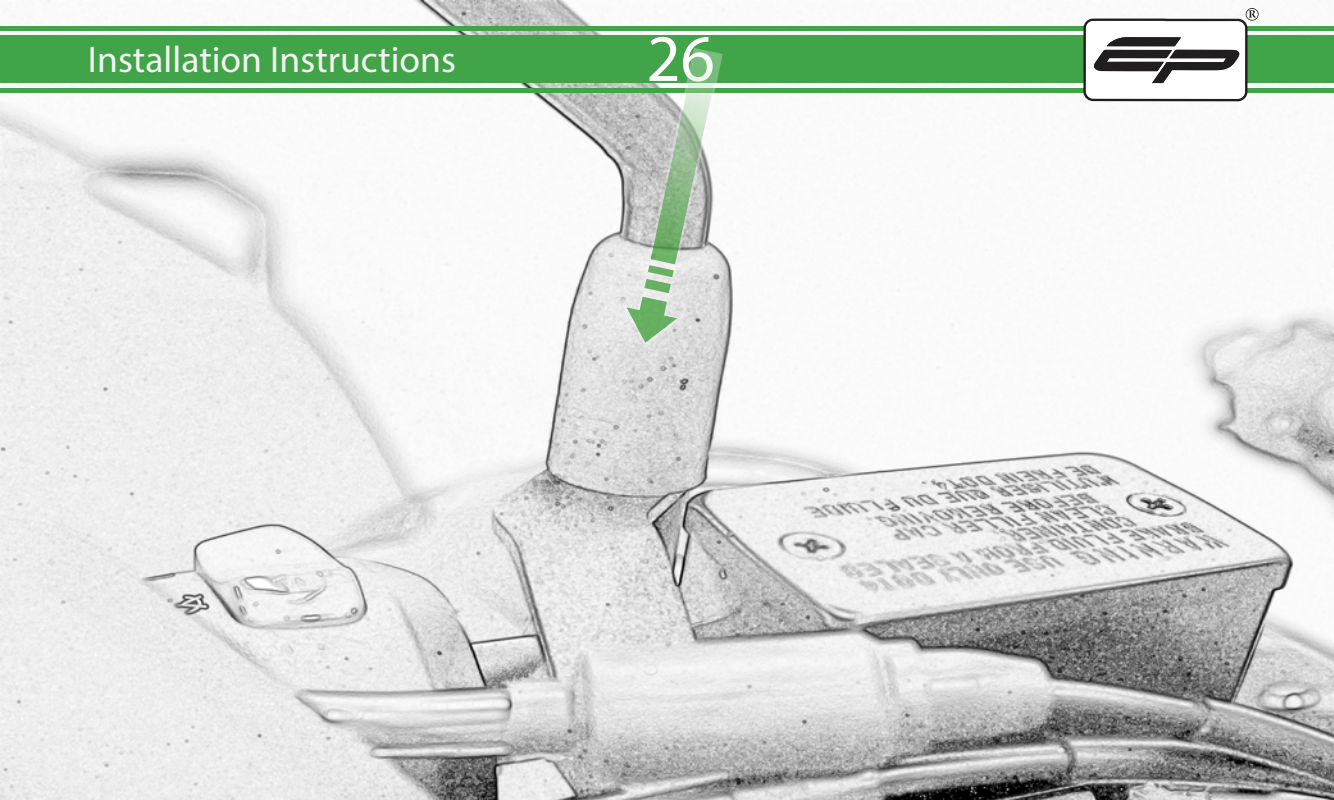


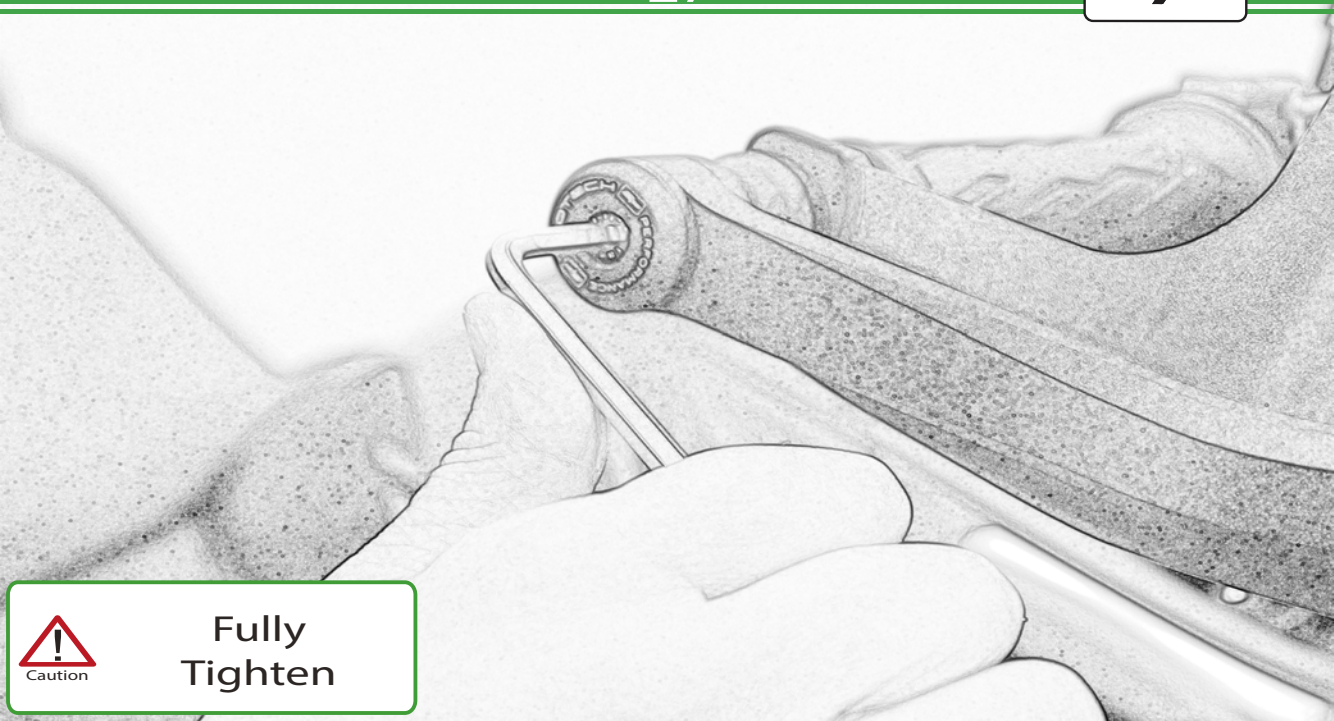



Caution


Fully
Tighten

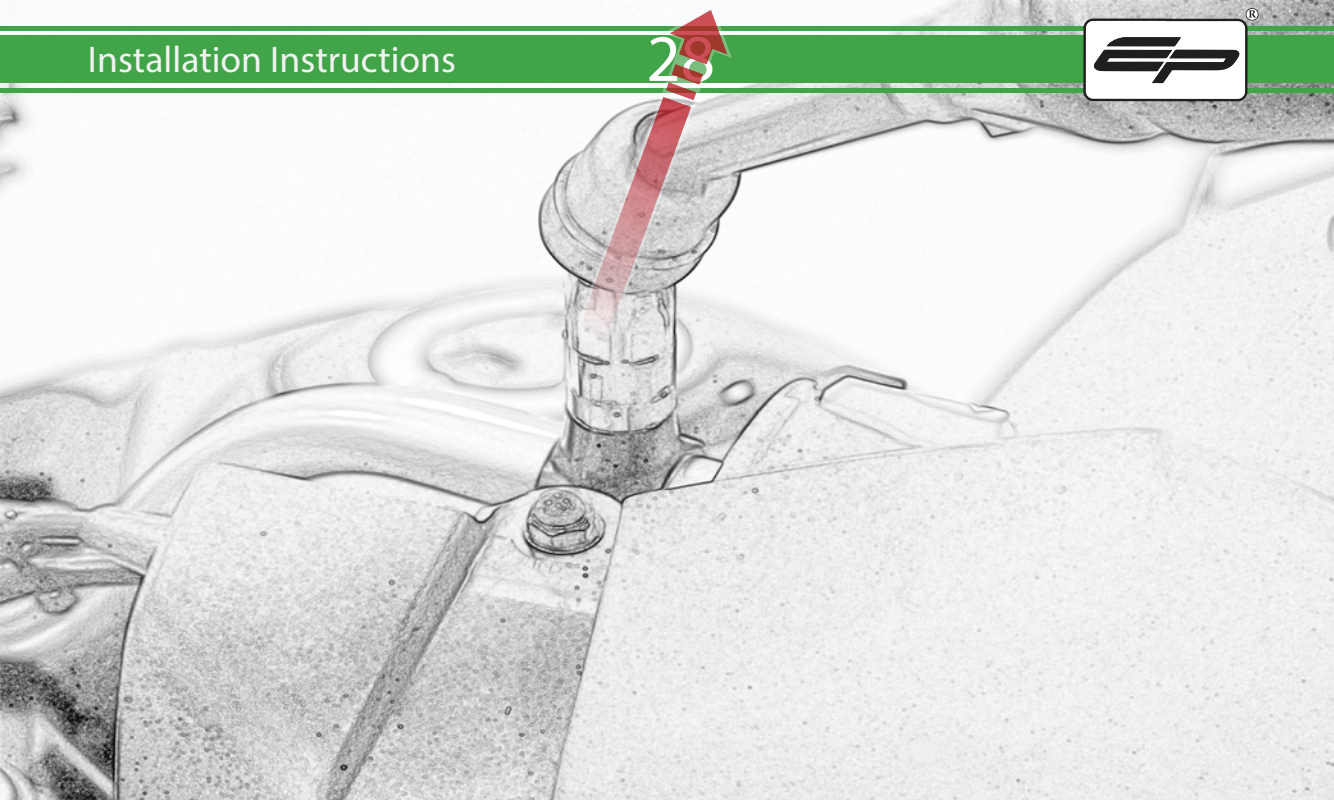


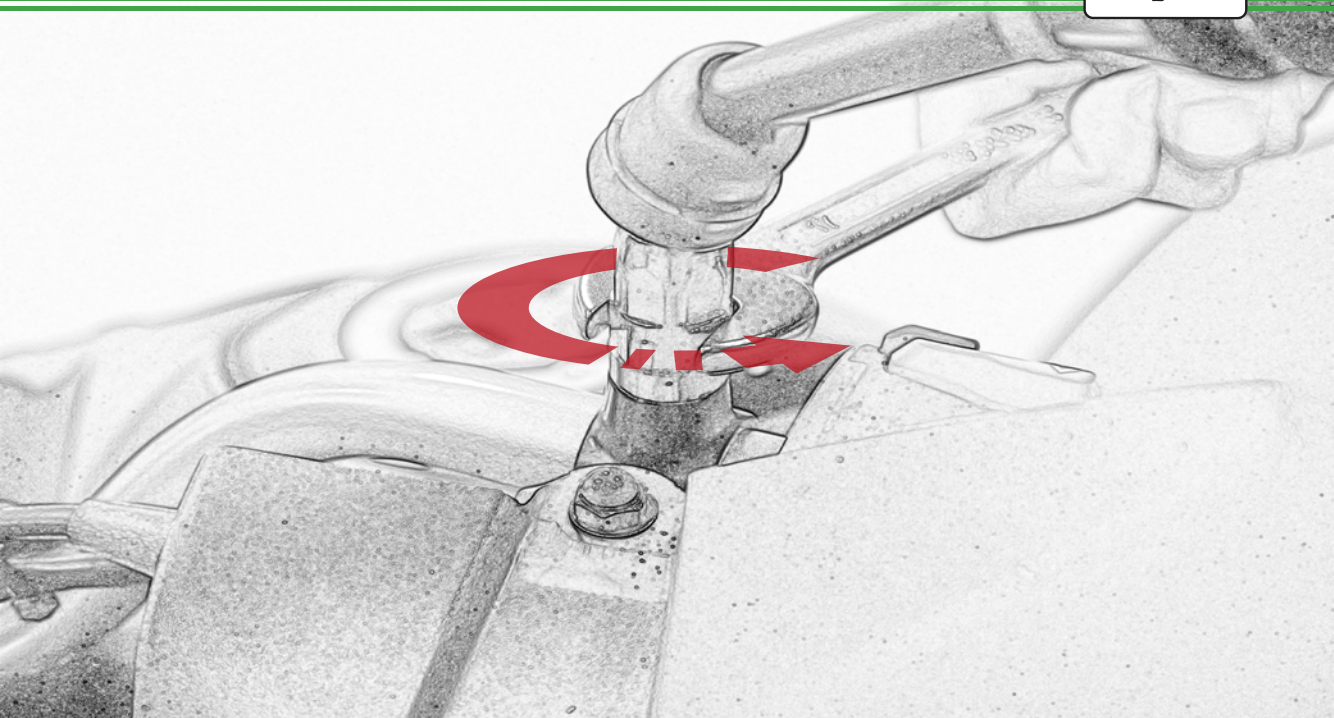


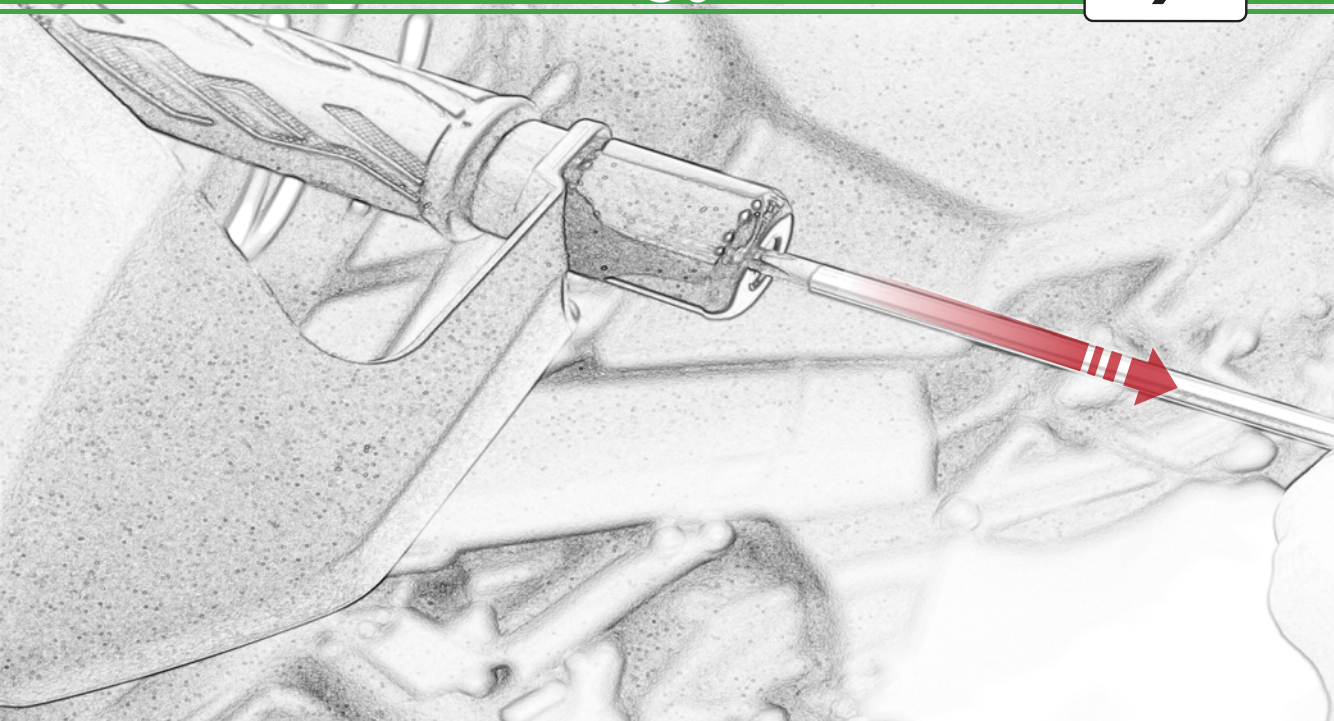


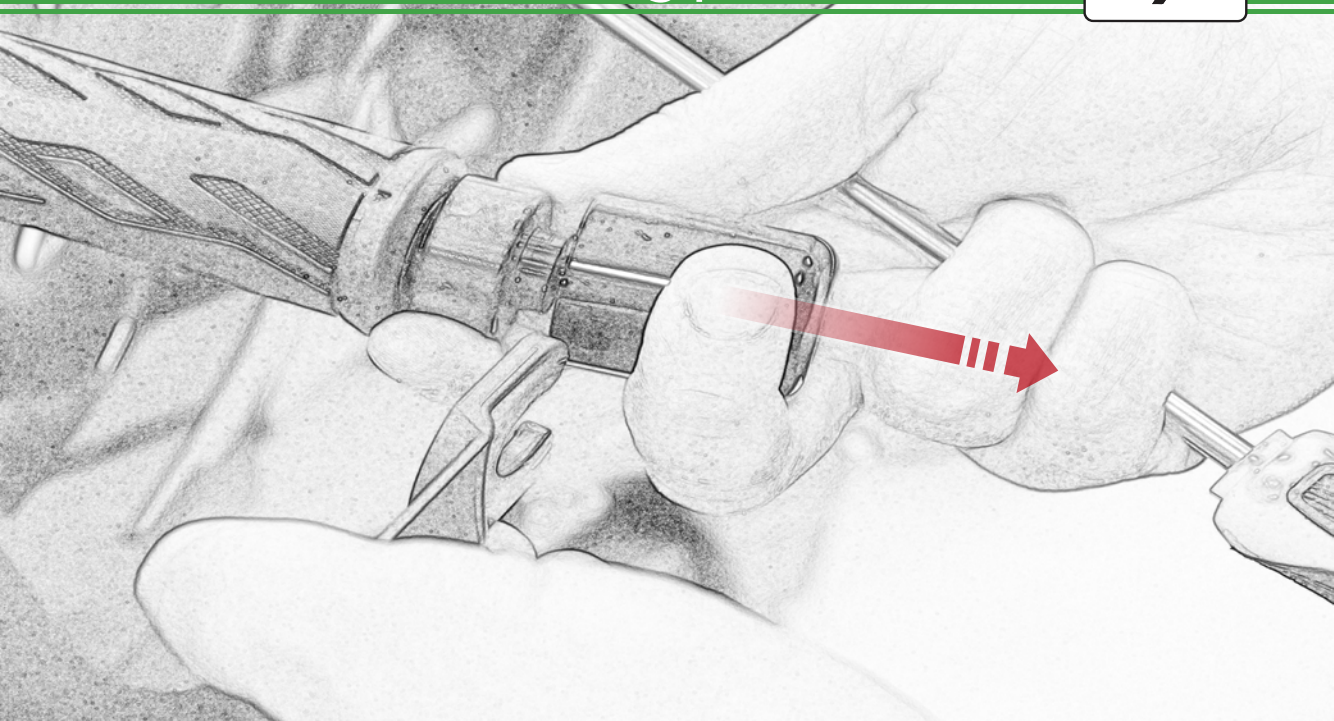


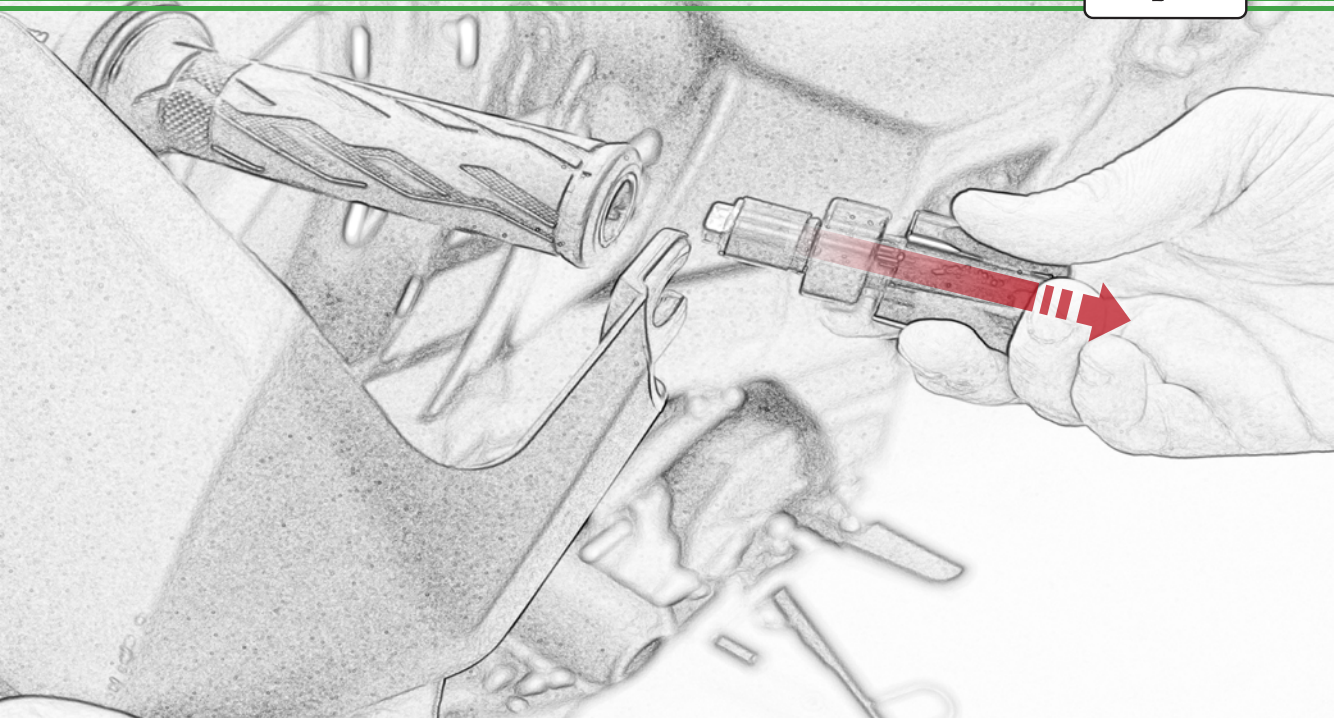

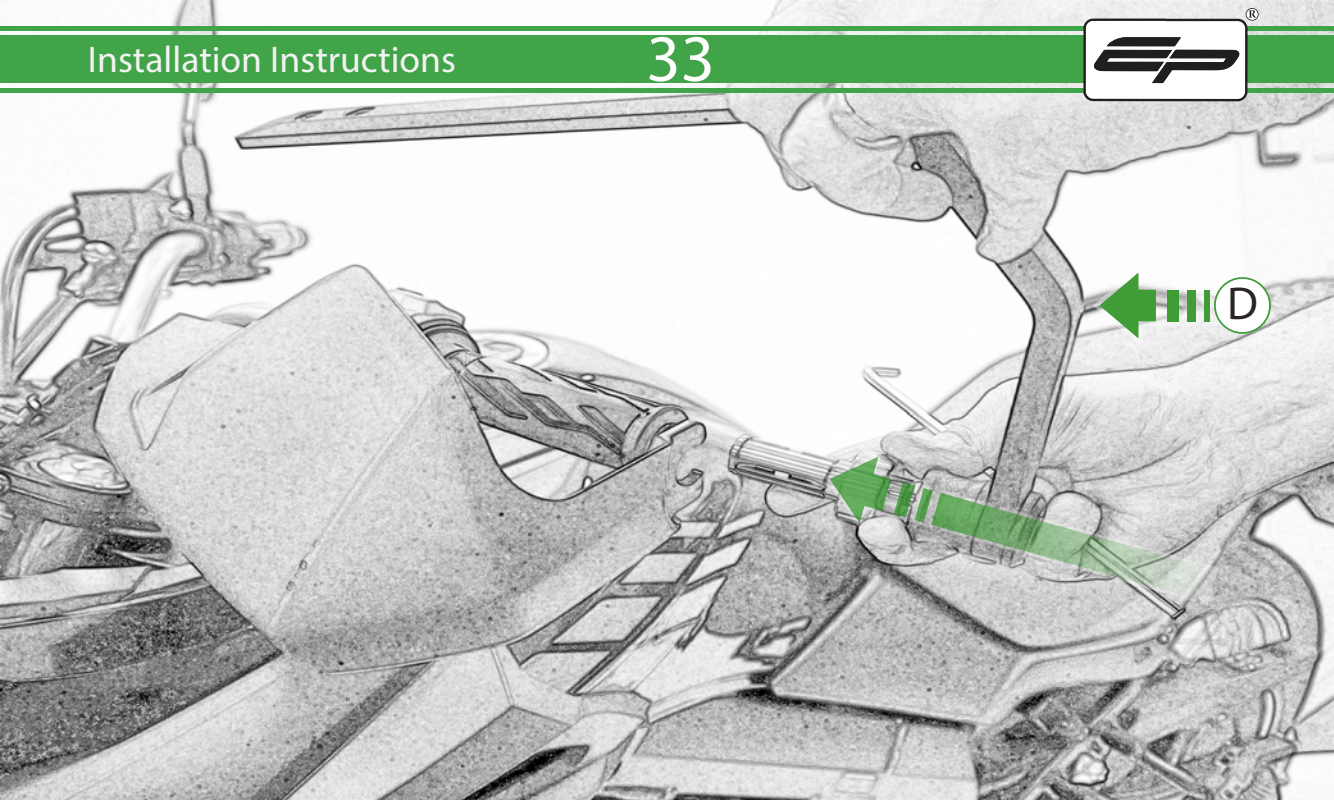


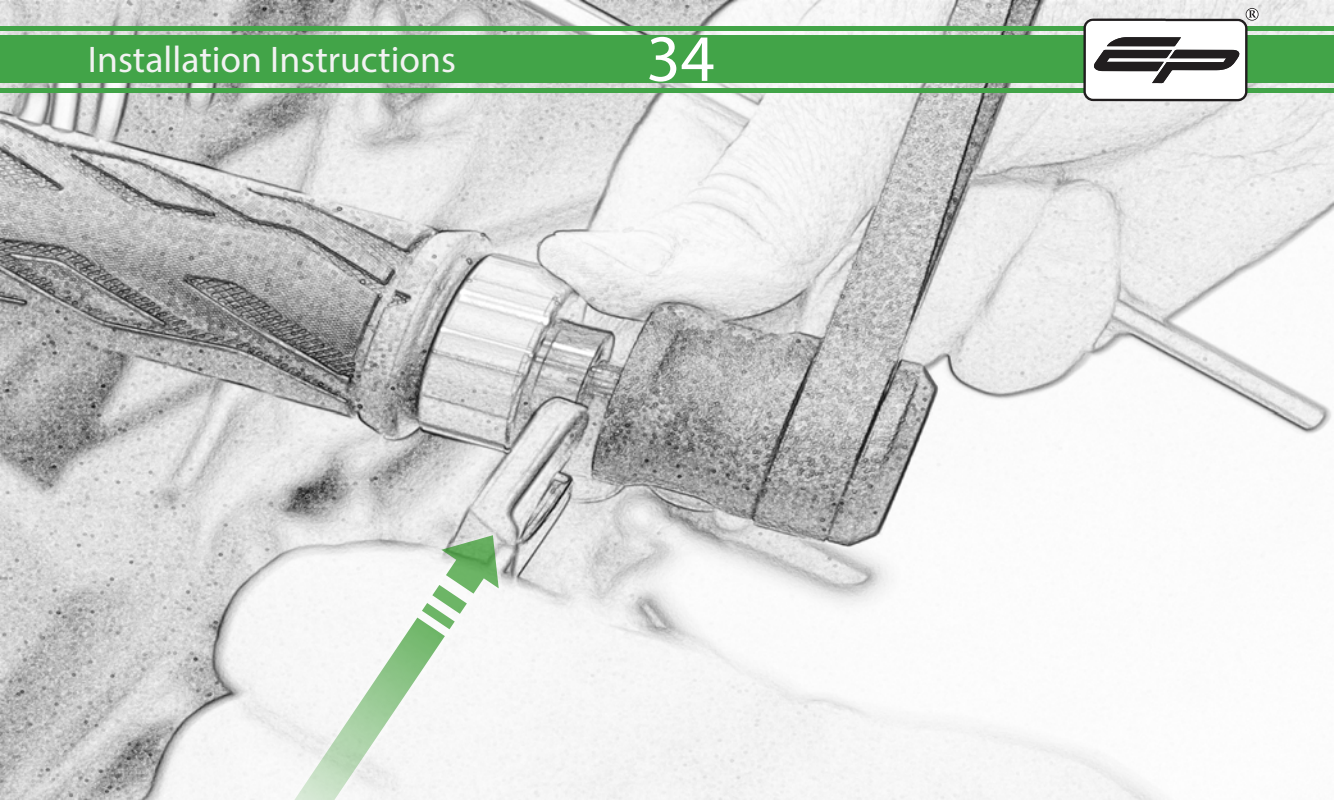


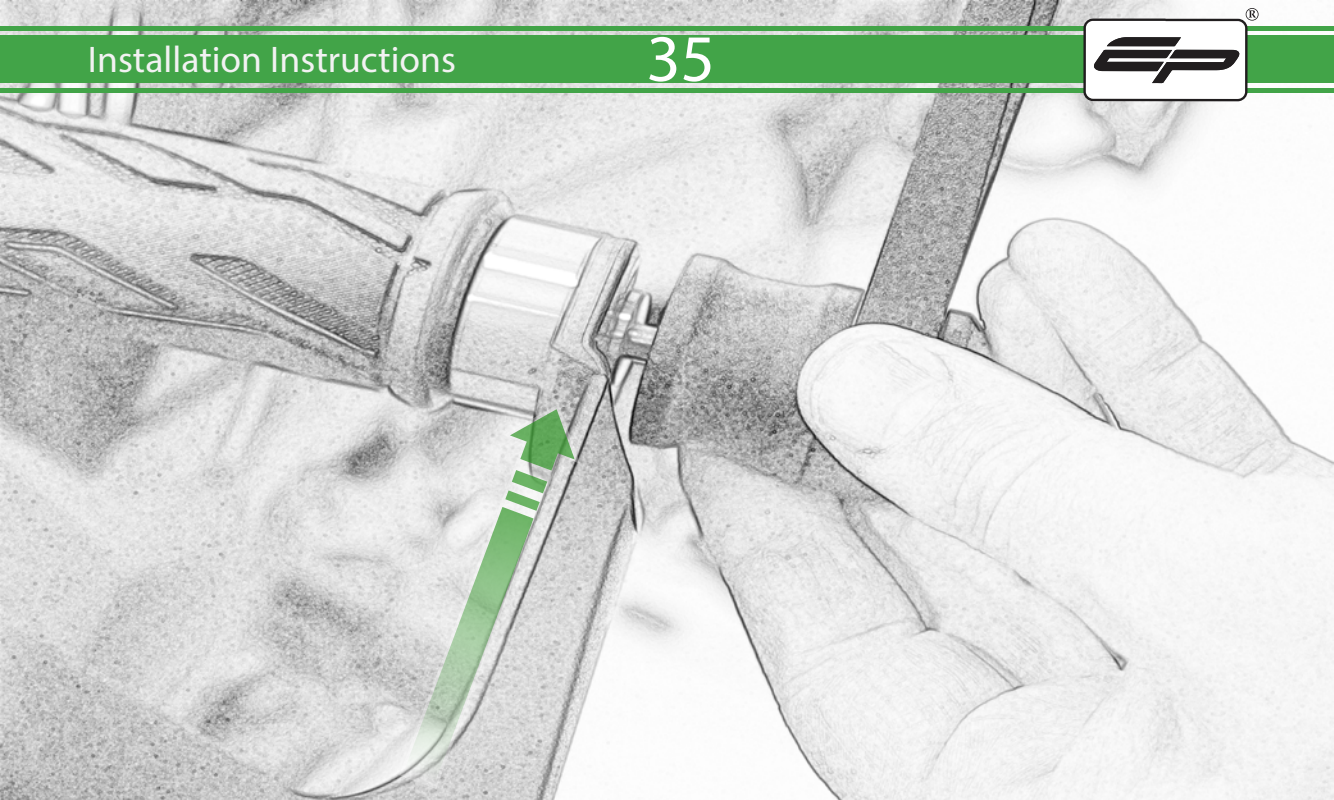


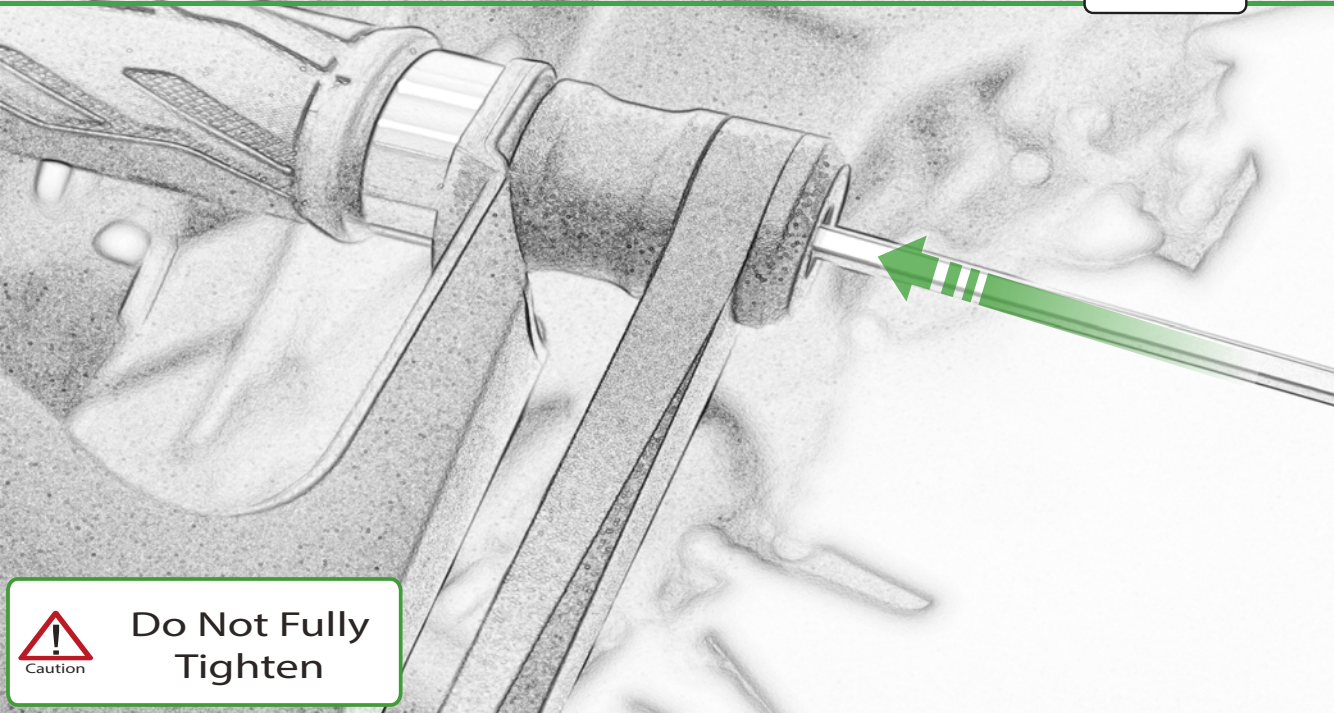




Do Not Fully
Tighten

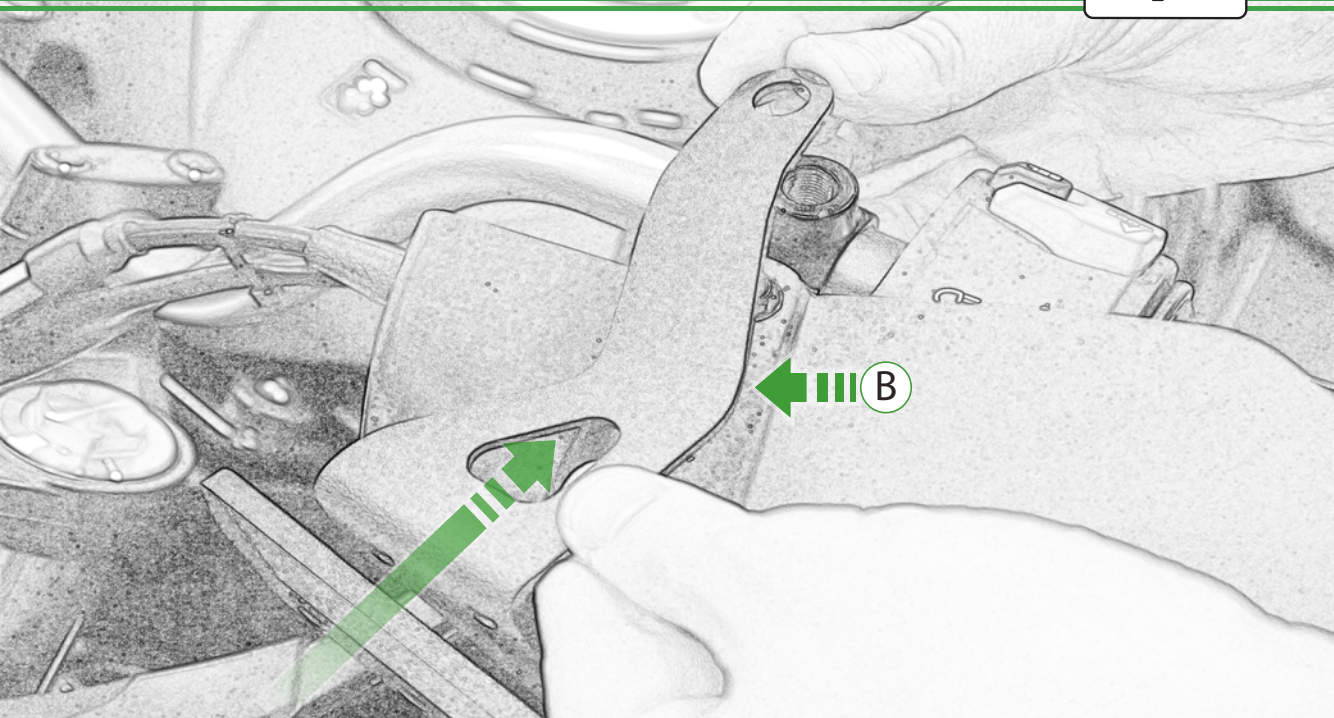


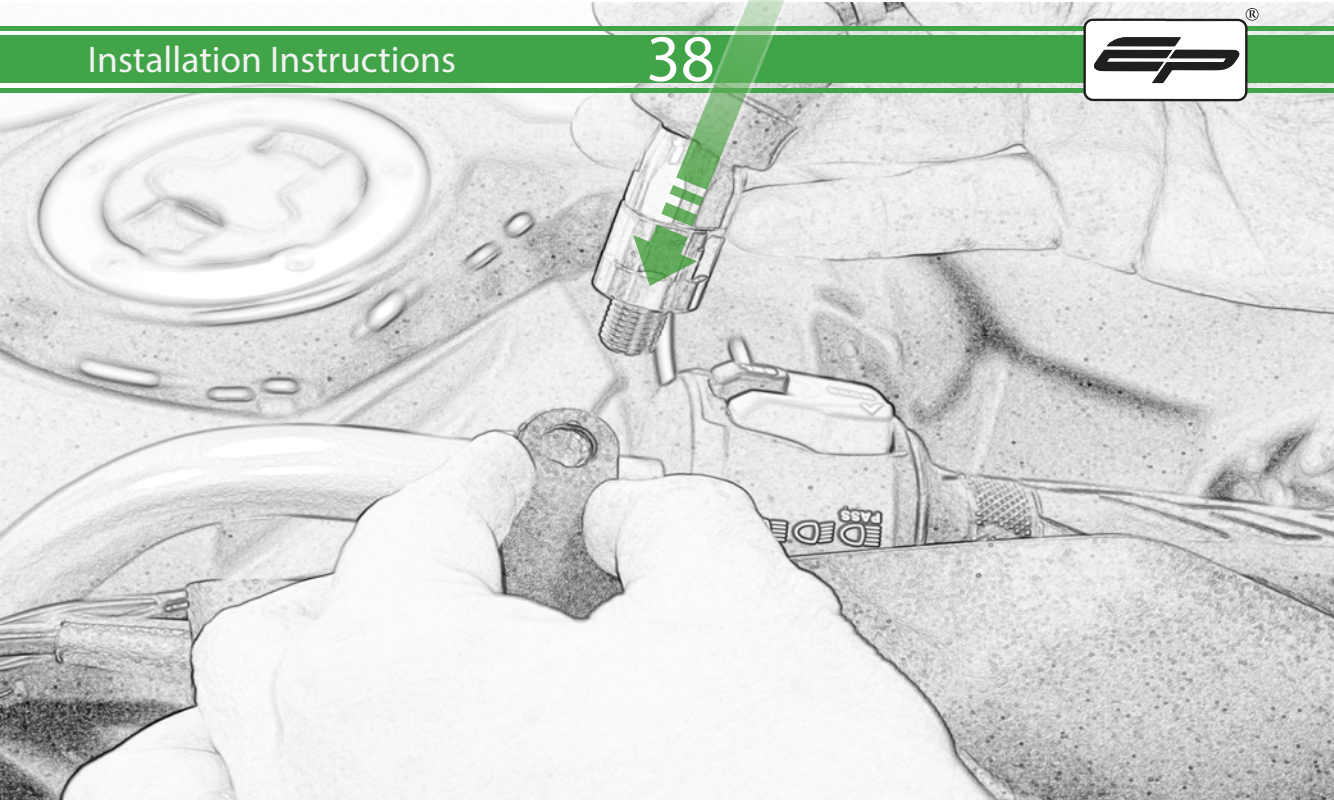

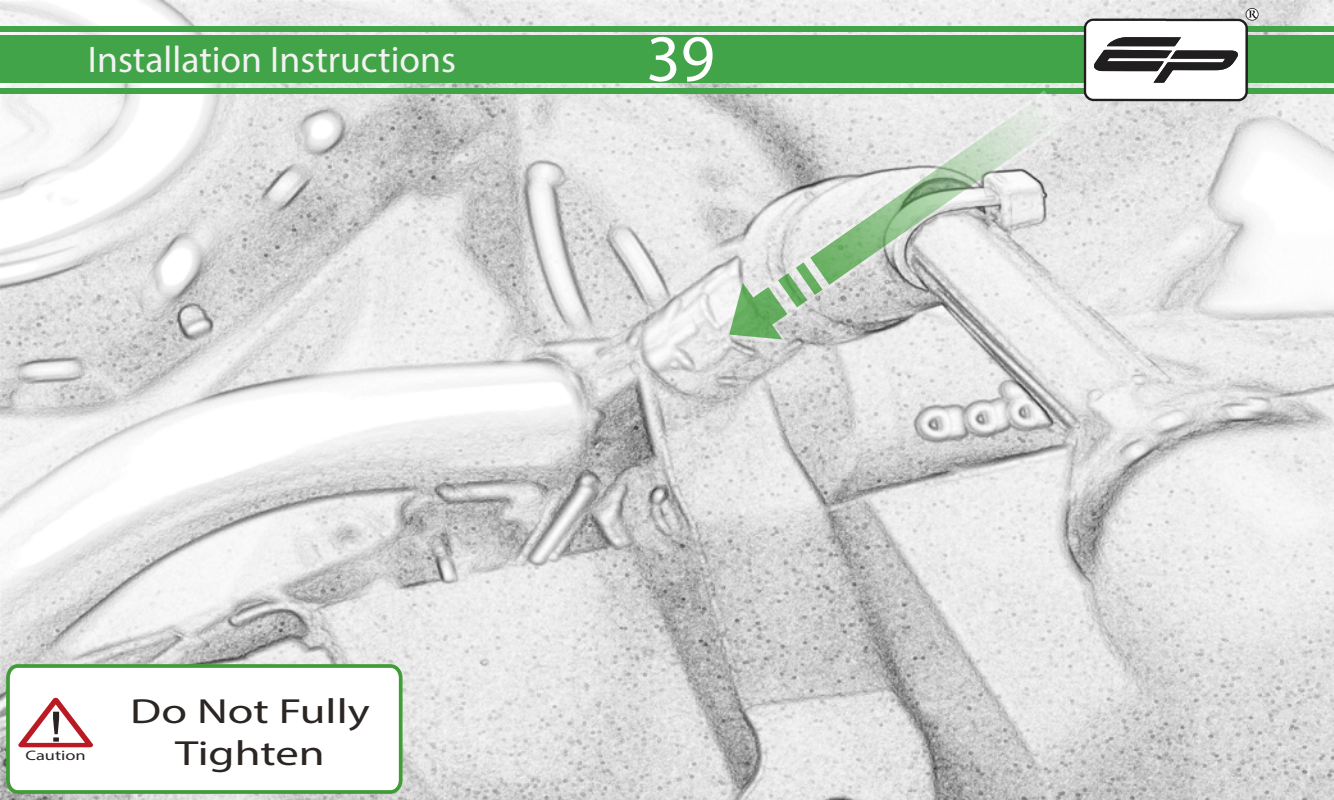


Do Not Fully
Tighten

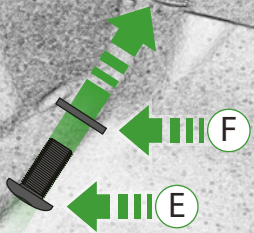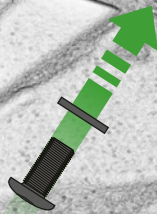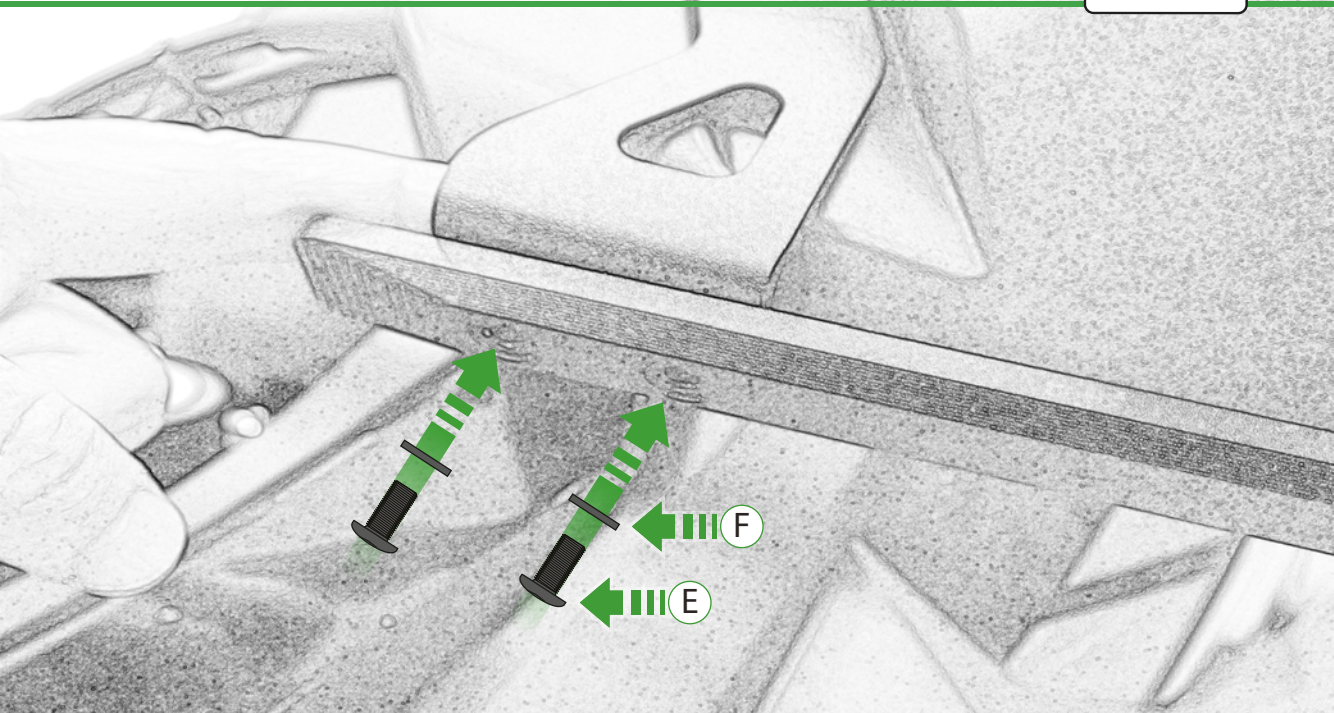

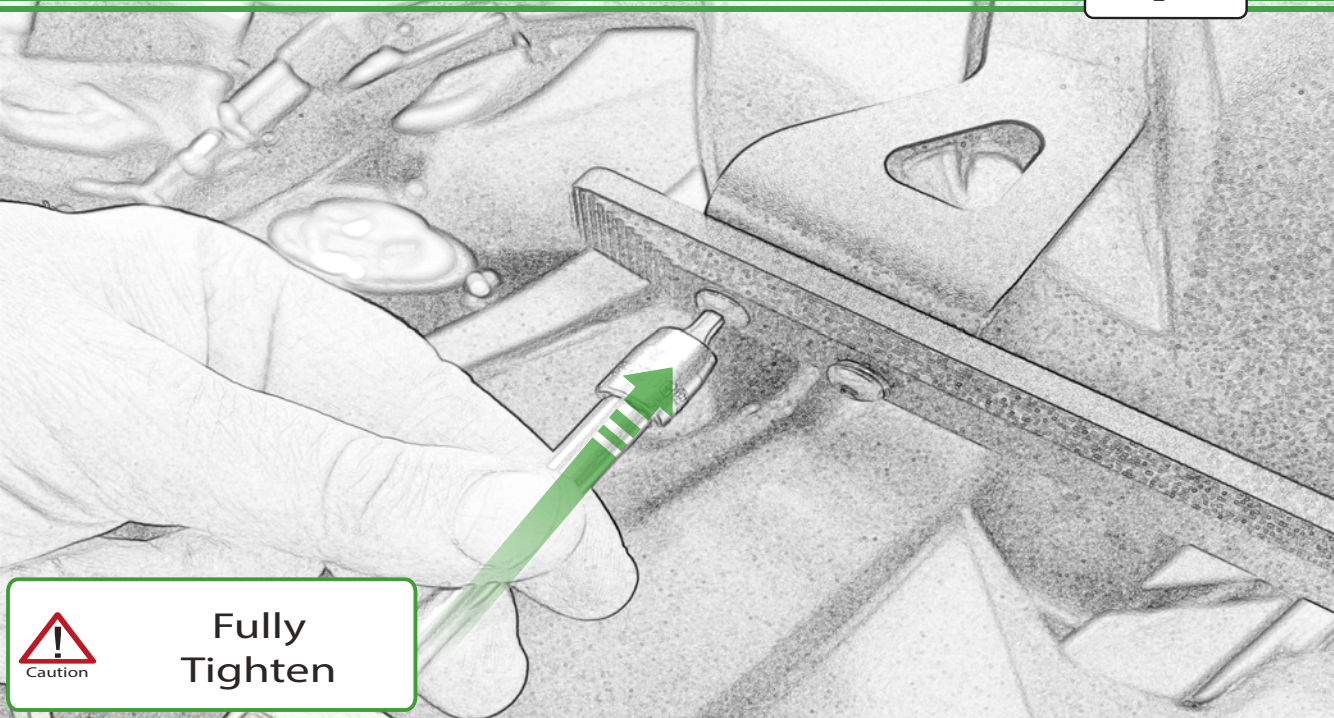


Caution

Fully
Tighten

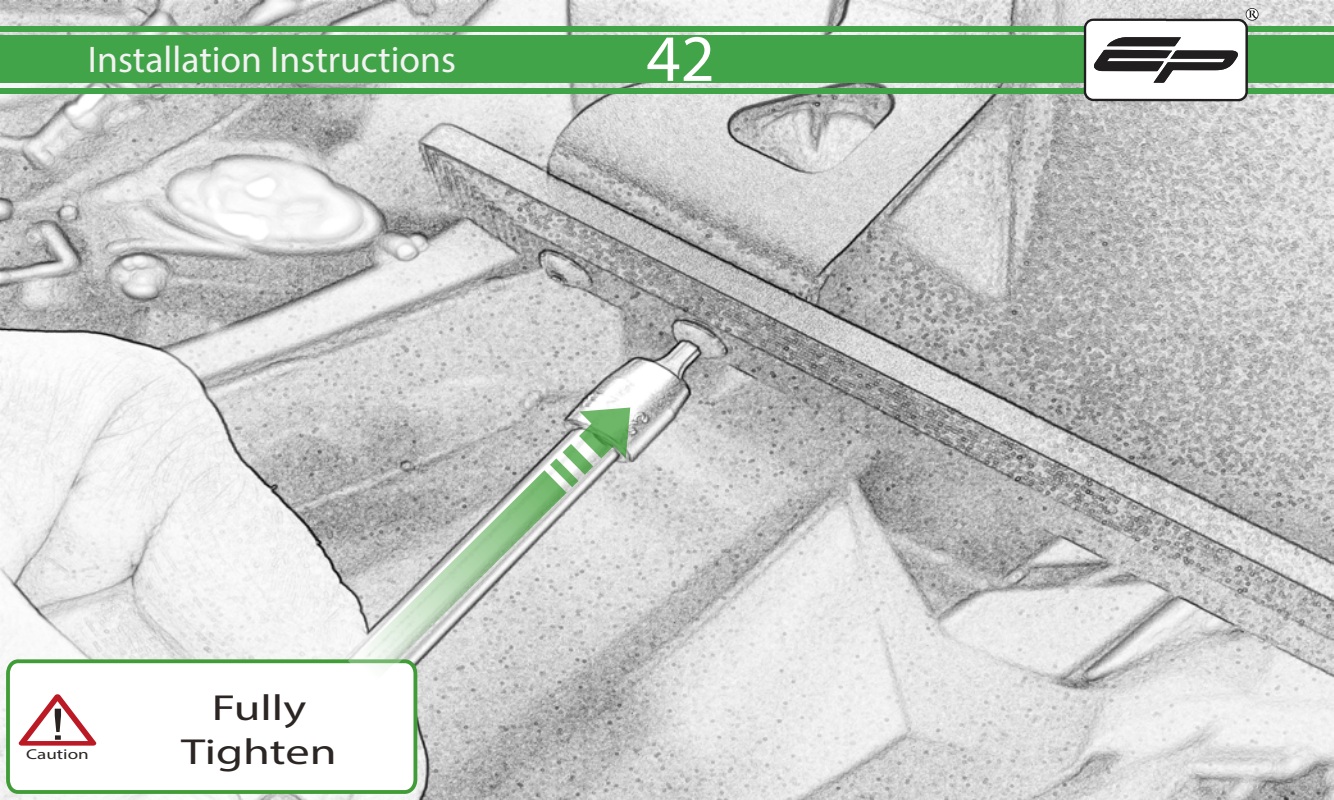


Caution

Fully
Tighten

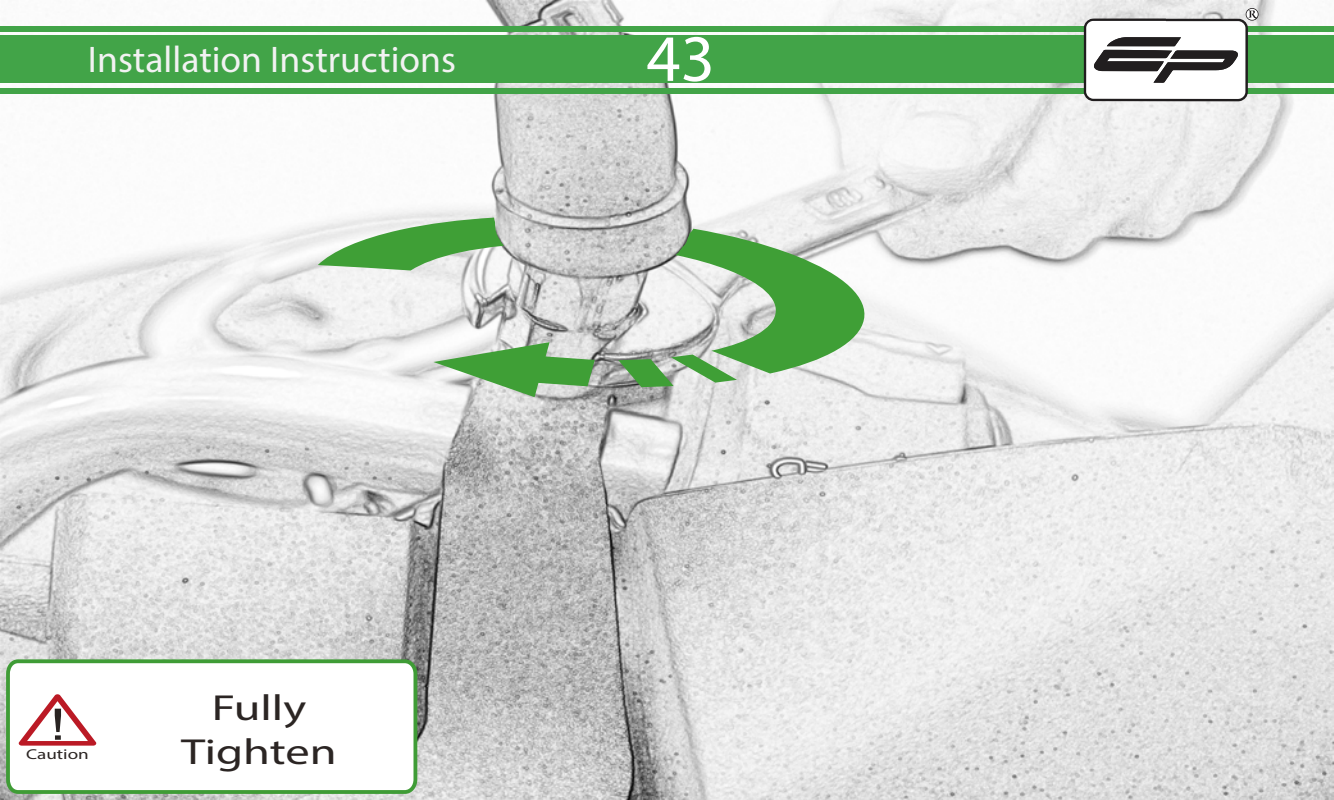


Fully
Tighten

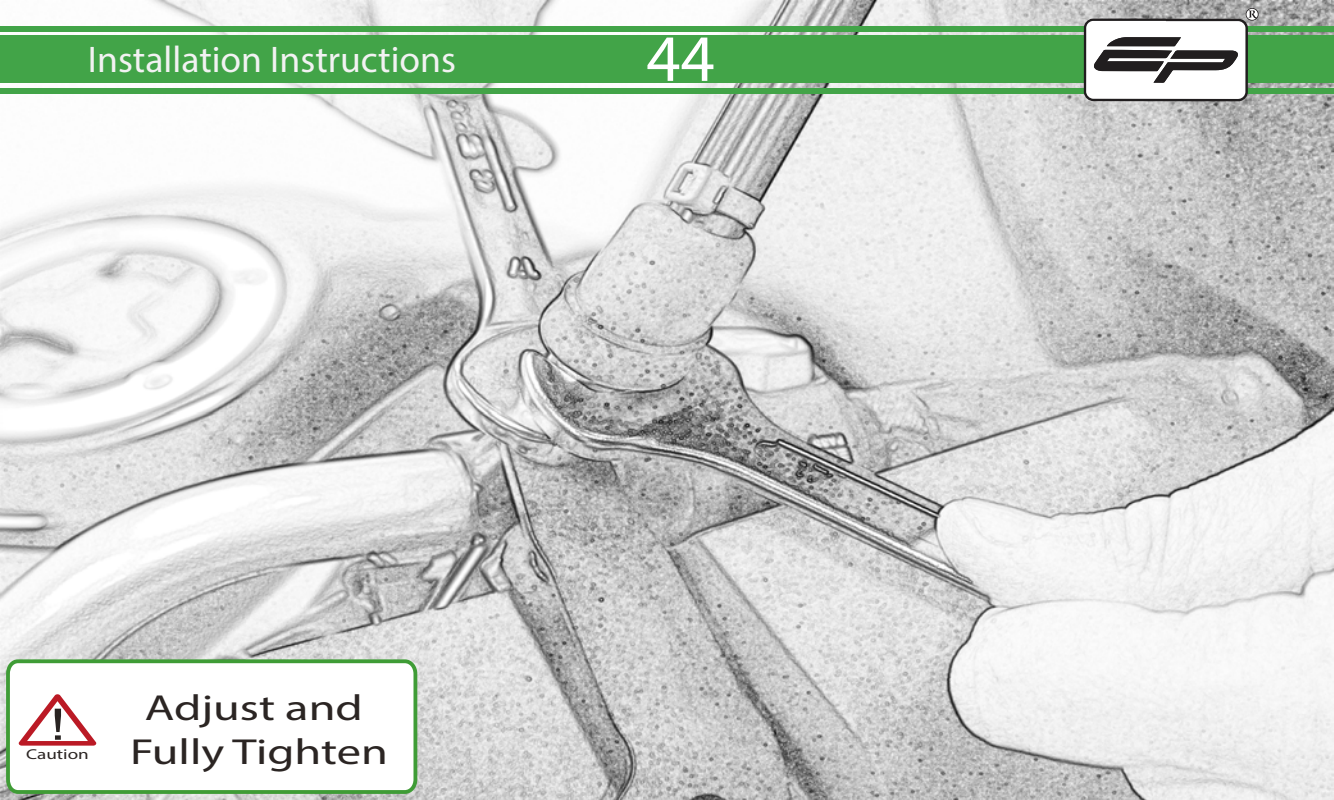

Caution

Adjust and
Fully Tighten

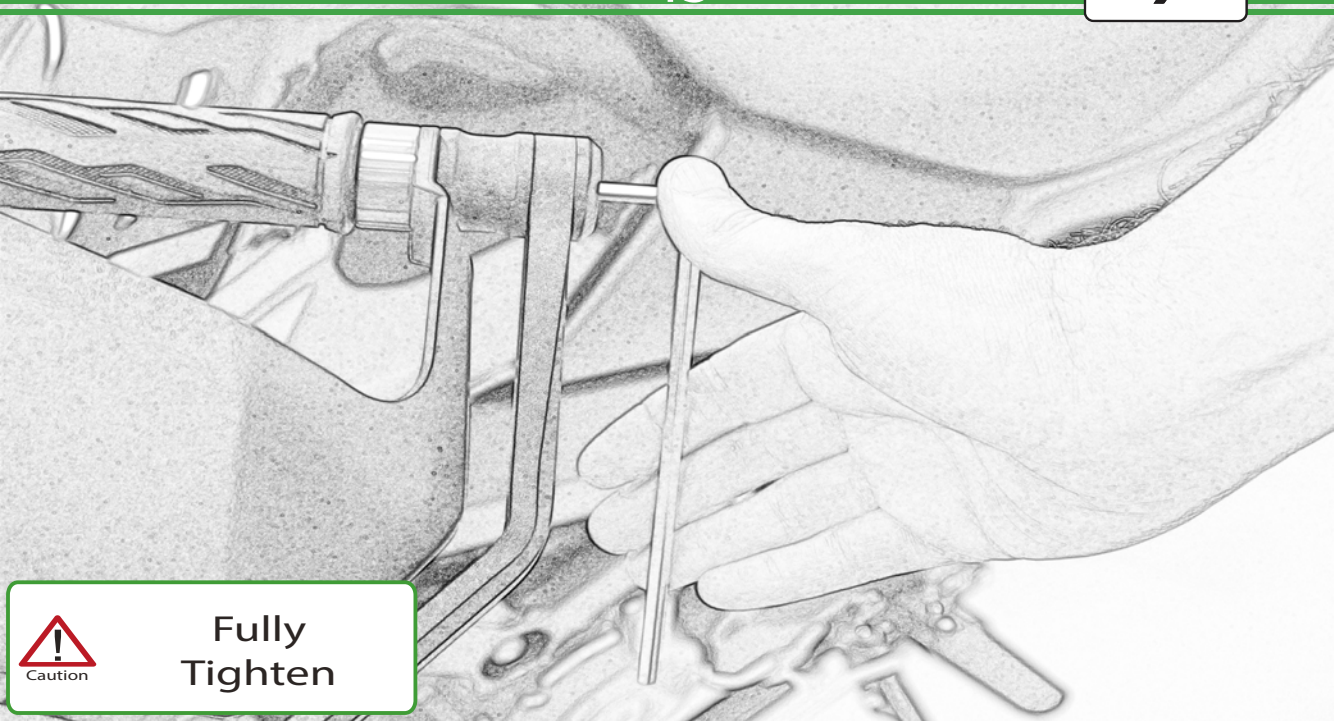

Caution

Fully
Tighten



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com