

www.evotech-performance.com
Suzuki V-Strom 650
Garmin Sat Nav Mount Instruction

## Installation Instructions



## Kit Contents PRN014566-015151

A 1 x Main Plate


(L) 2 x M4 x 5mm Black Button Head Bolts


1 x Pivot Plate


M 4 x M4 x 10mm Black Button Head Bolts


- © 1 x Sub Mounting Bracket
- D 2 x M5 x 8mm Black Button Head Bolts
- E 2 x P-clips (No.1)
- © 2 x P-clips (No.2)
- © 2 x P-clips (No.3)
- H 2 x P-clips (No.4)
- 1 2 x Lobe Screw
- ① 2 x M5 Black Washer
- K 2 x Locking Washer




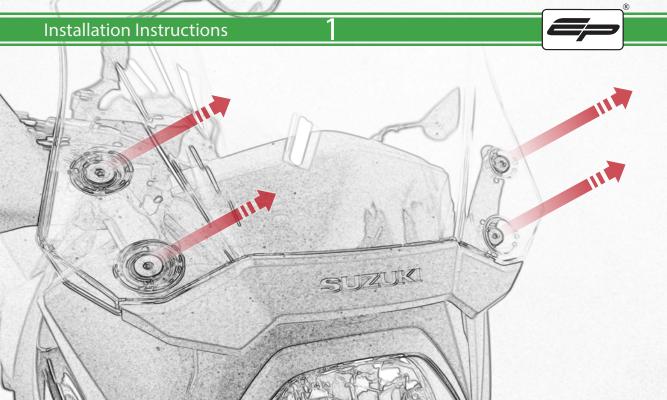

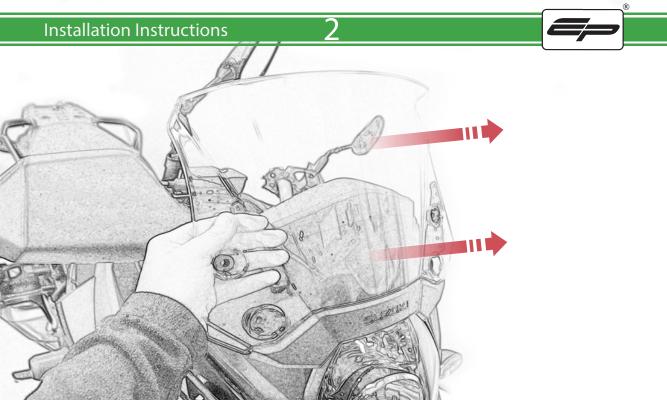


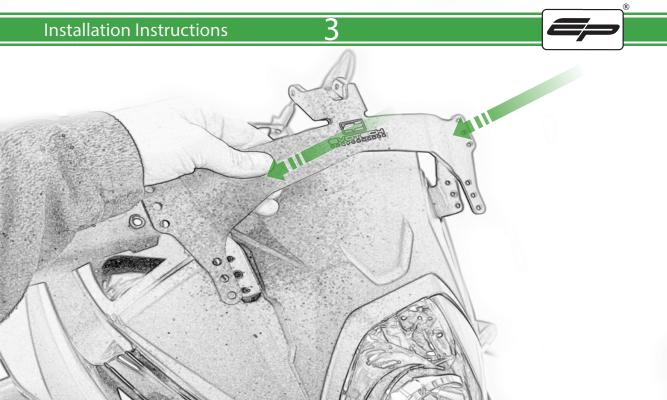

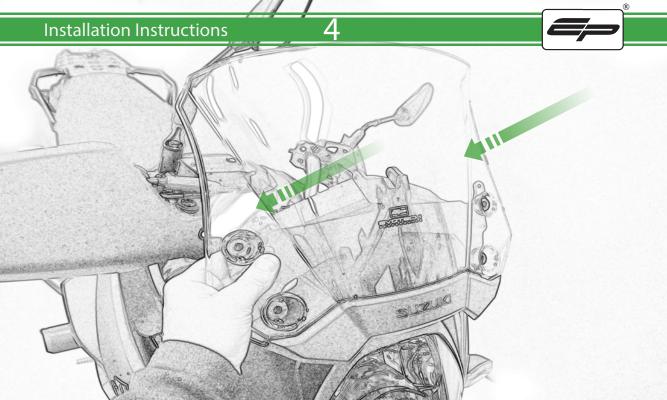


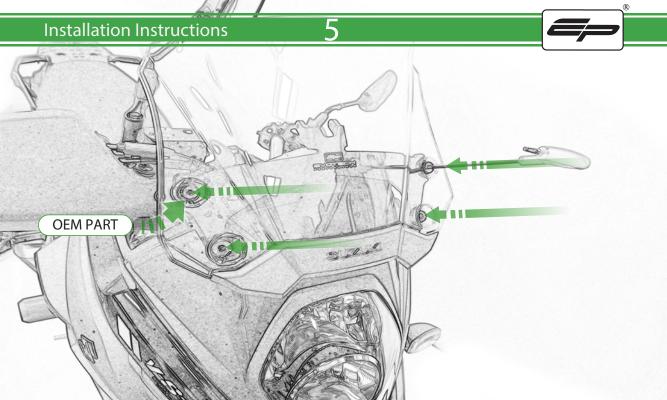



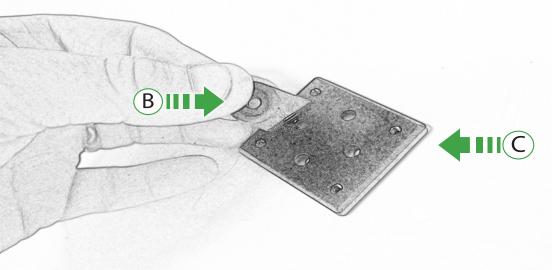



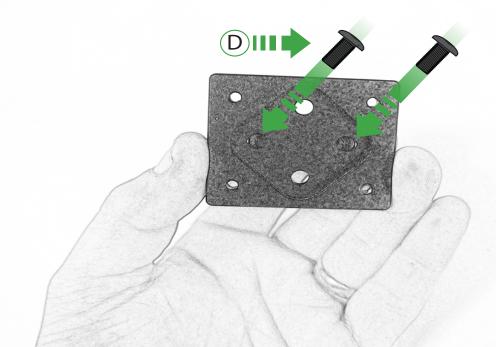









## 9



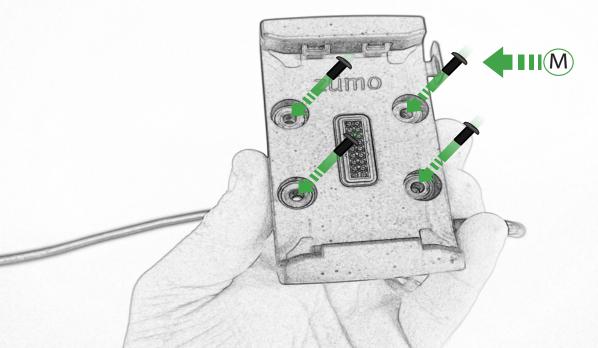




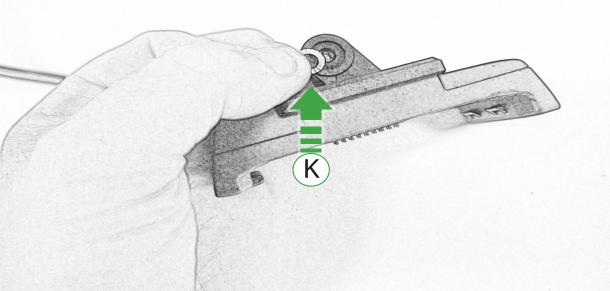







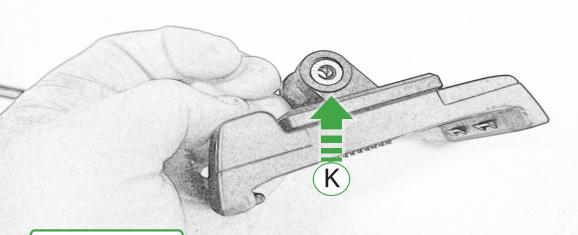


Repeat Both Sides




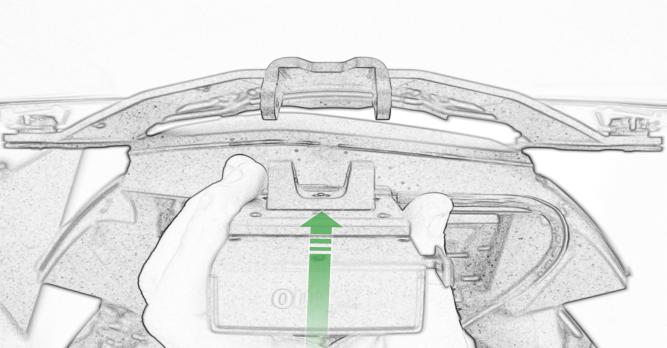

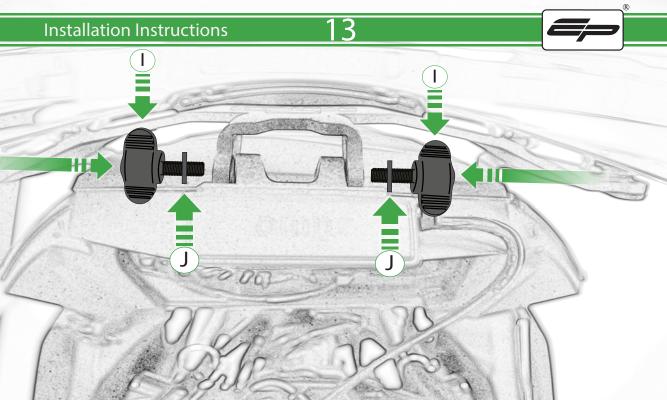



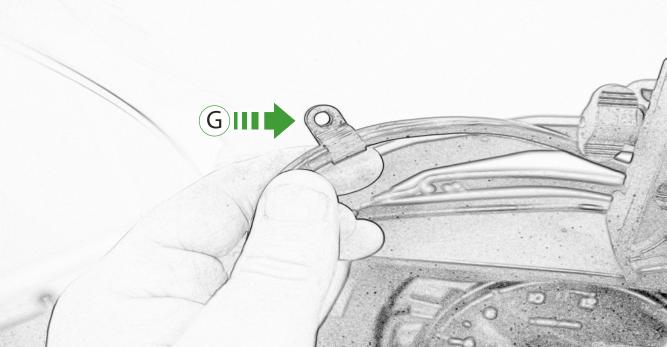

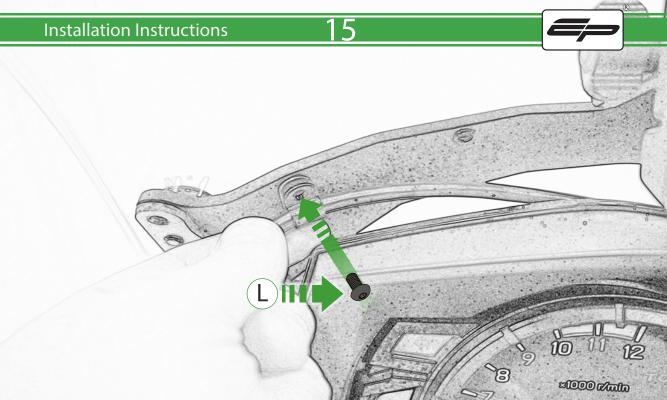





It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced





www.evotech-performance.com