

EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


BMW F 900 R / XR Tail Tidy


Installation Instructions




Kit Contents PRN015165

- (A) 1 x Light Body
- (B) 1 x Undertray
- (C) 1 x Undertray Plate
- (D) 1 x Numberplate Bracket
- (E) 1 x Inner Support Bracket
- (F) 2 x Indicator Spacer
- (G) 2 x M4 x 10 Button Head Bolts
- (H) 2 x Special Washer
- (I) 2 x M5 x 16 Button Head Bolts
- (J) 2 x Undertray Spacer A
- (K) 2 x Undertray Spacer B
- (L) 4 x M6 x 16mm Button Head Bolts

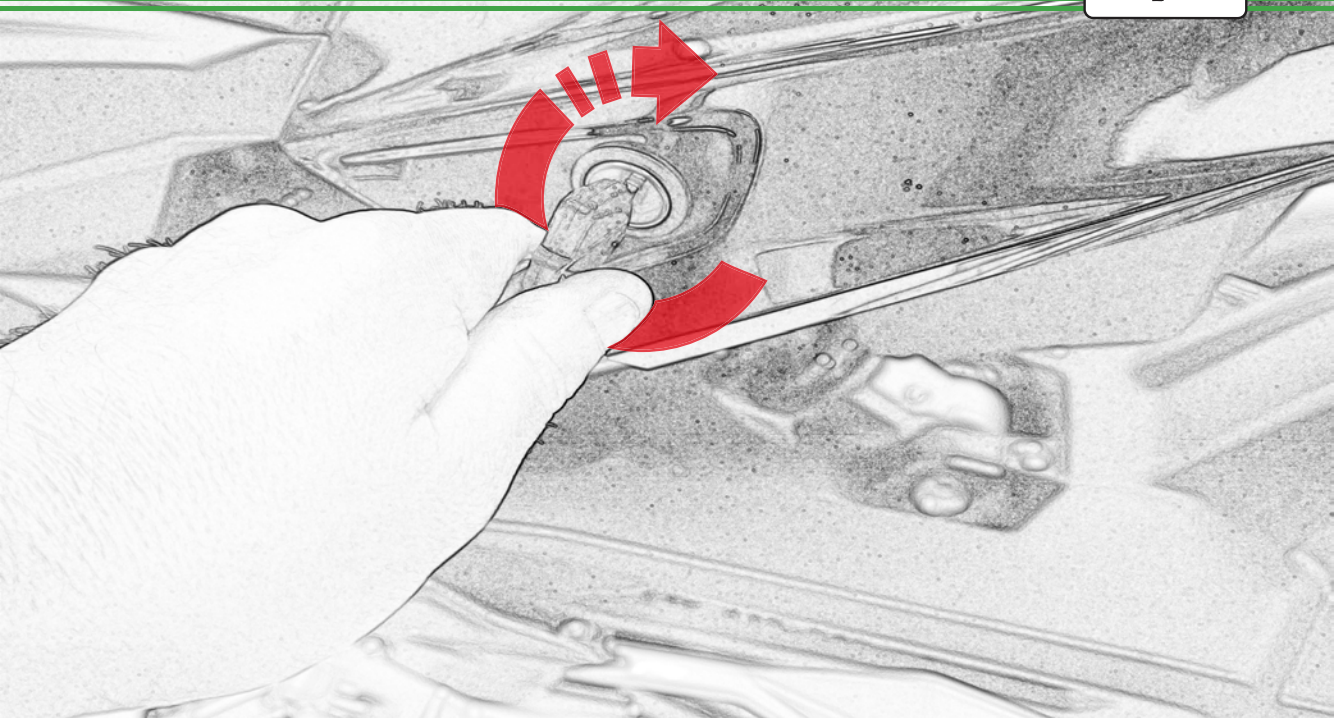


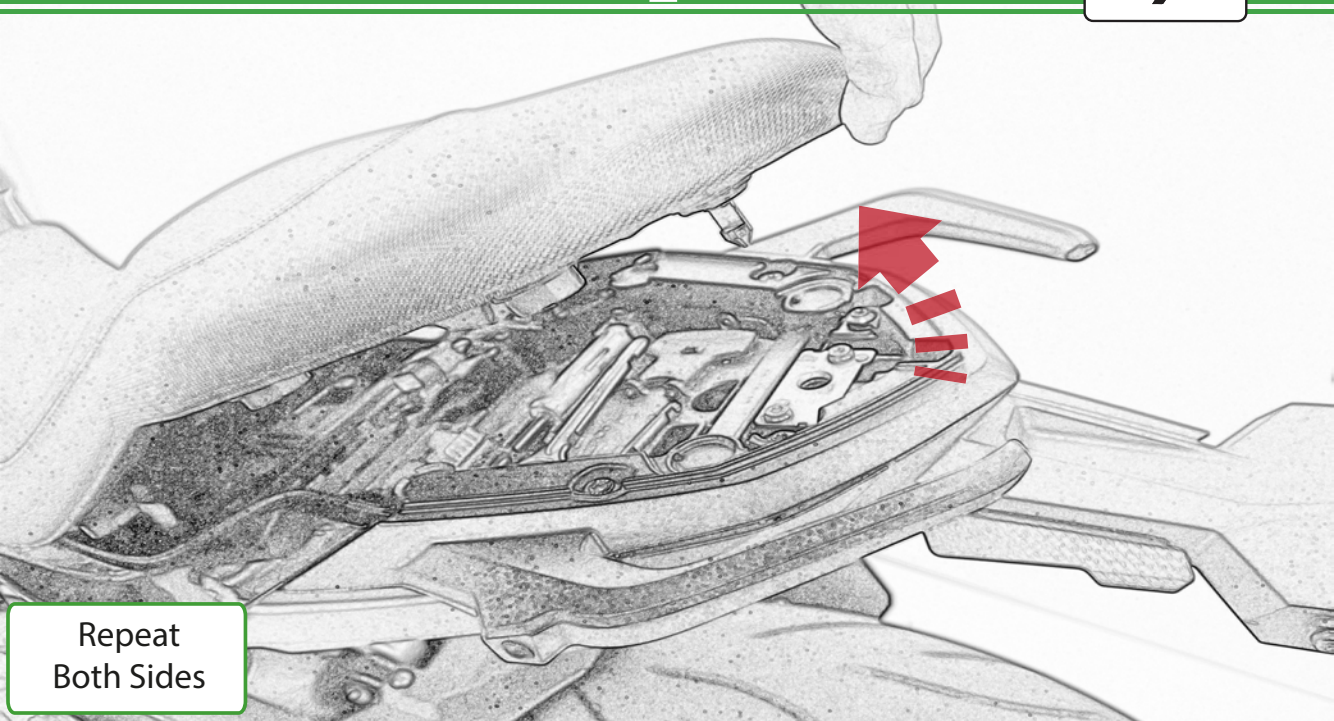


Repeat
Both Sides

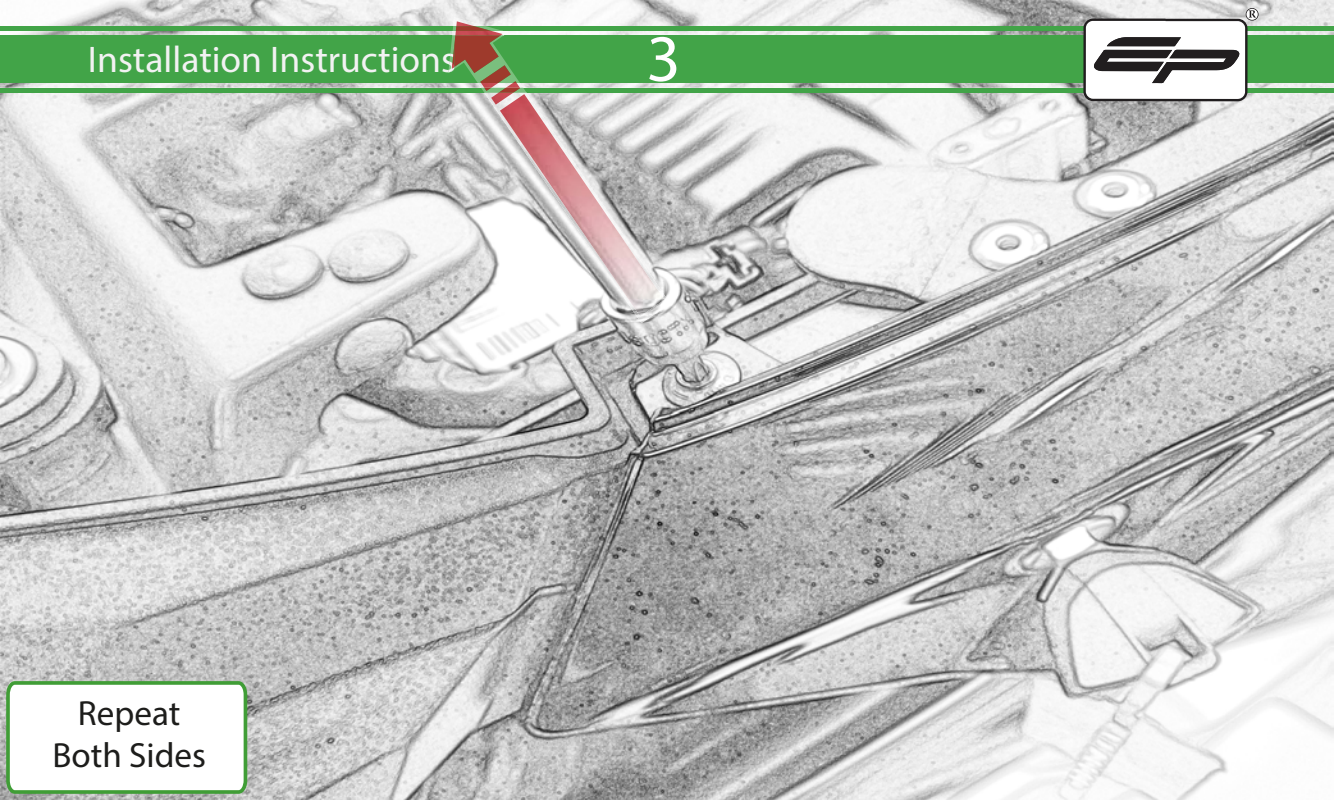


Repeat
Both Sides

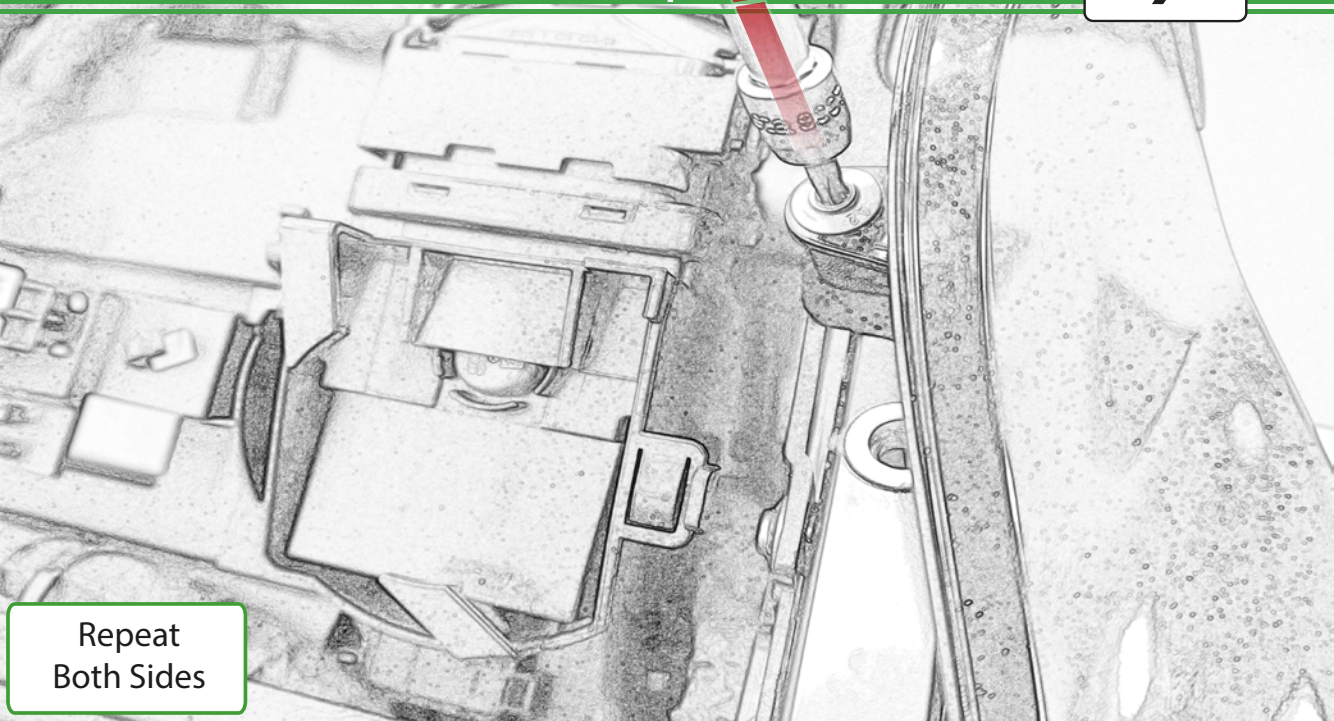


Repeat
Both Sides

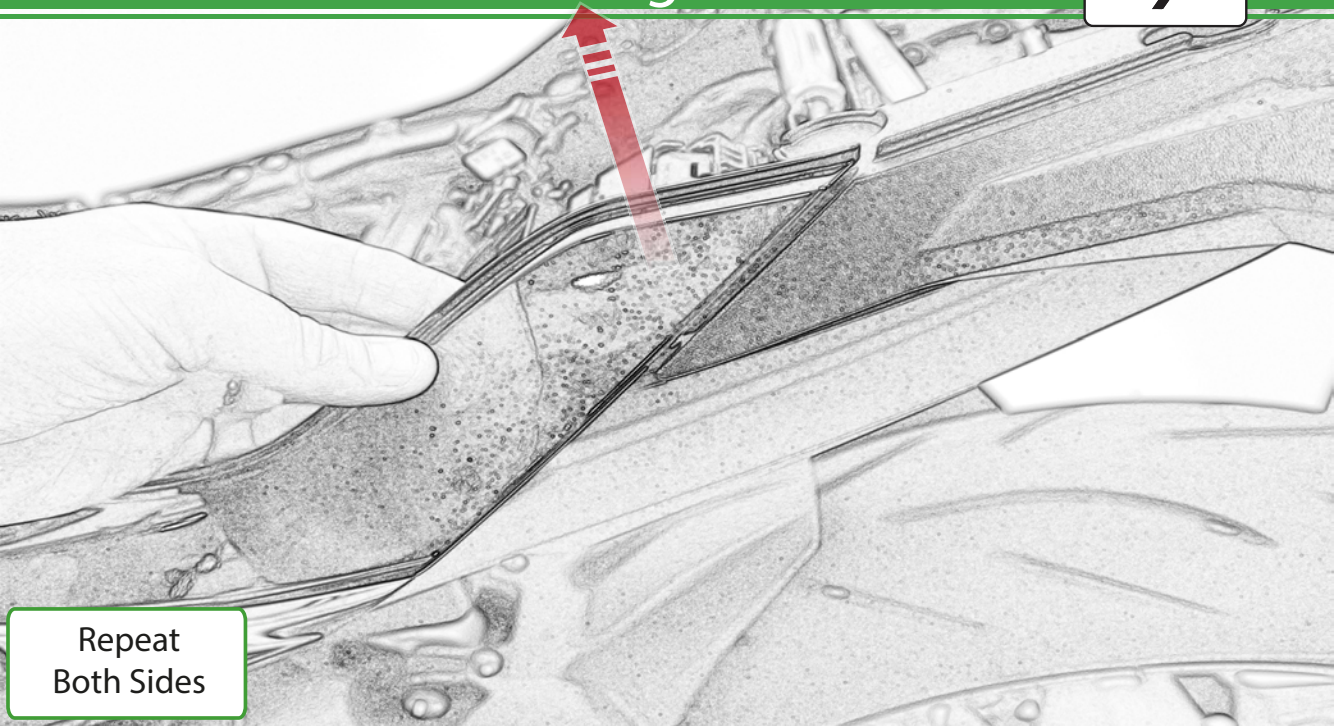


Repeat
Both Sides

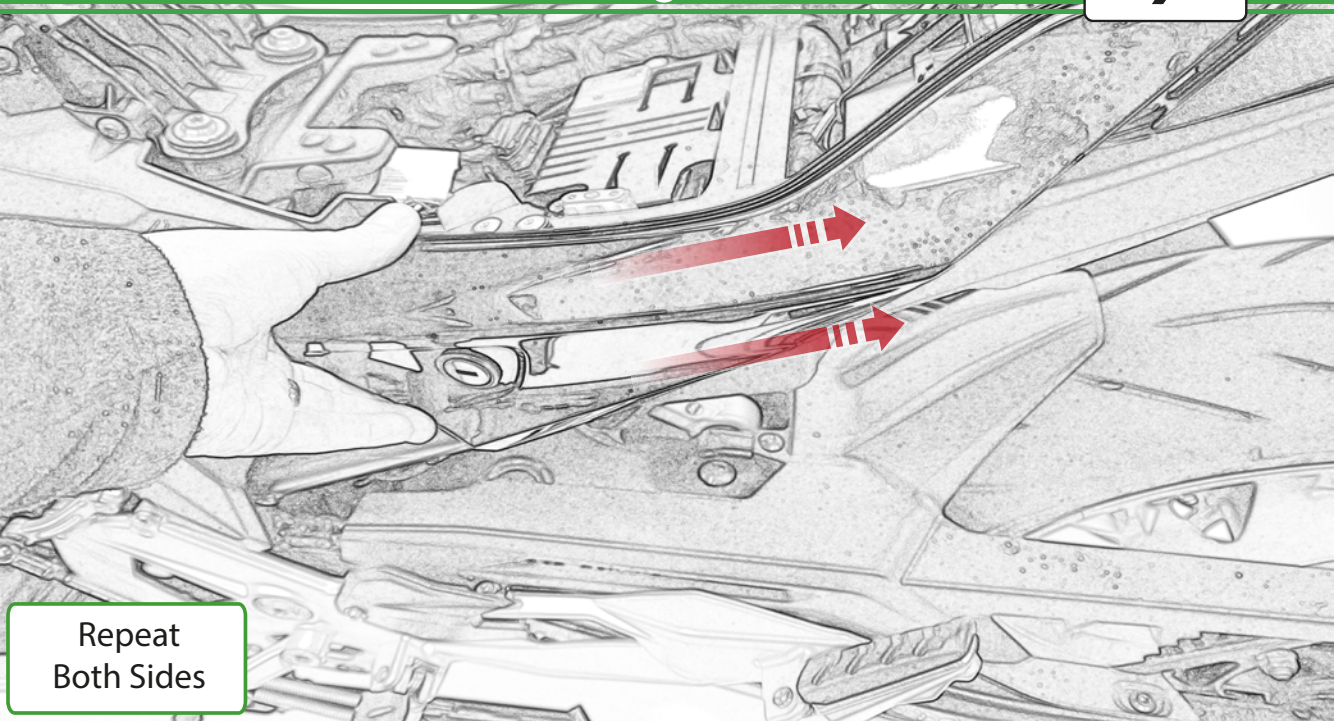

Repeat
Both Sides

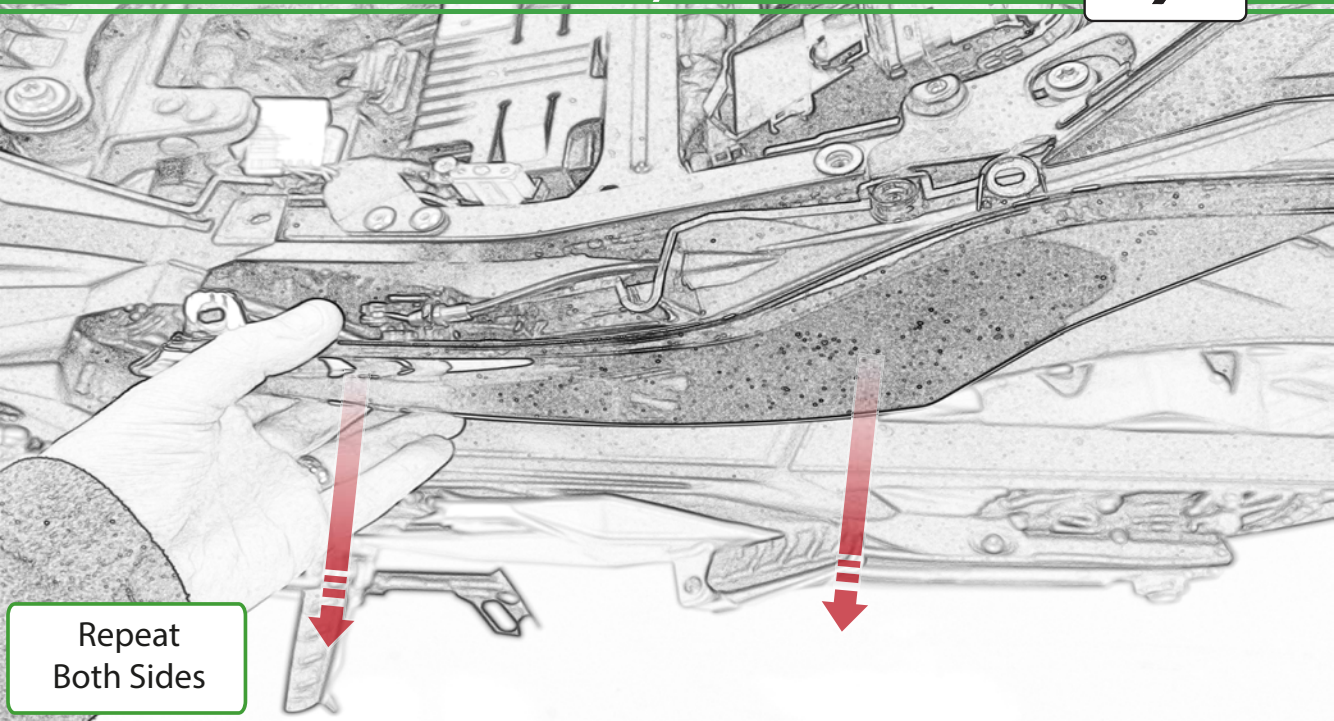


Repeat
Both Sides

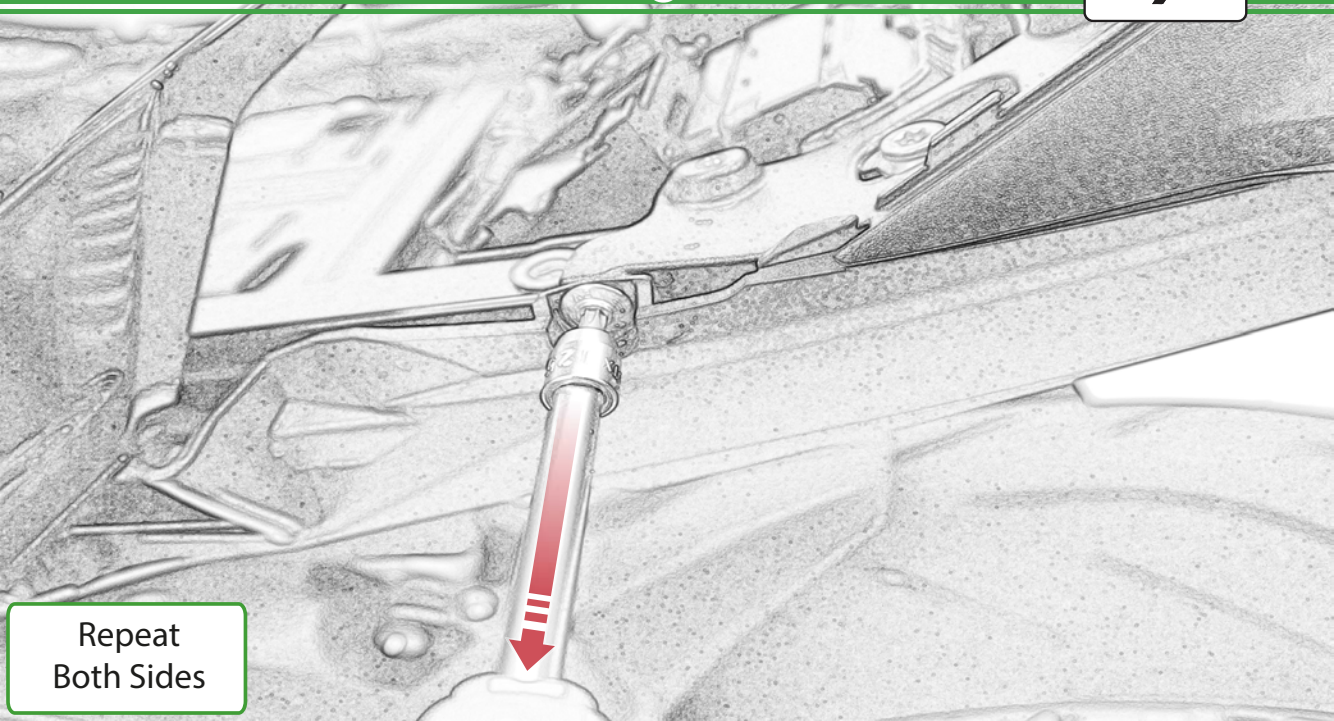


Repeat
Both Sides




Repeat
Both Sides

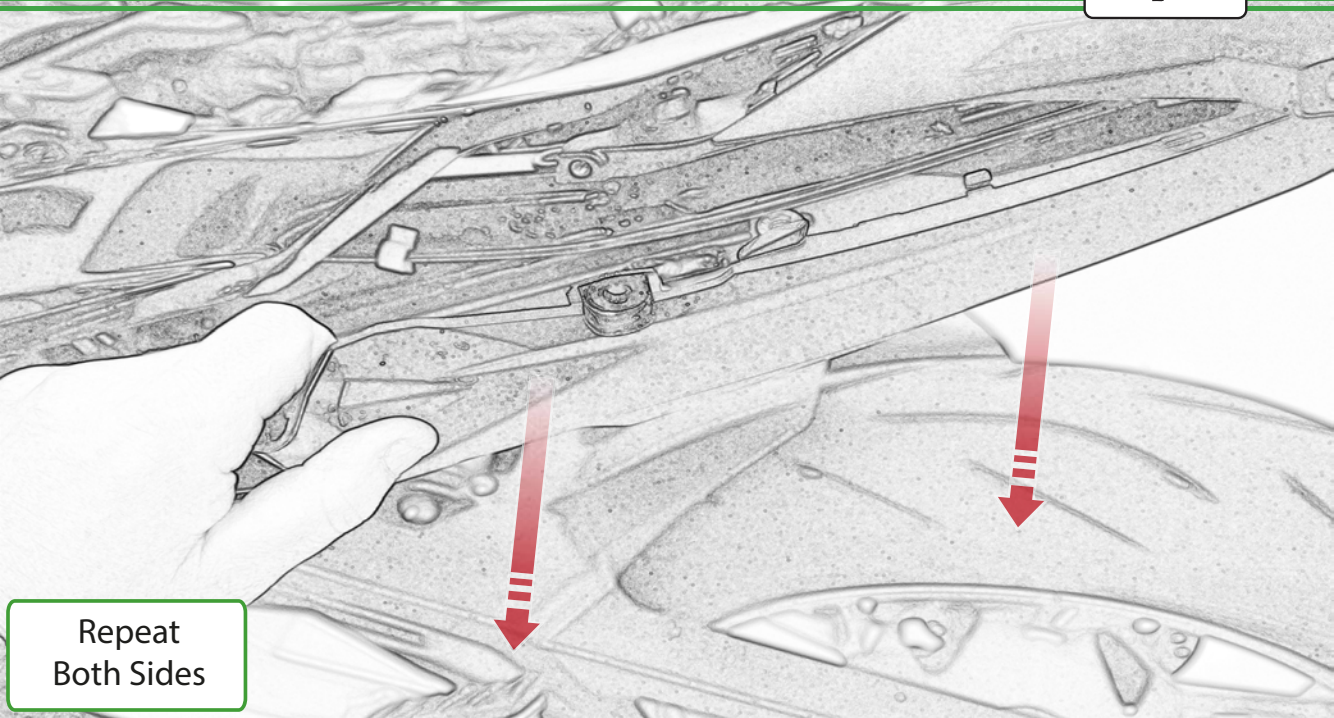


Repeat
Both Sides

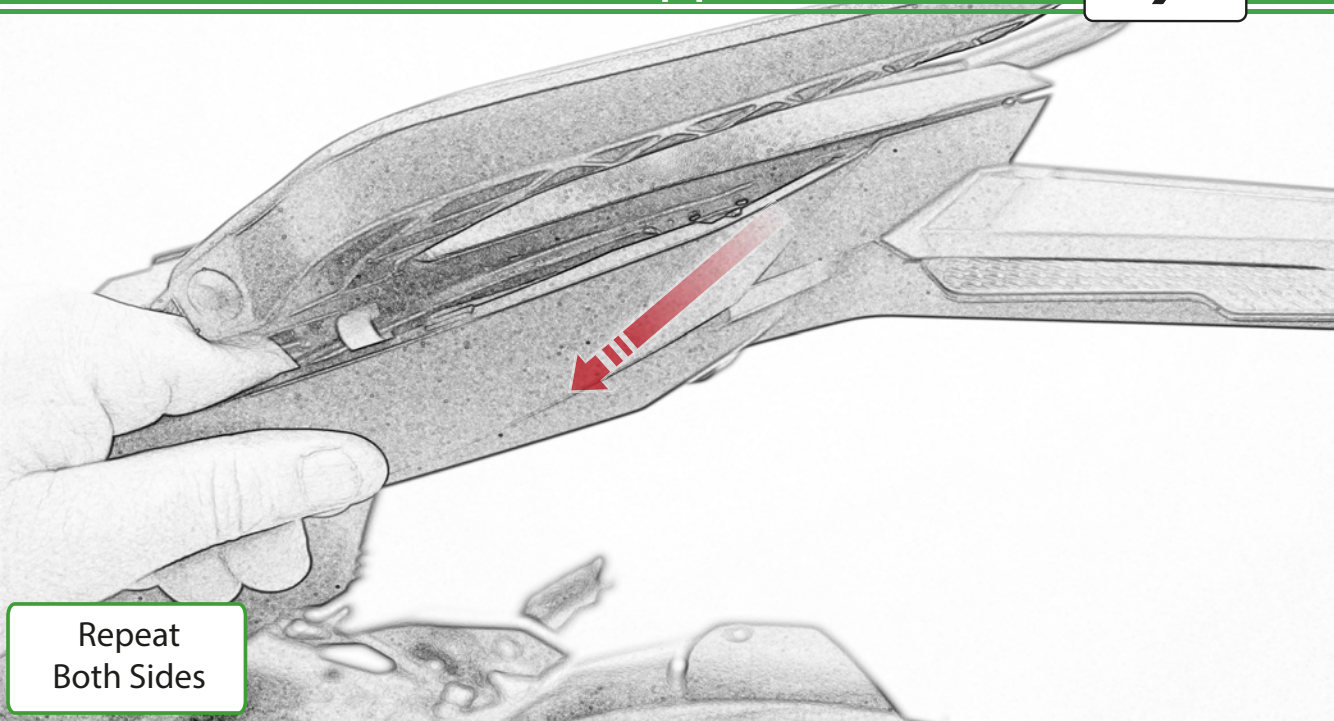


Repeat
Both Sides

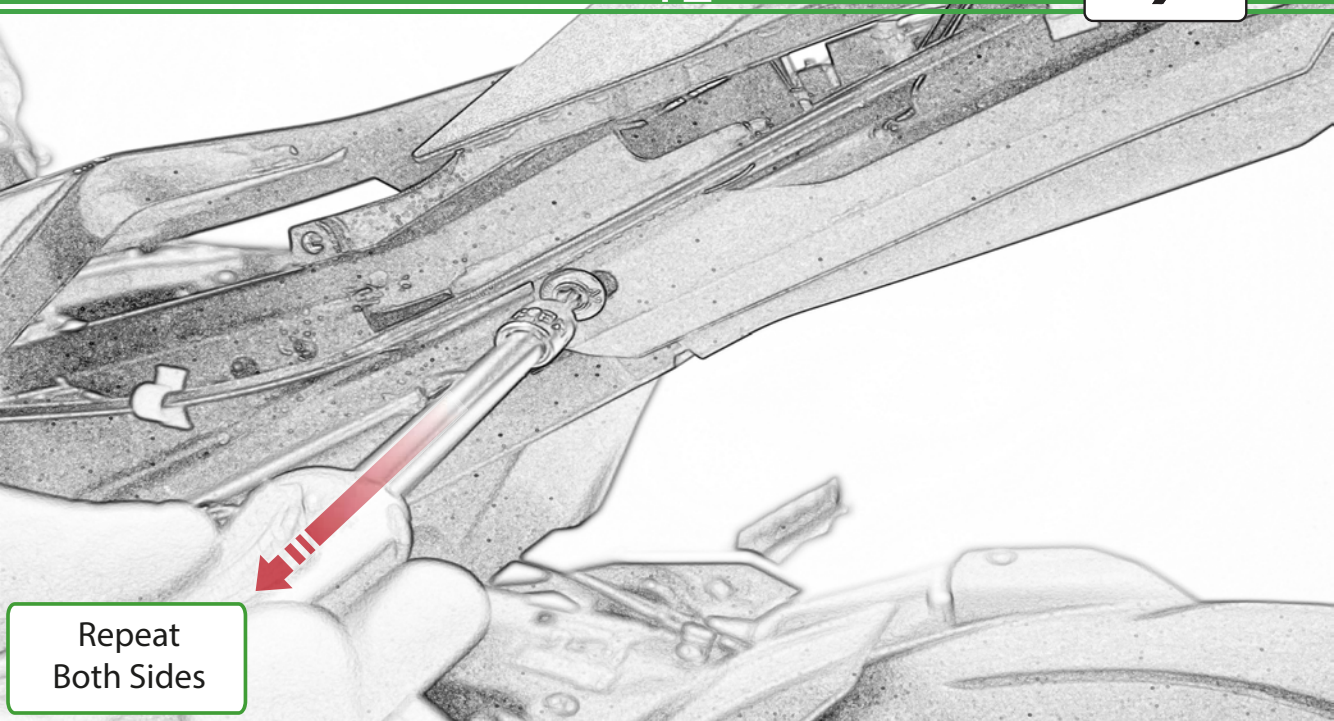



Repeat
Both Sides

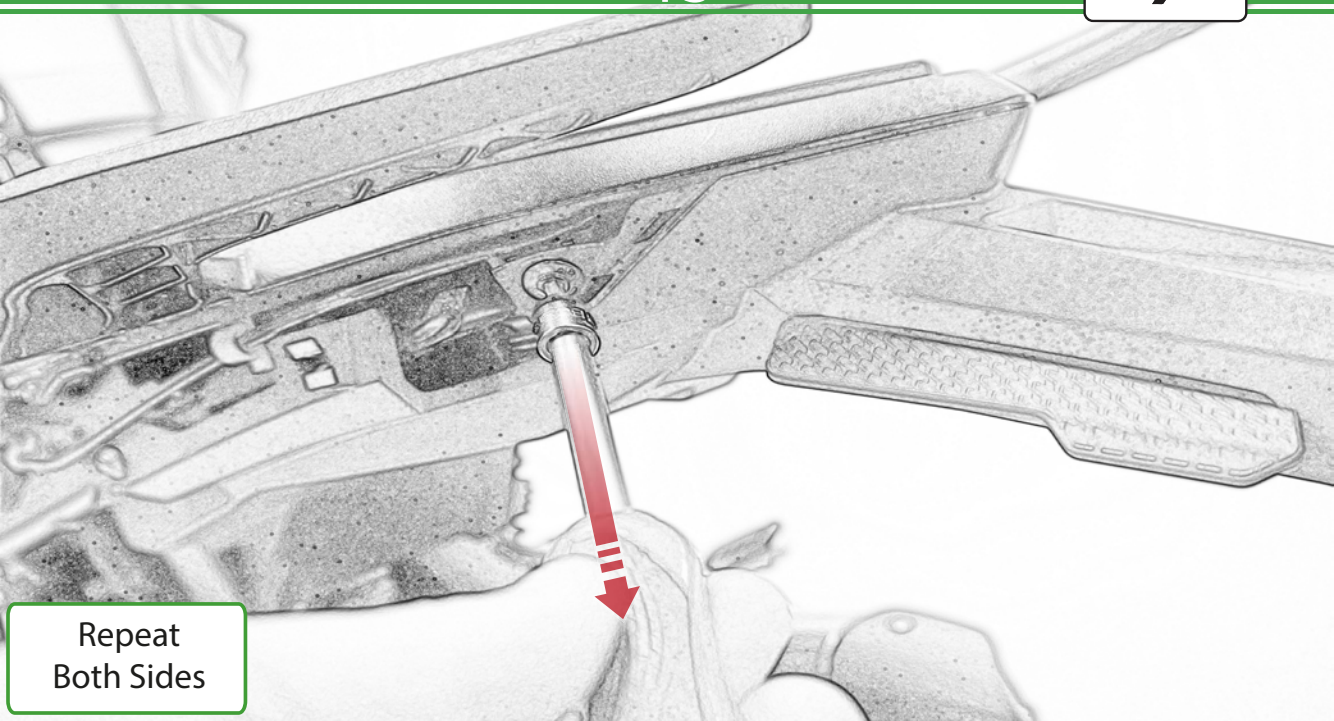



Repeat
Both Sides

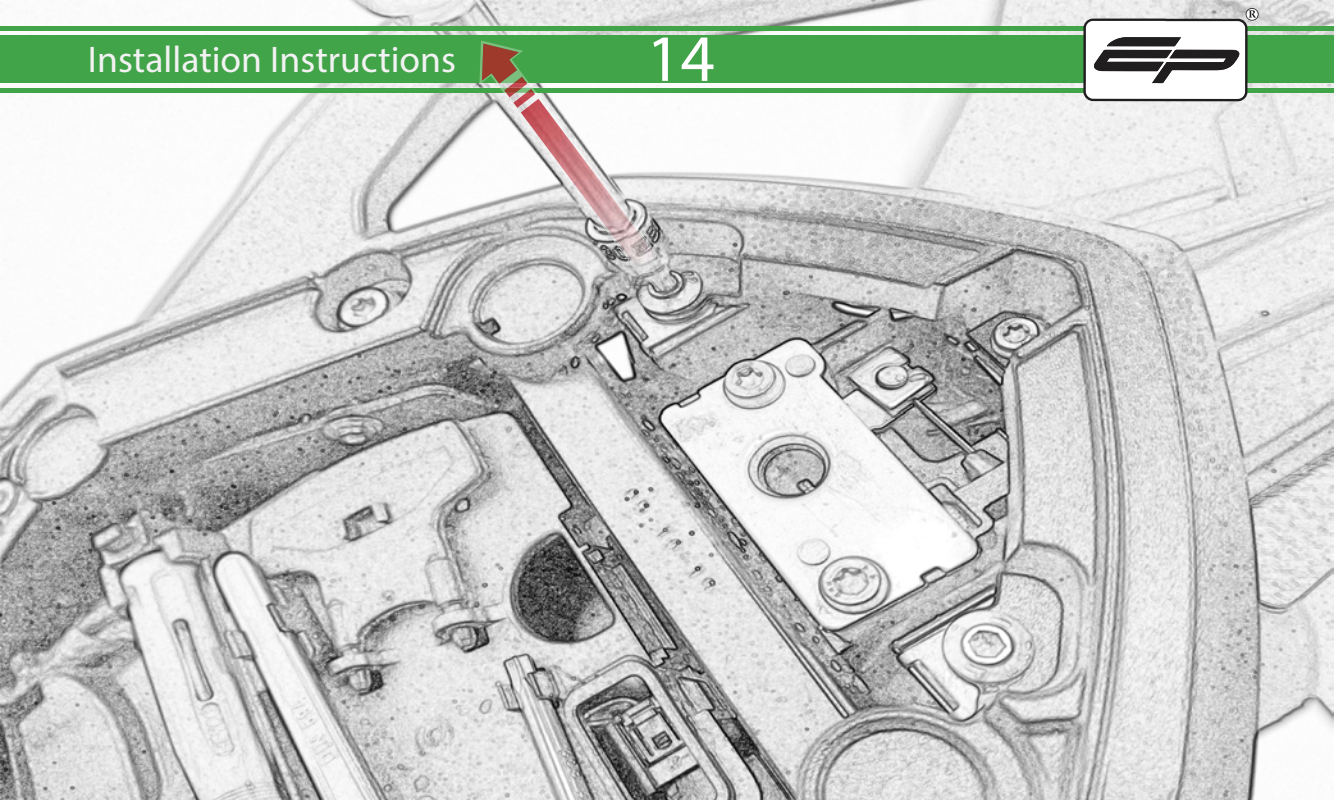


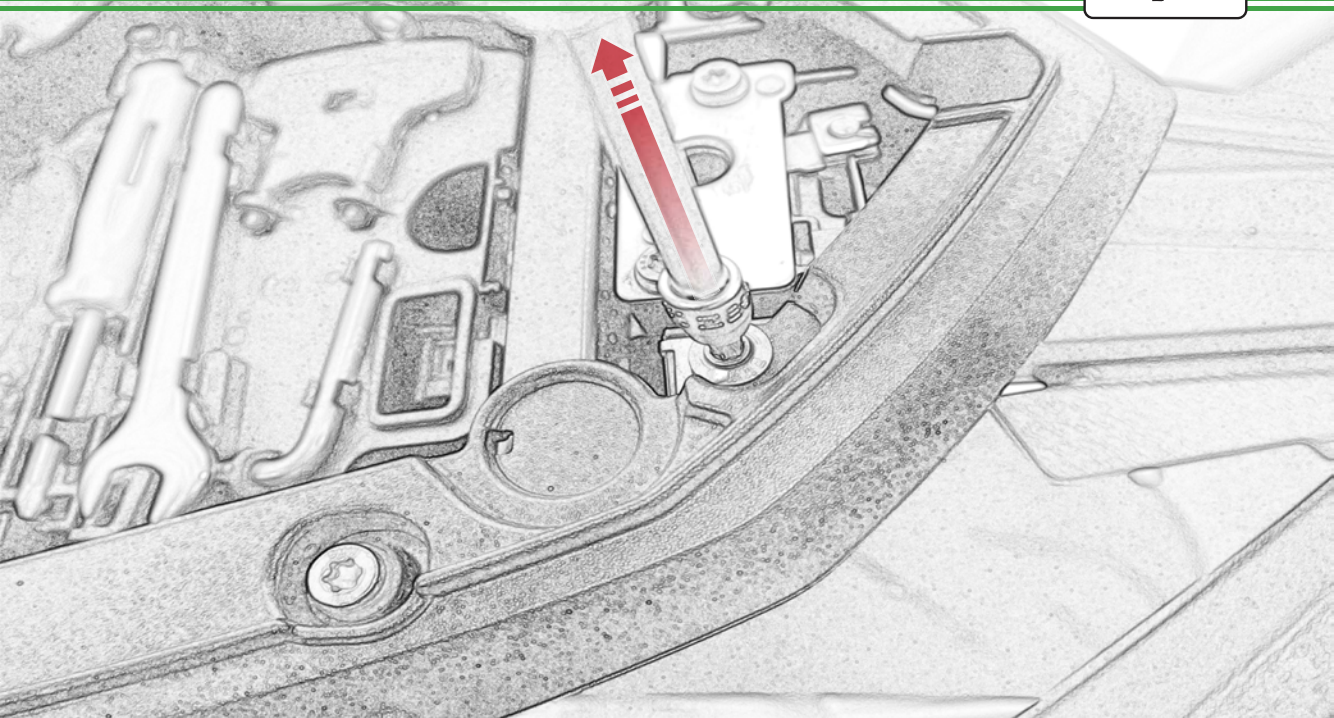


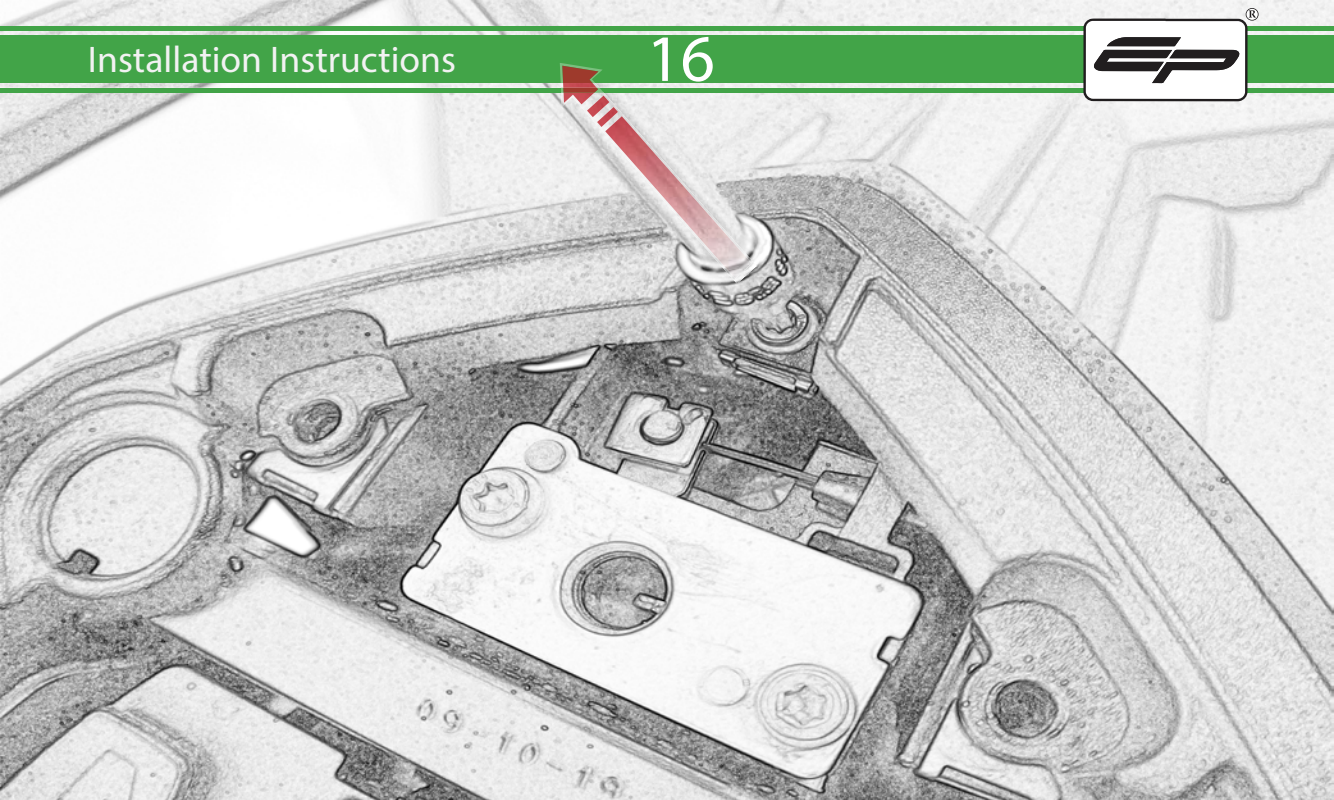


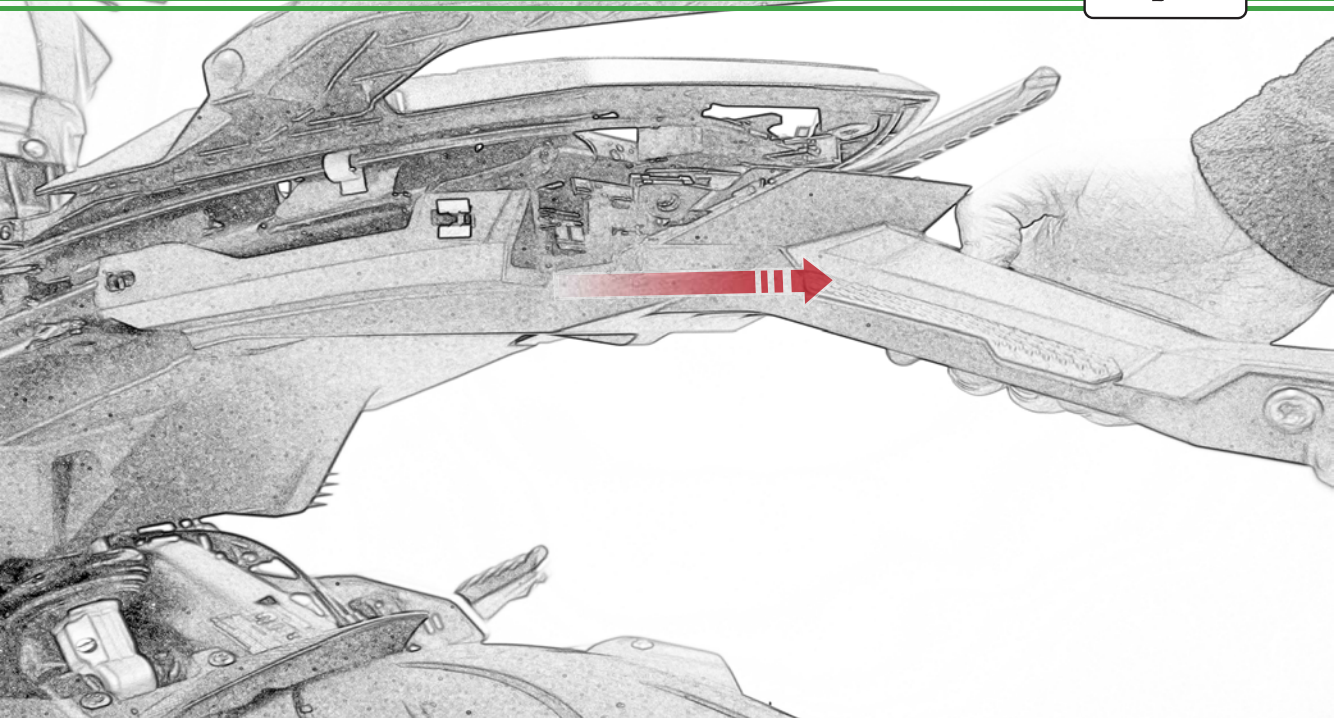


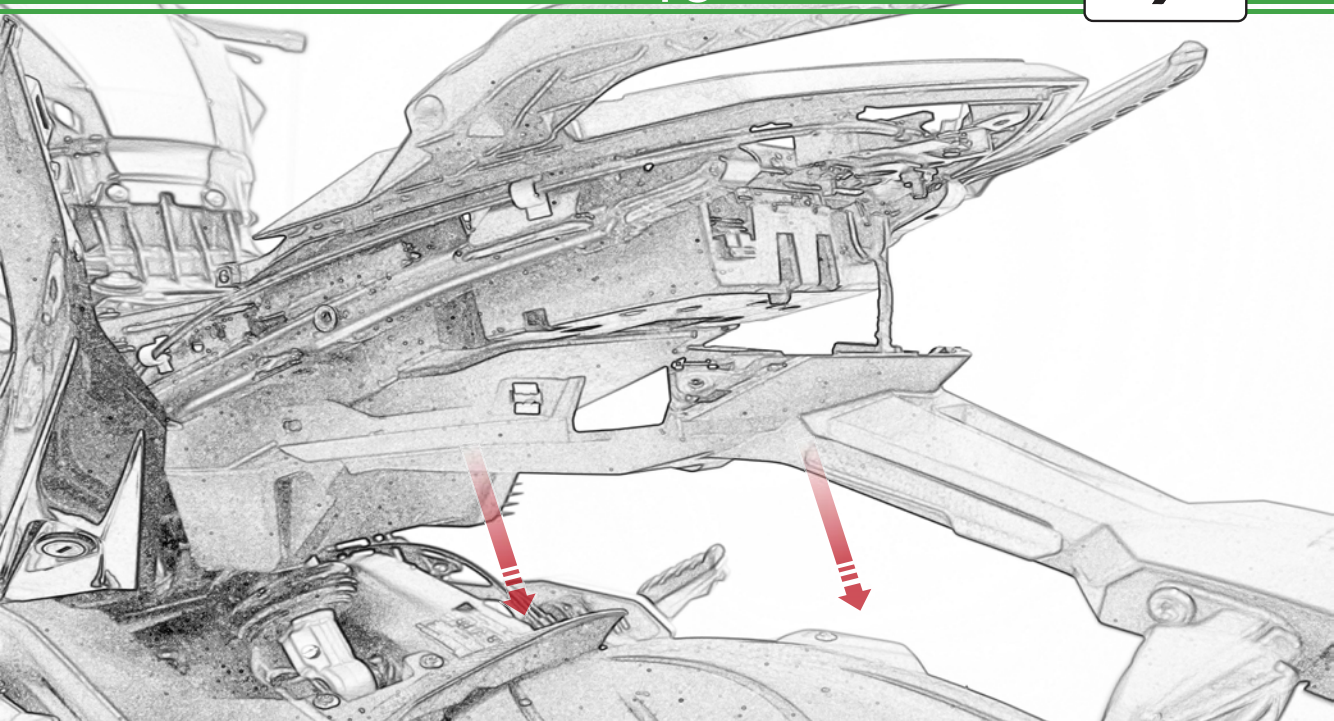



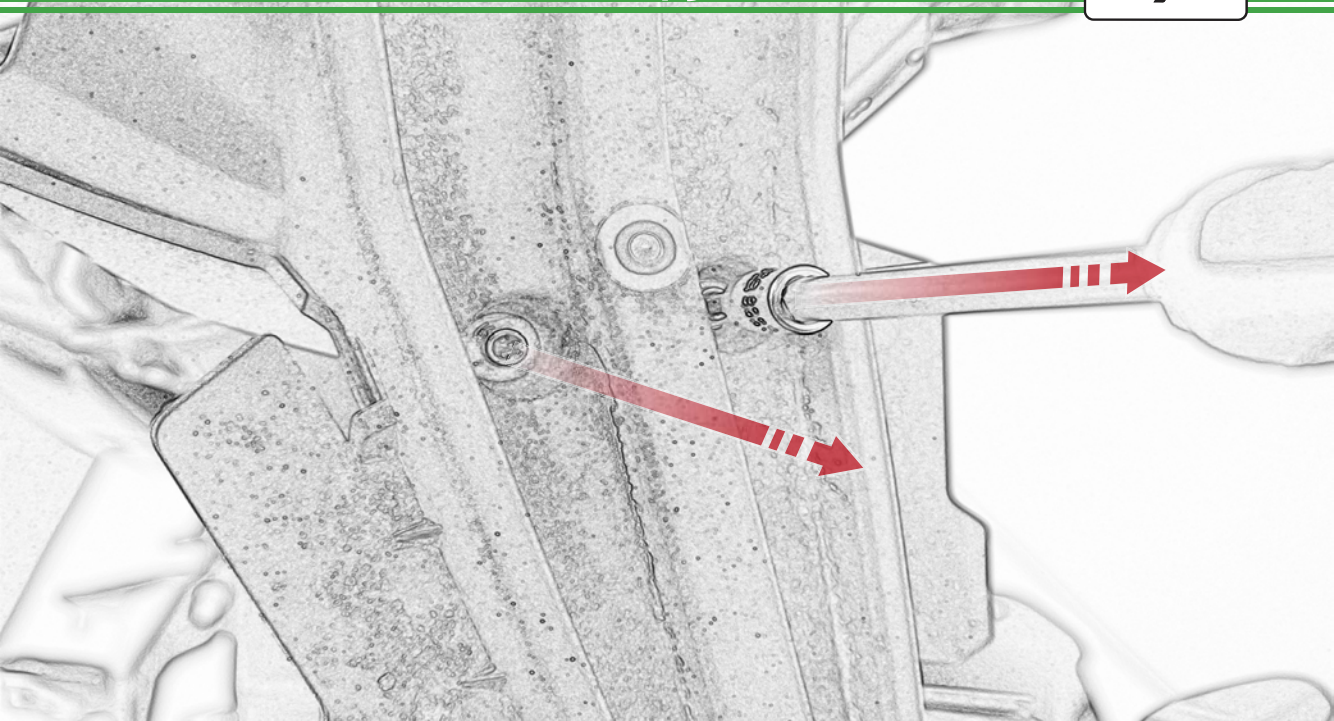



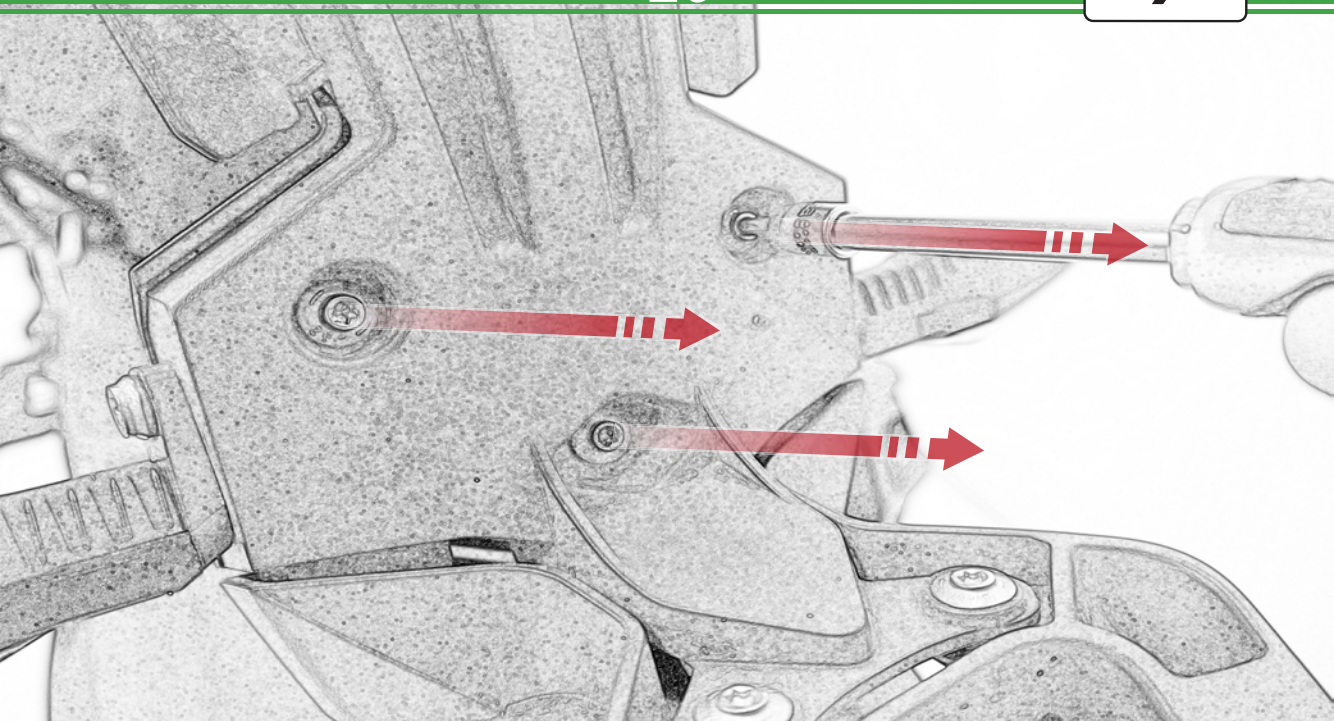


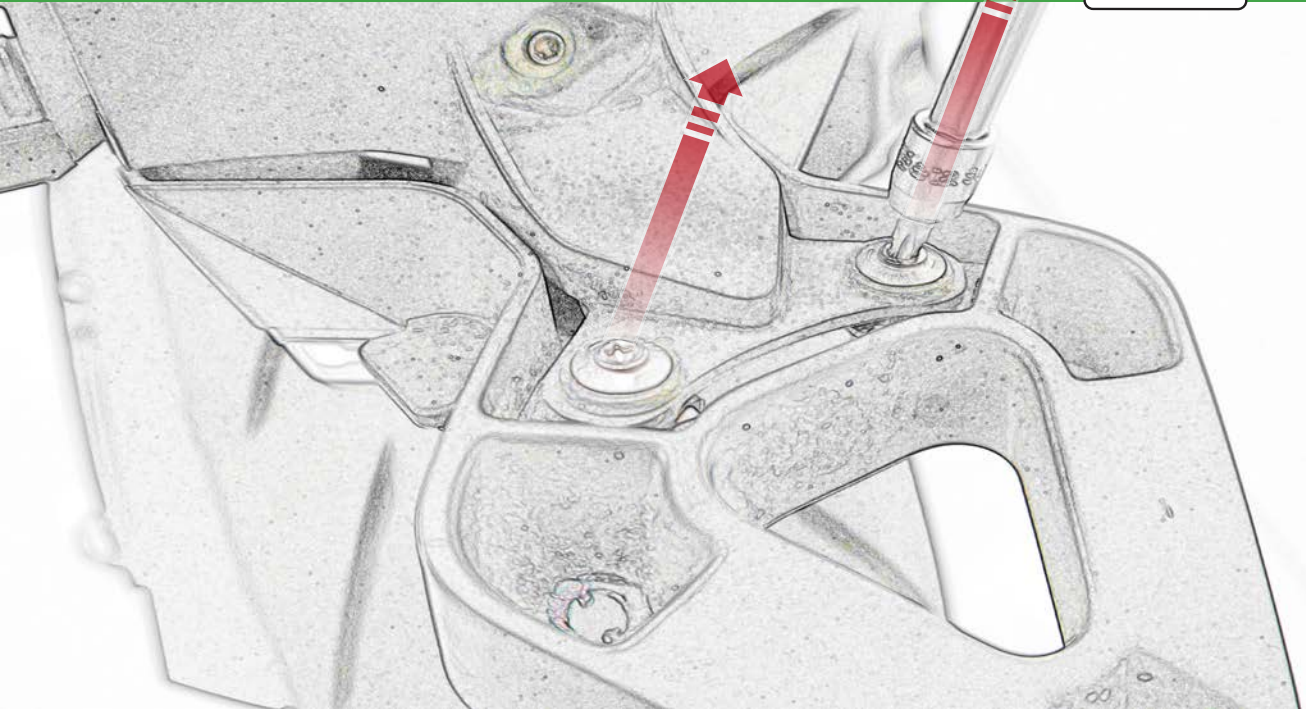


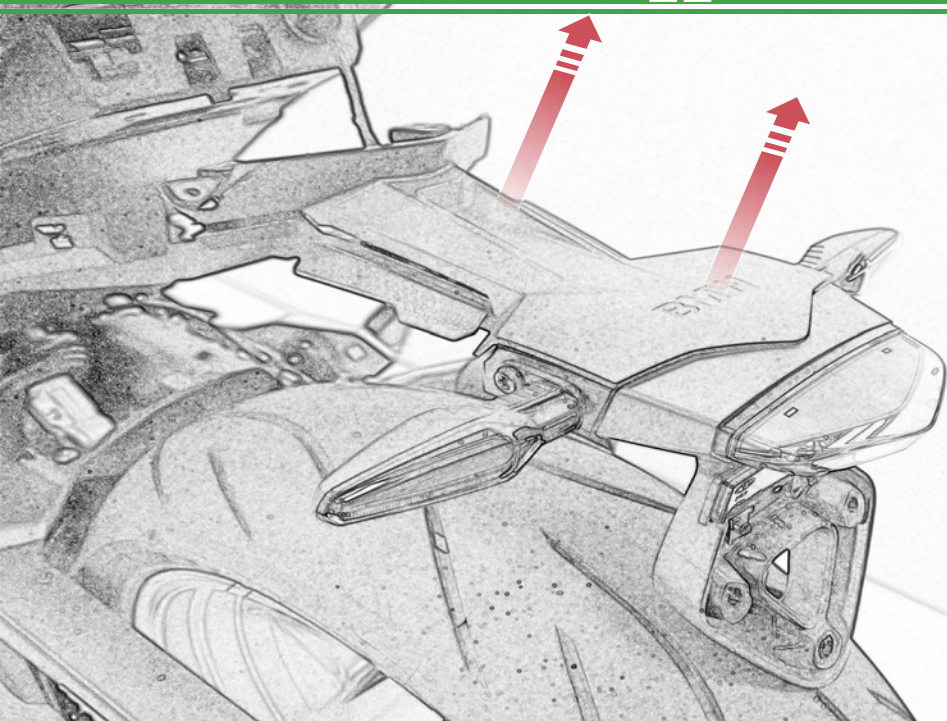


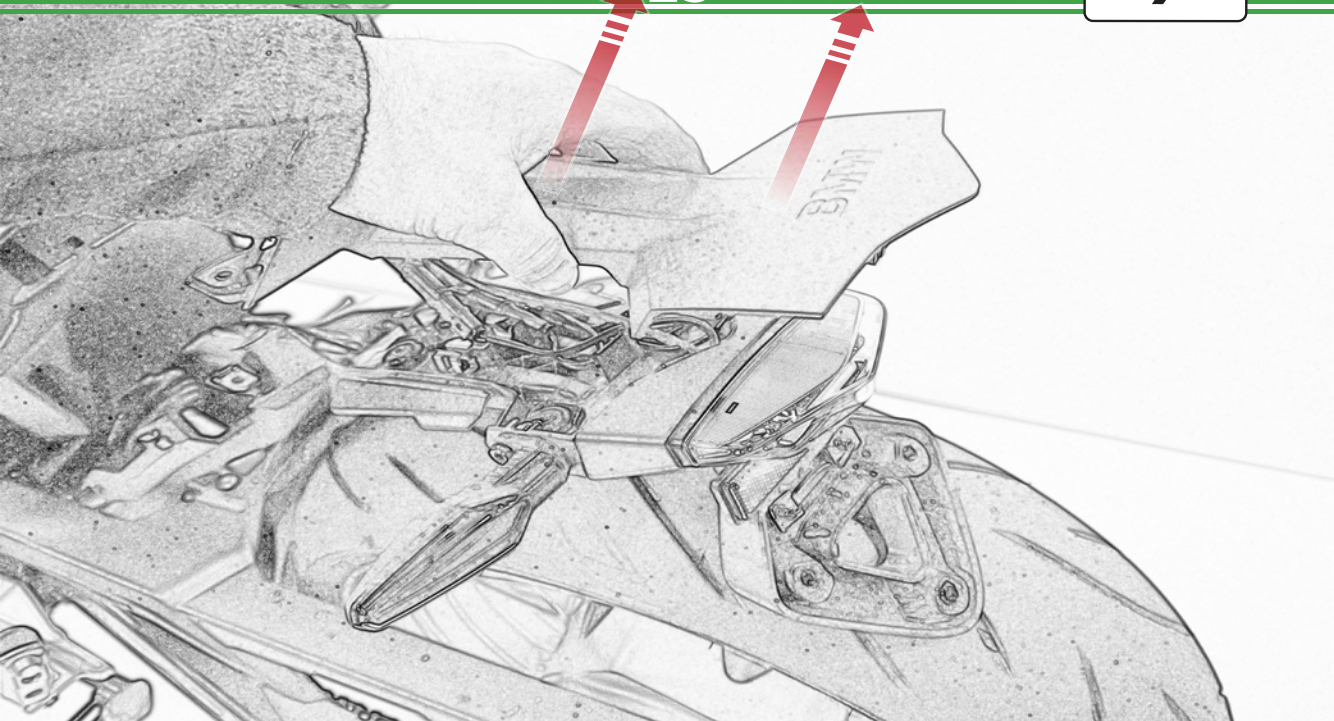

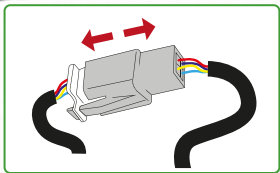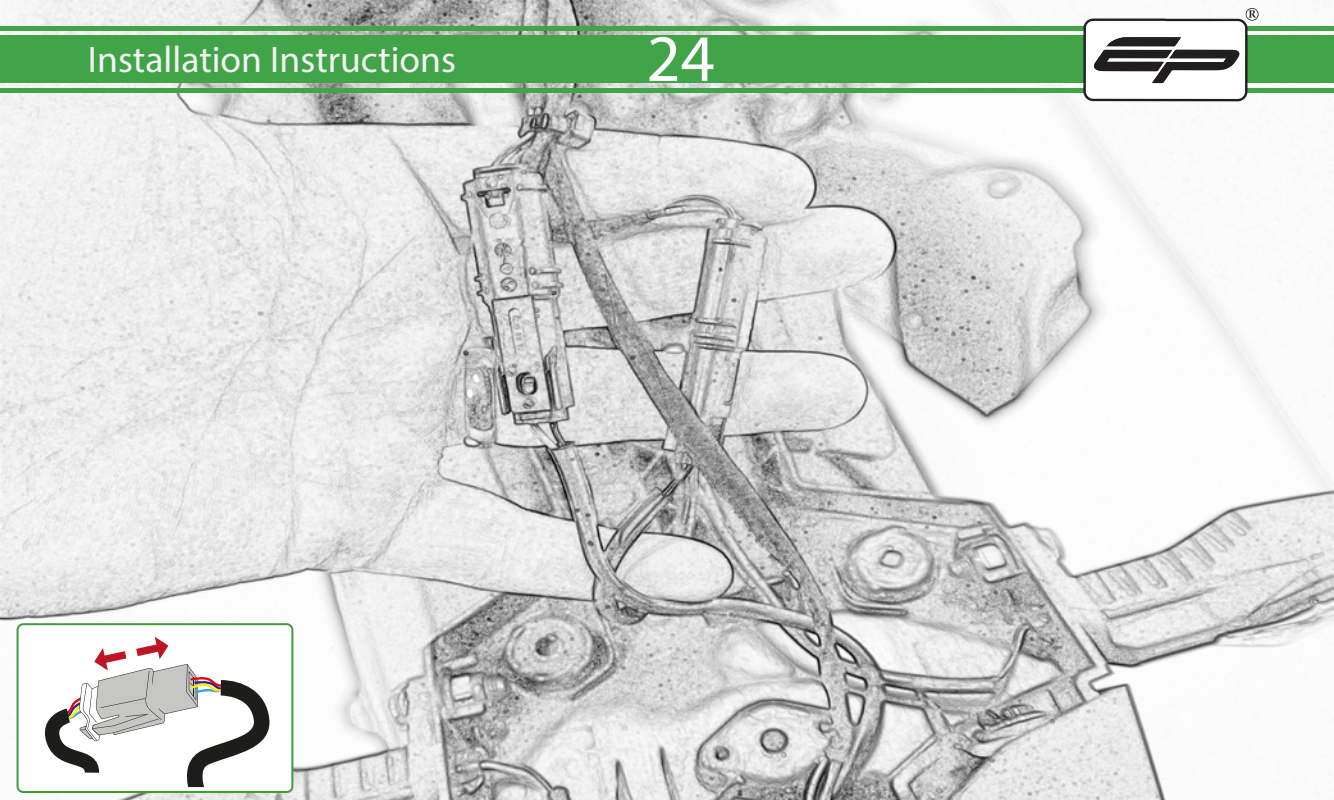


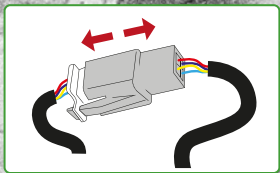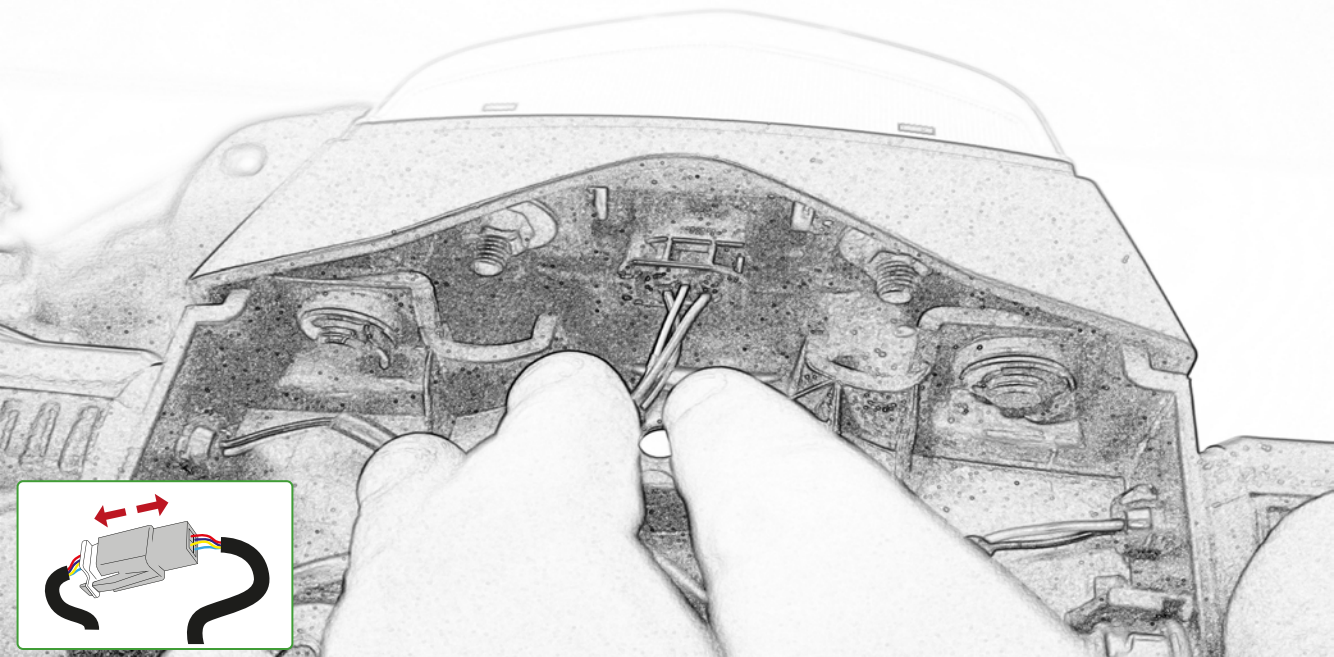

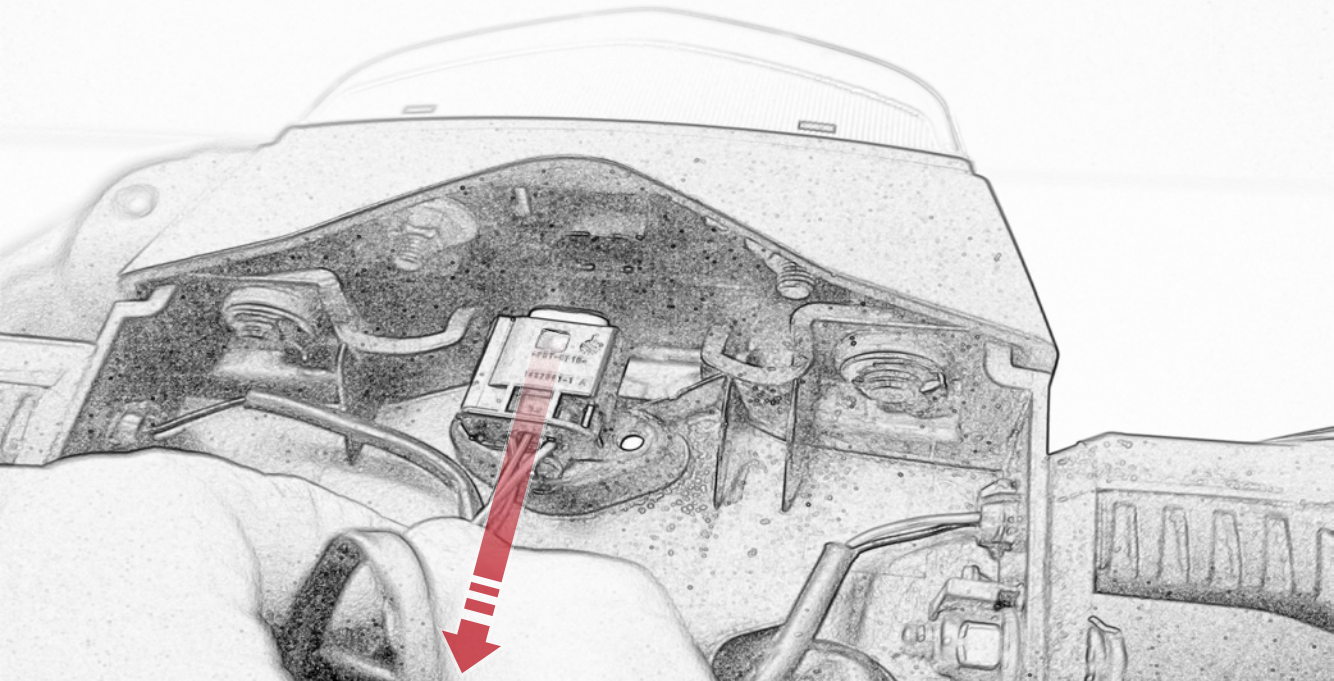


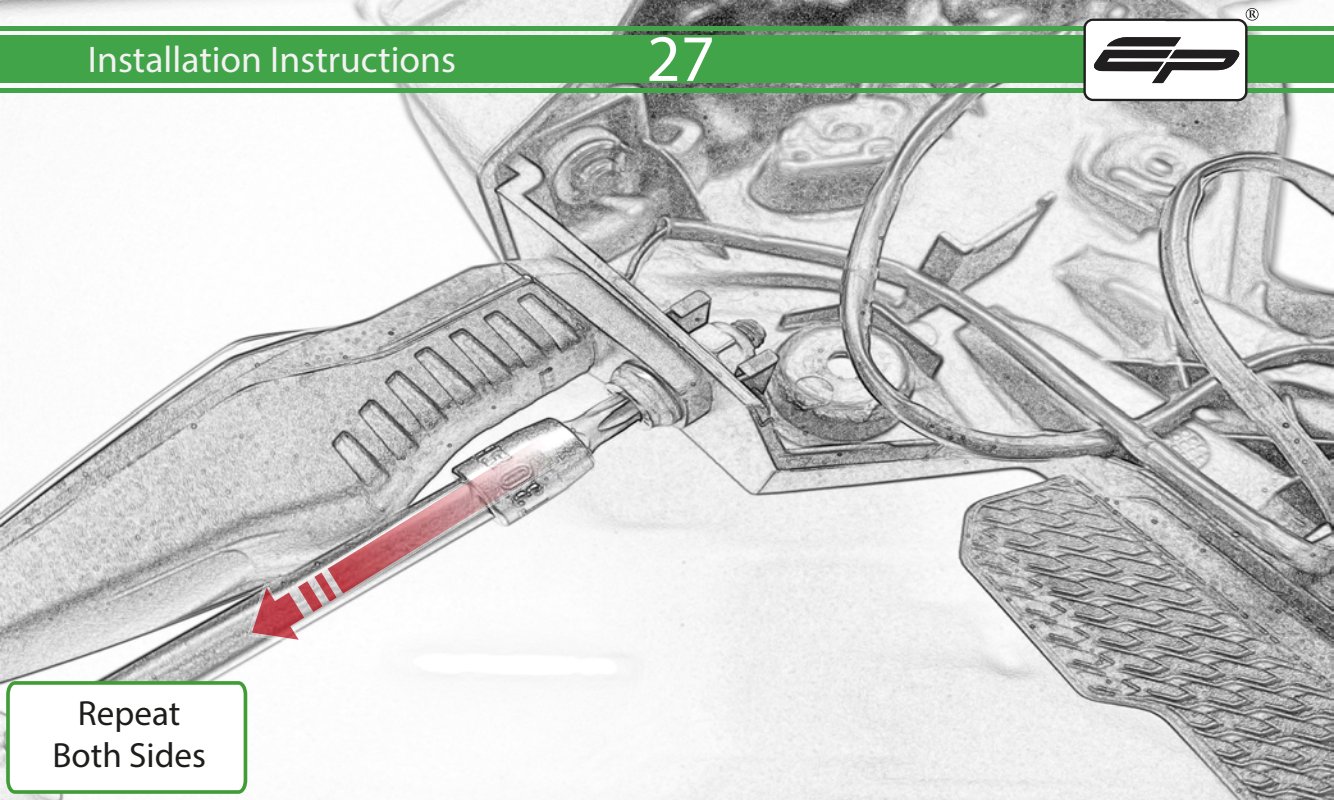


Repeat
Both Sides

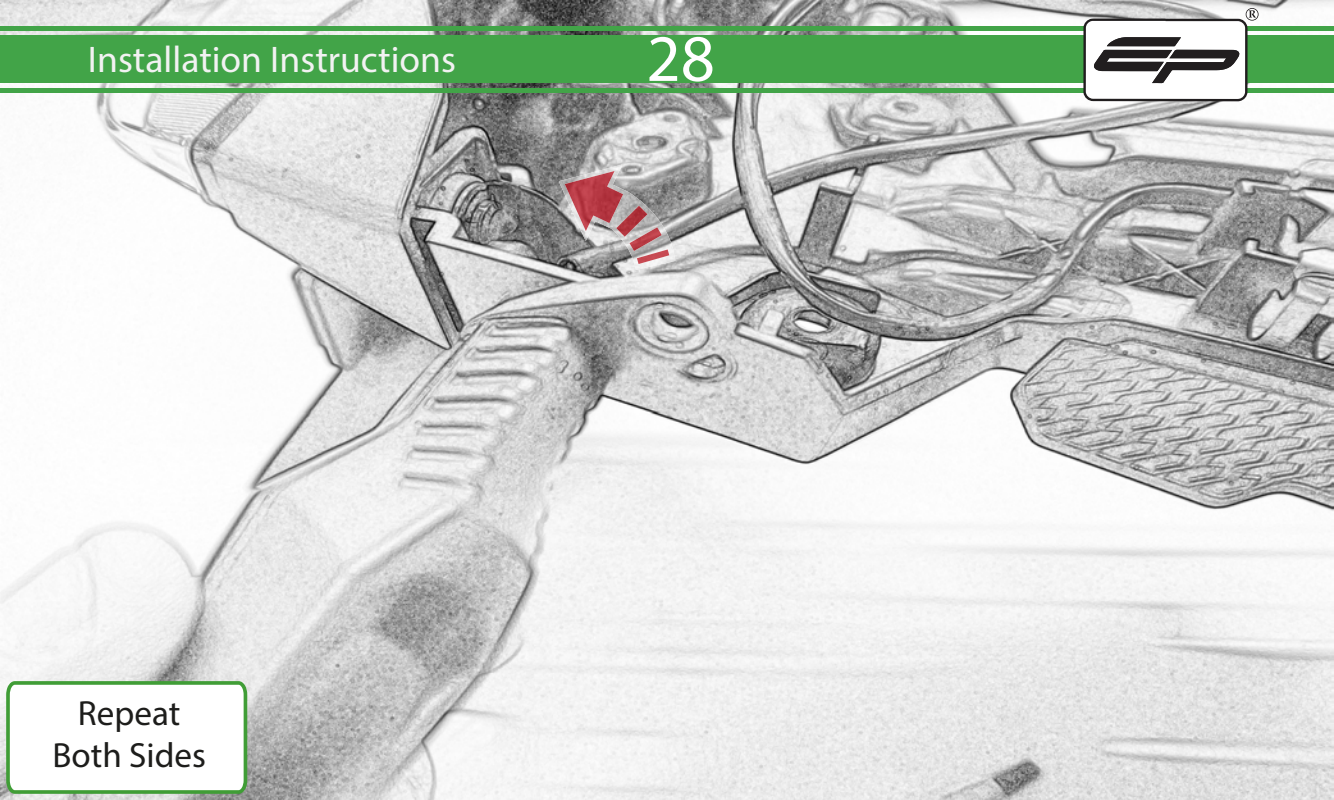


Repeat
Both Sides

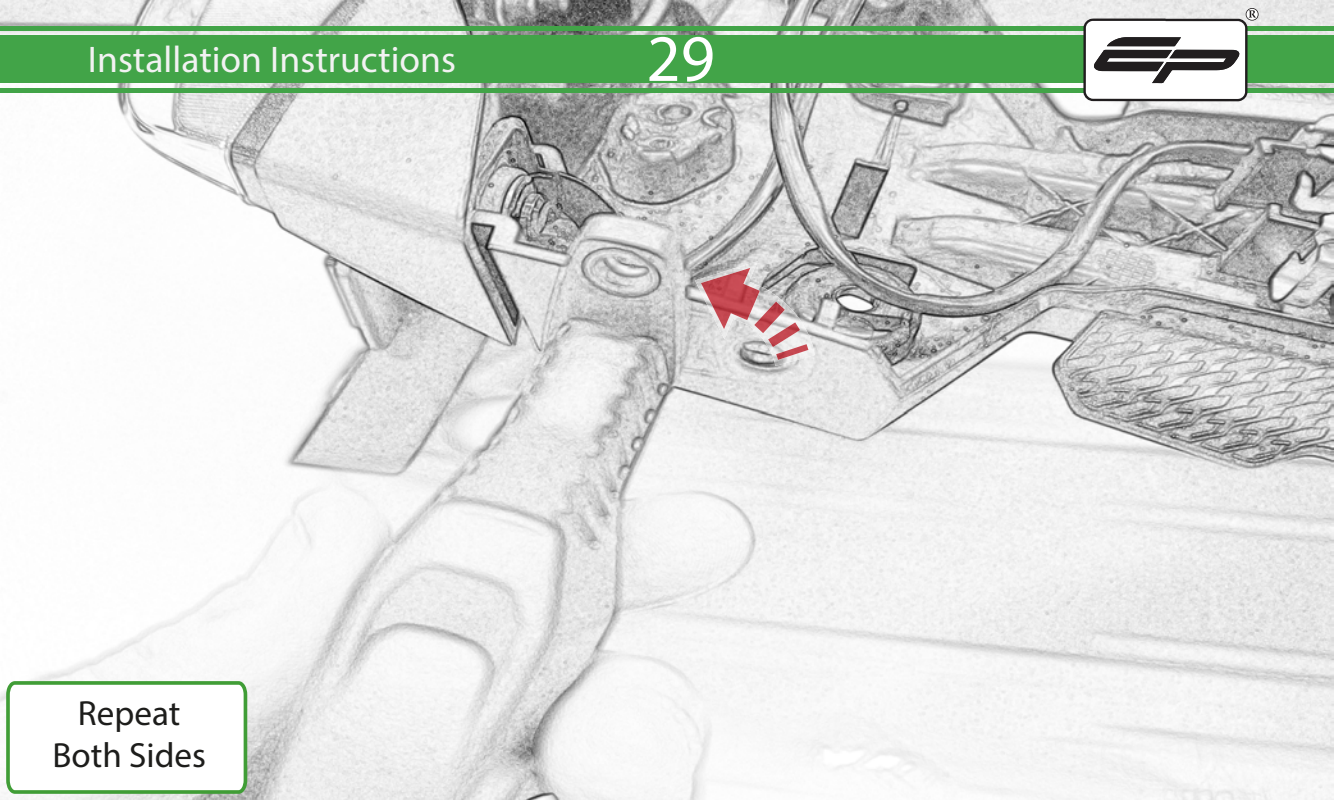



Repeat
Both Sides

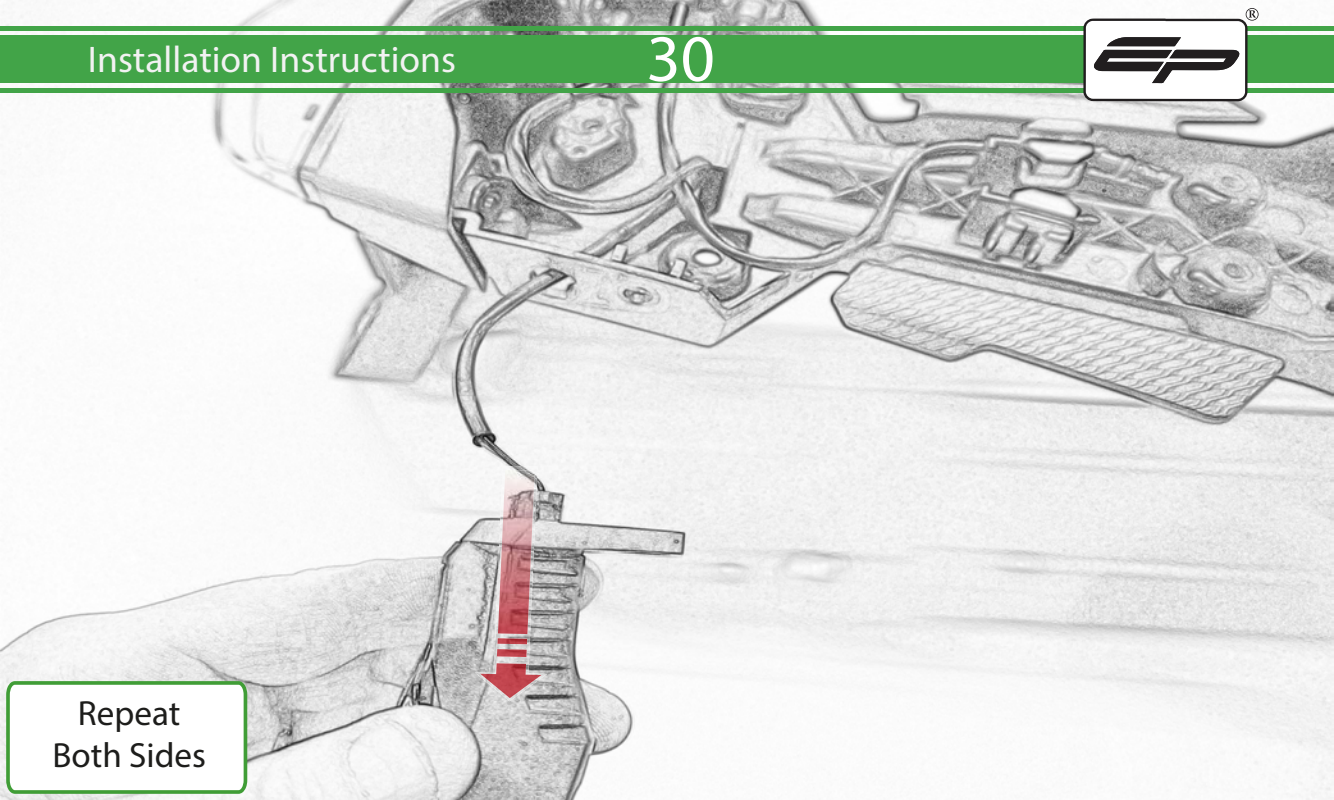



Repeat
Both Sides

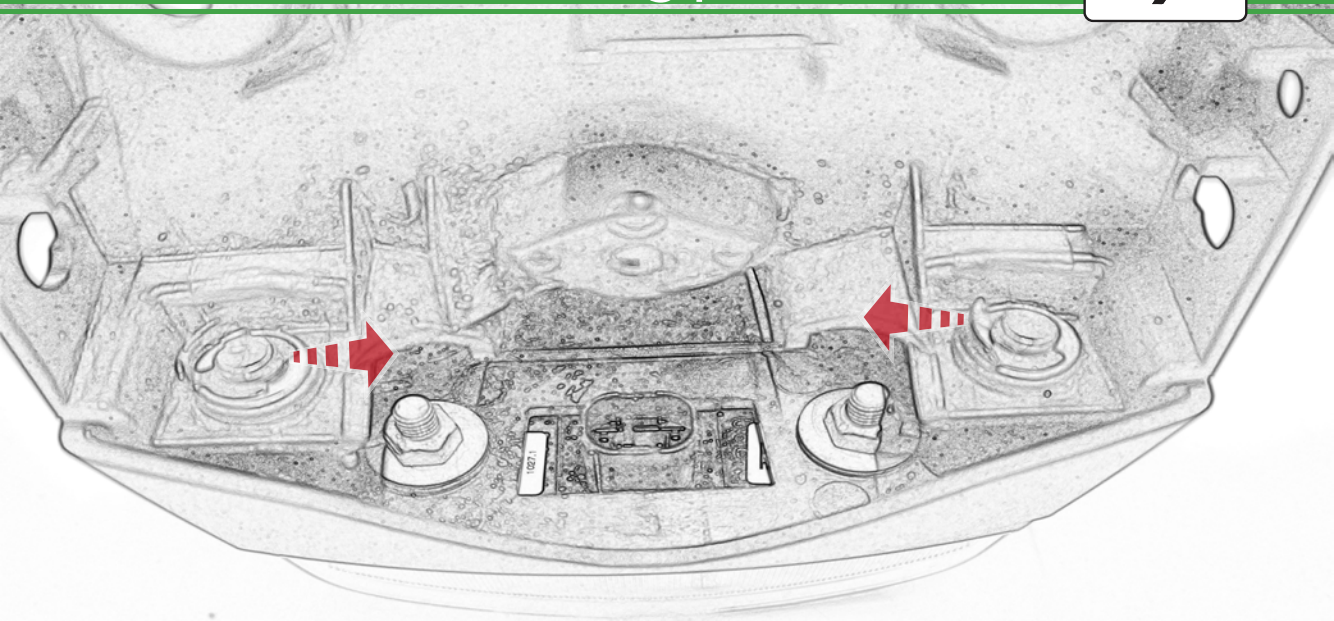


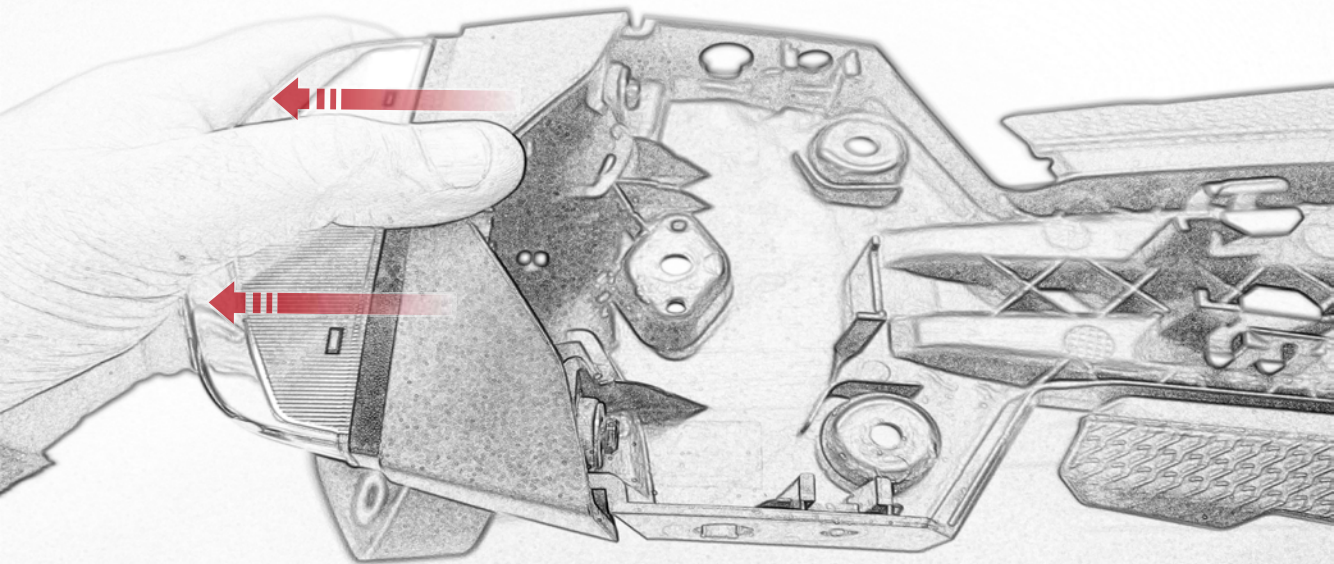


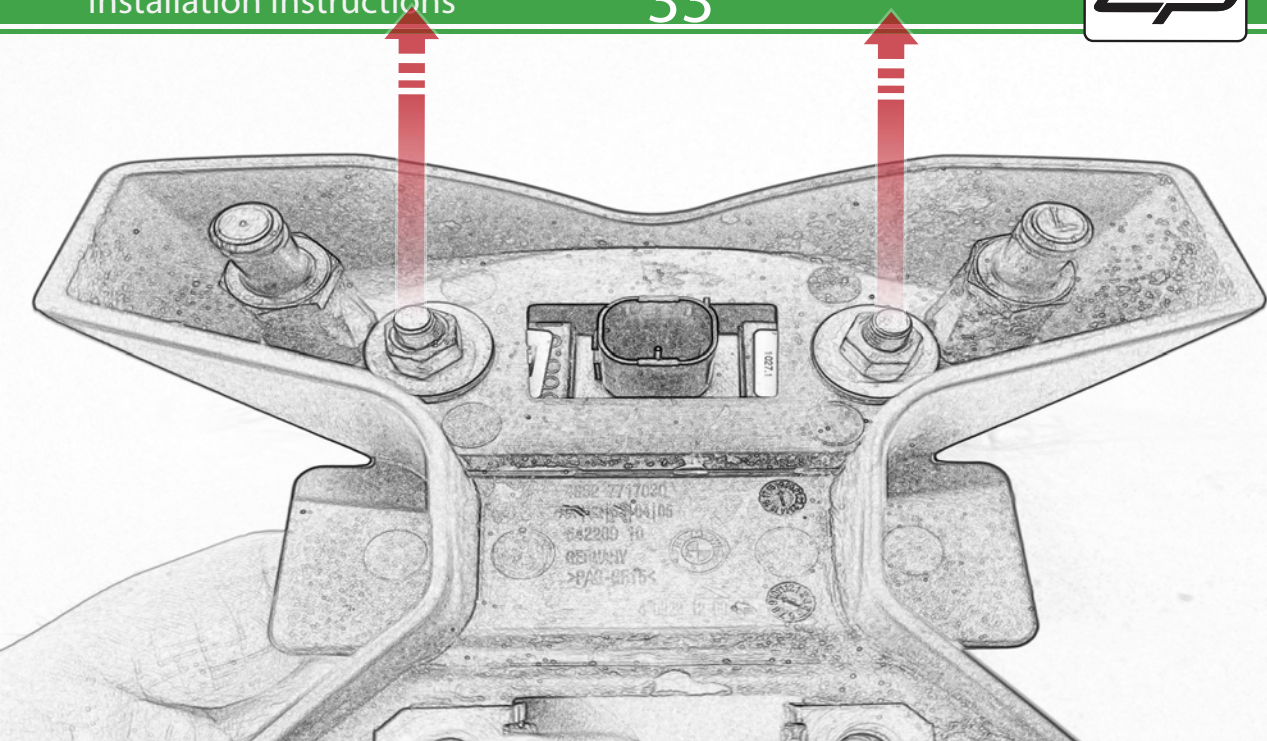

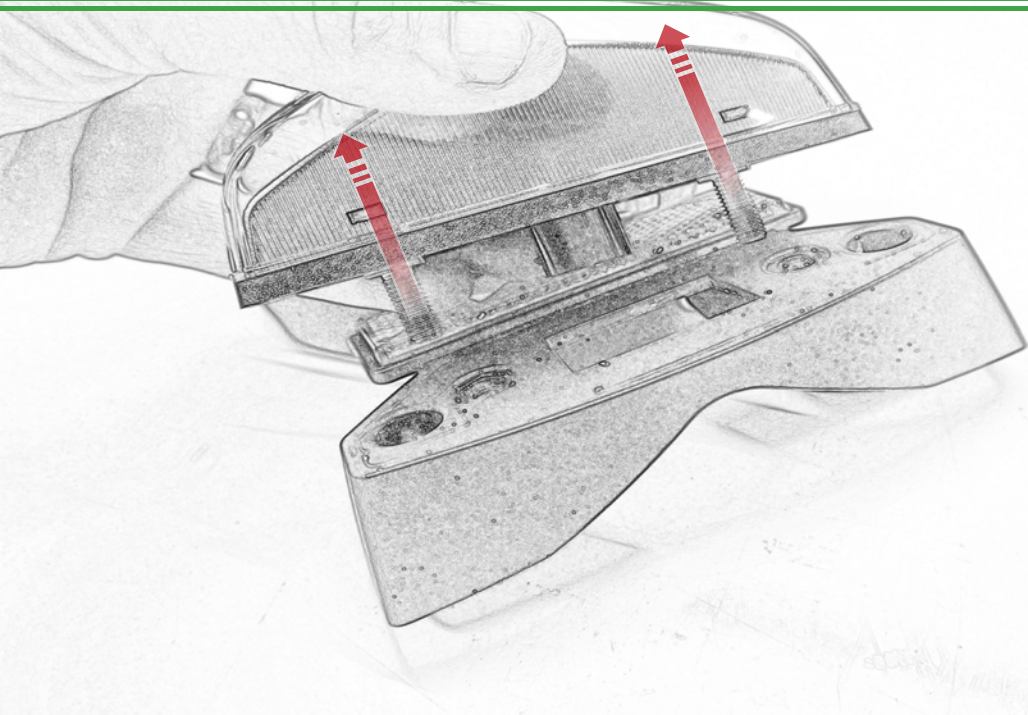


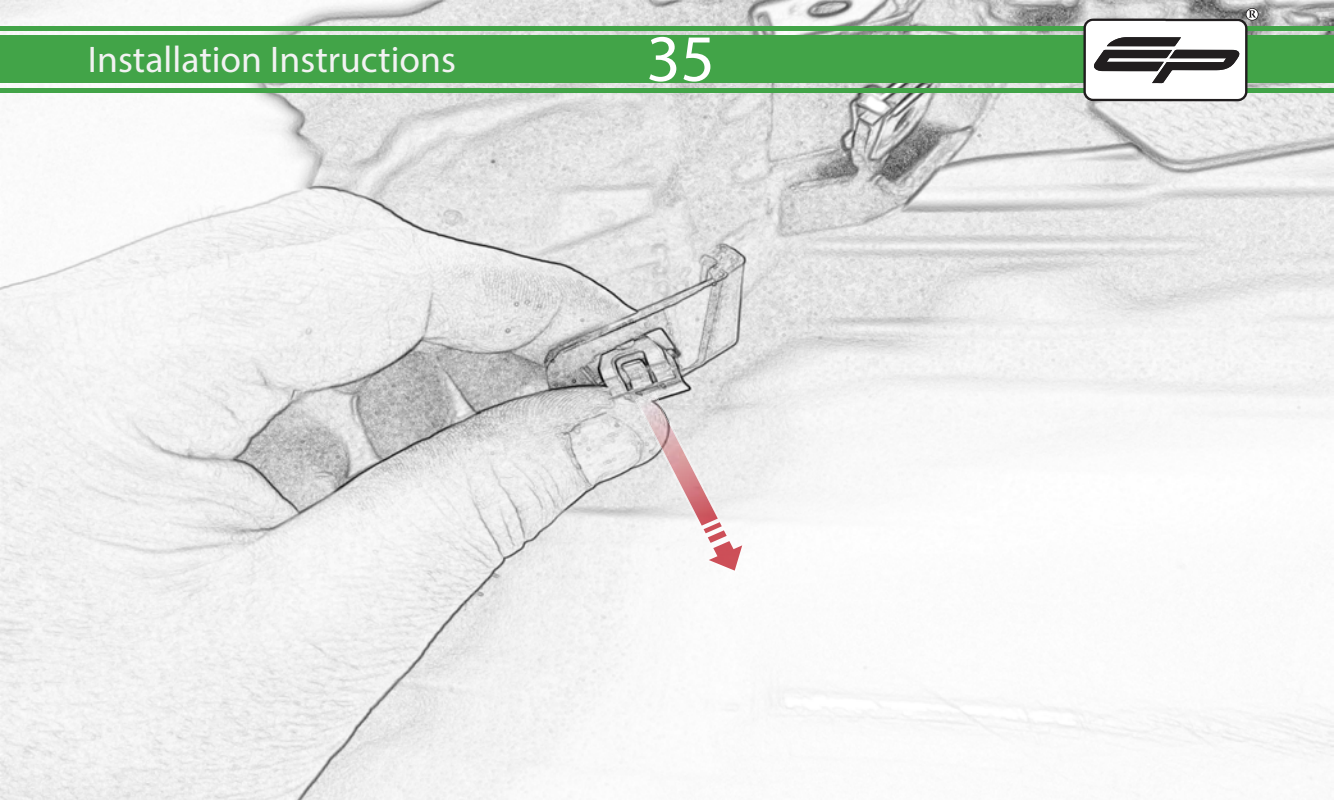

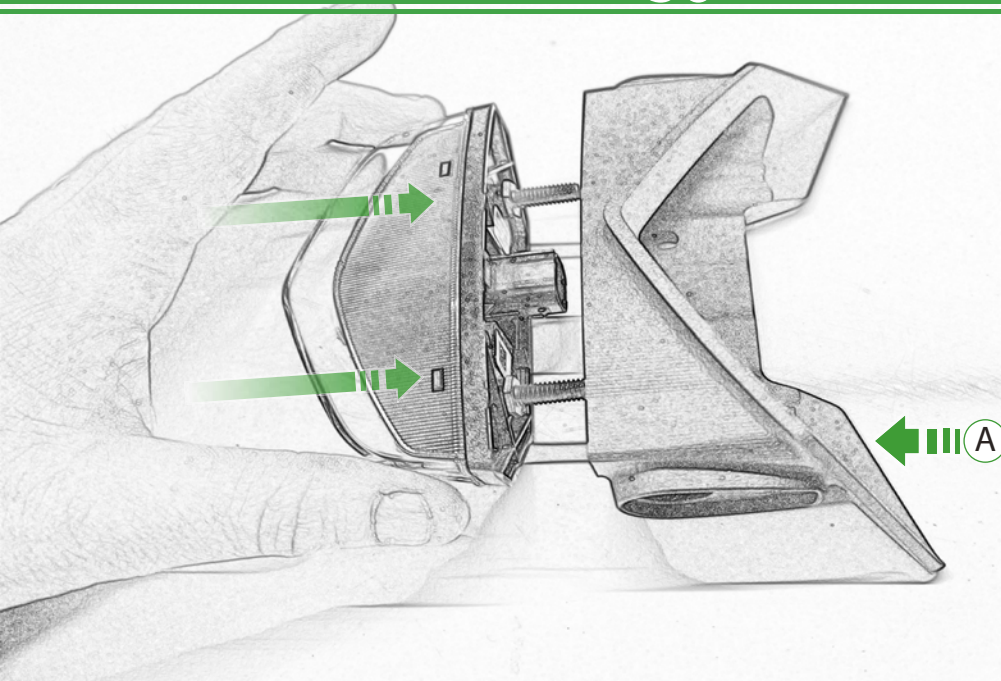


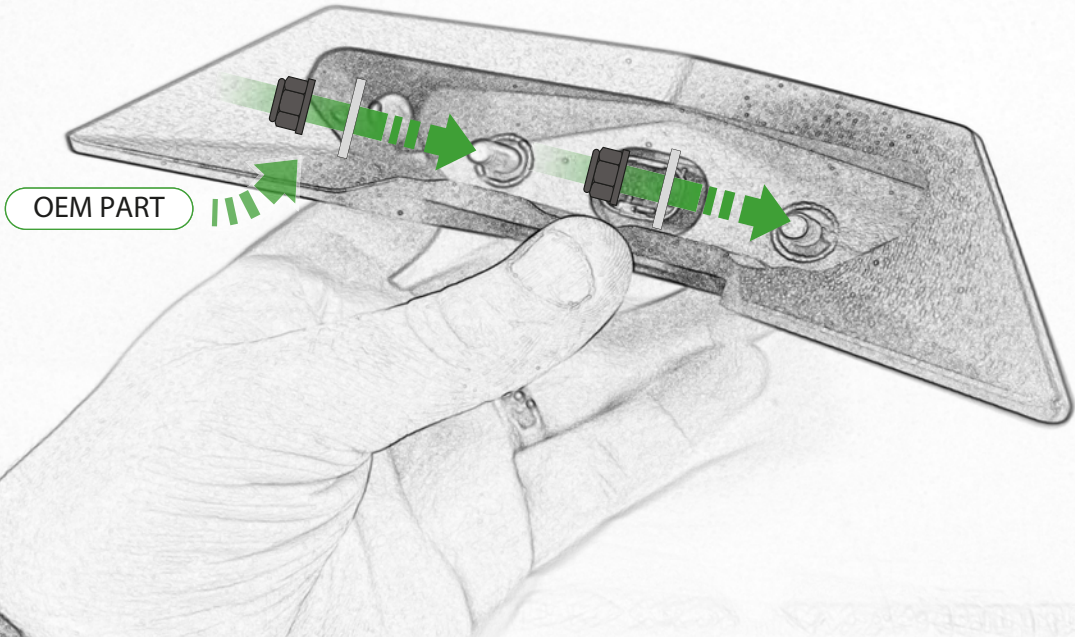


OEM PART

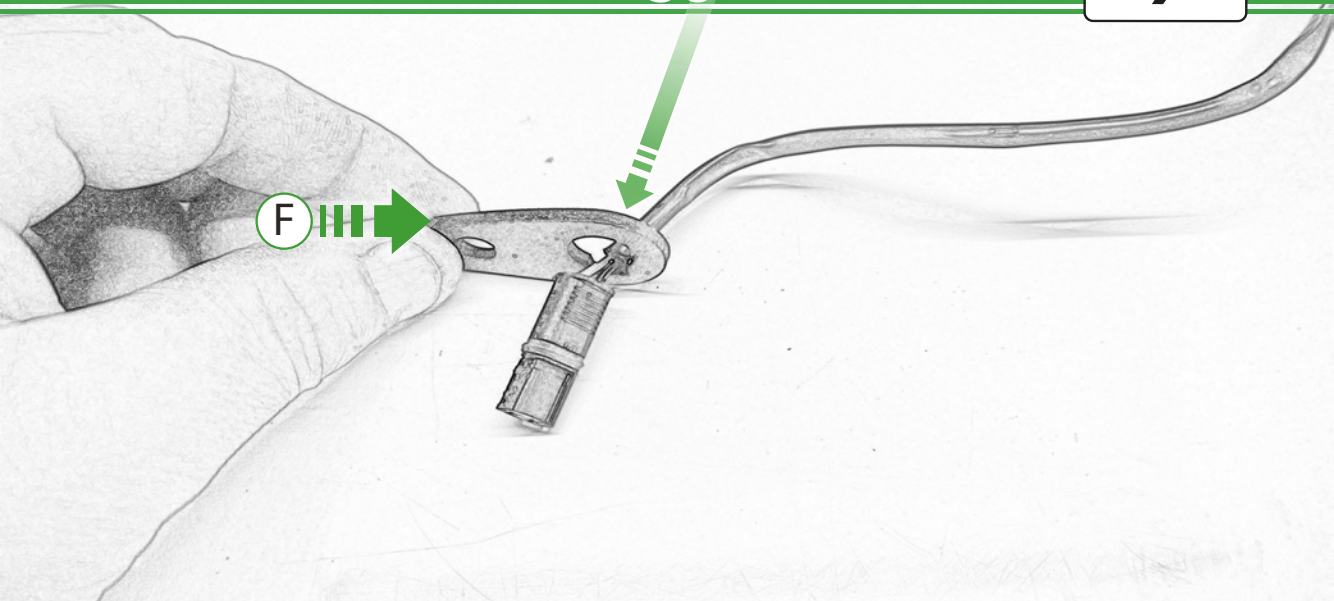


Repeat
Both Sides

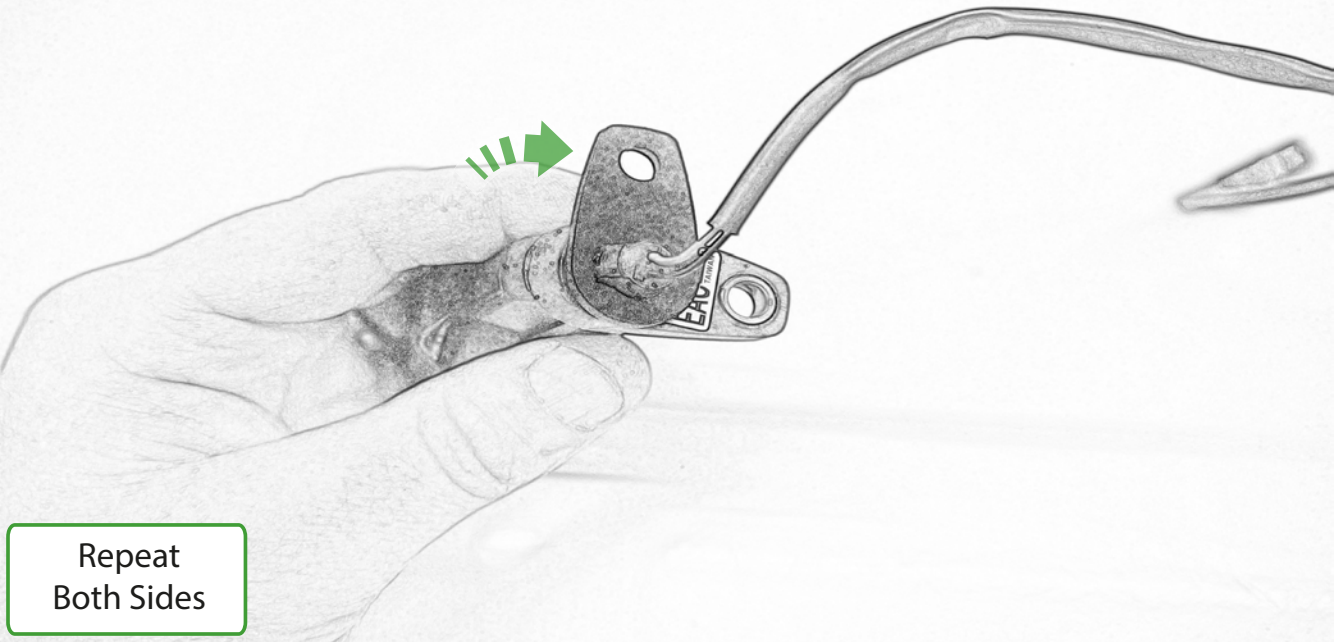


Repeat
Both Sides

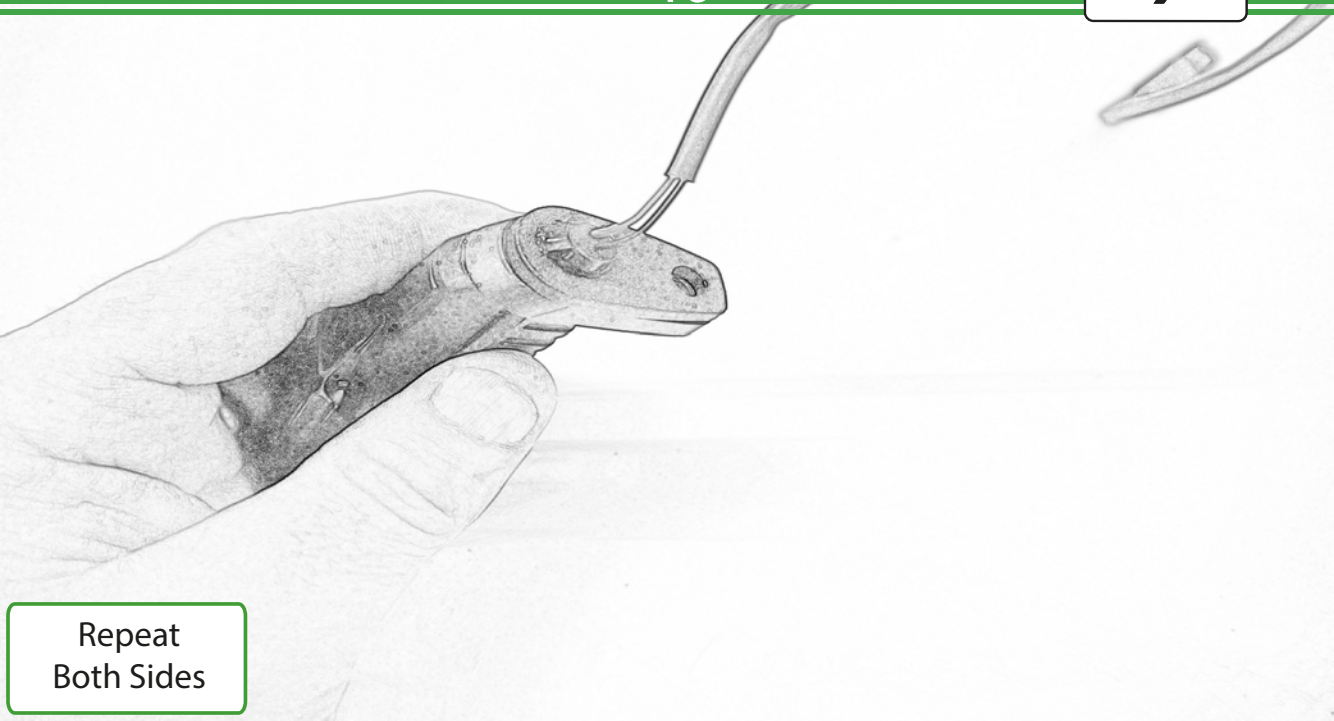


Repeat
Both Sides

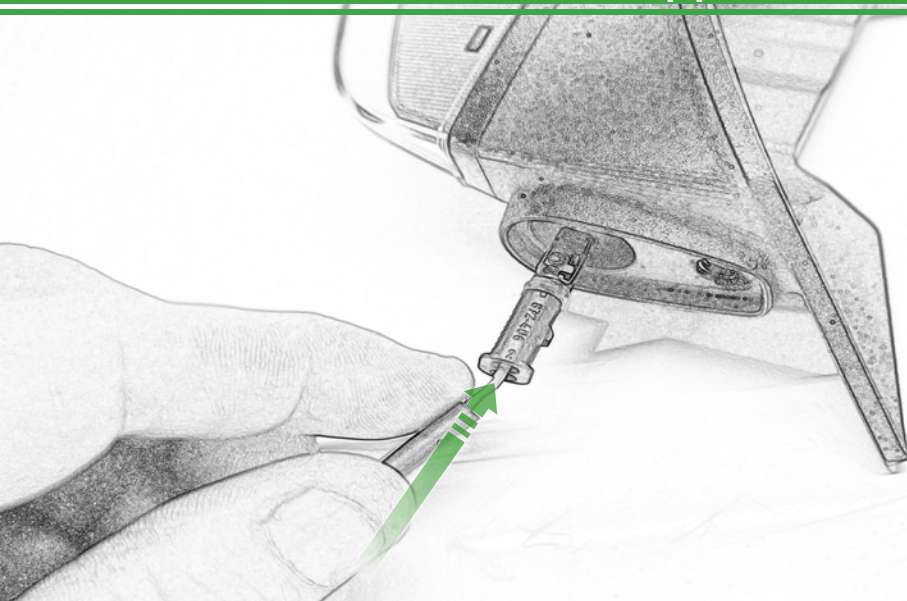


Repeat
Both Sides

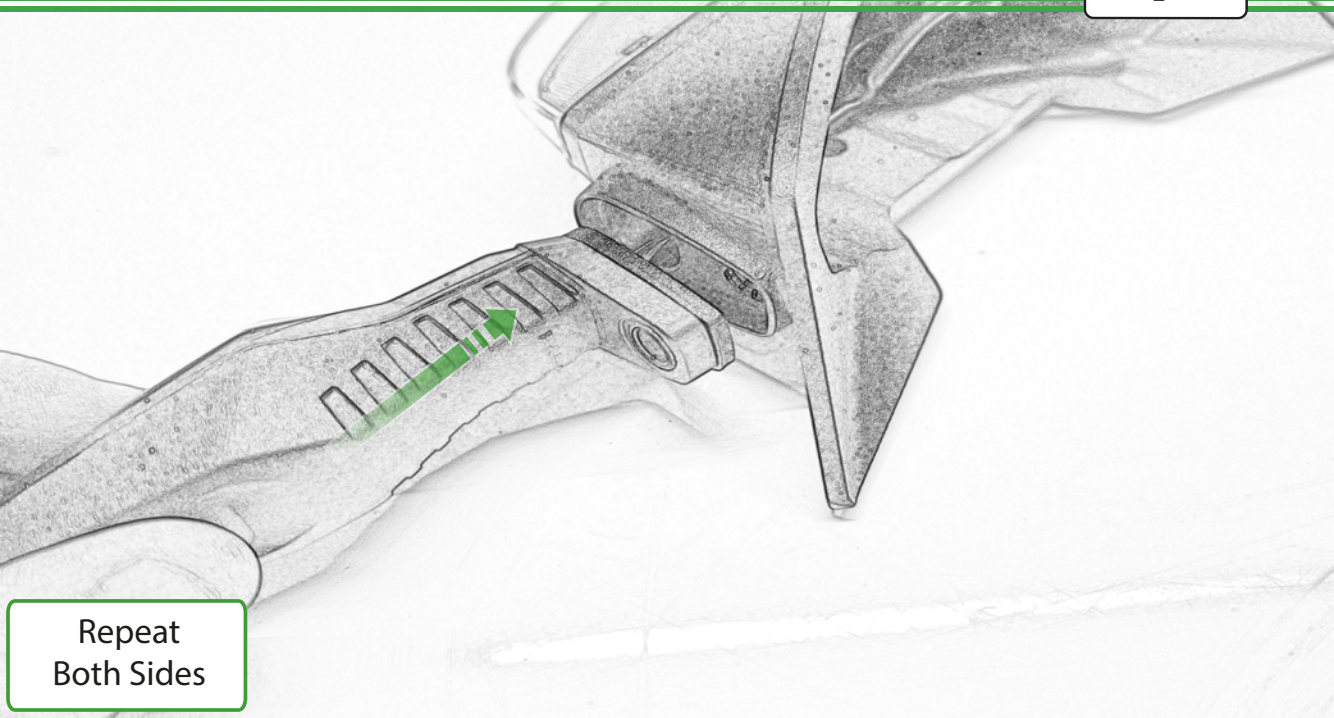

Repeat
Both Sides

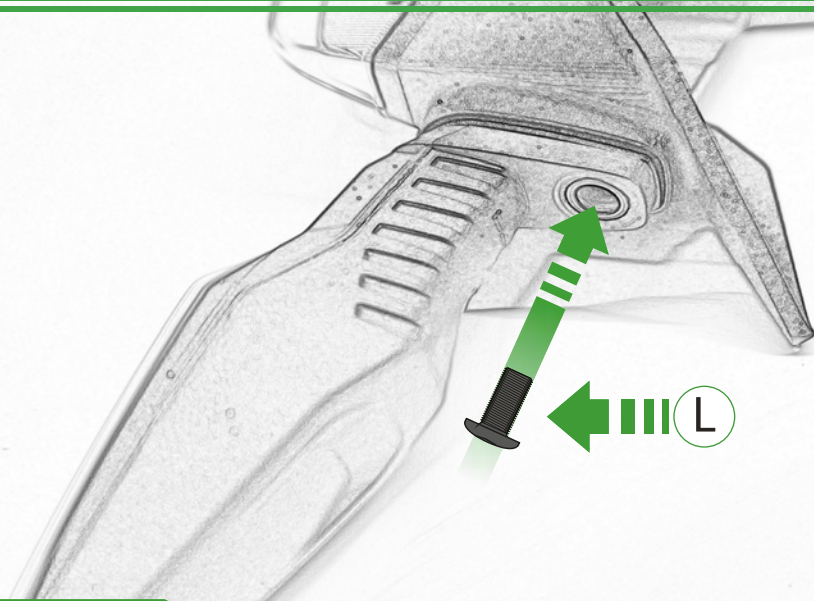


Repeat
Both Sides

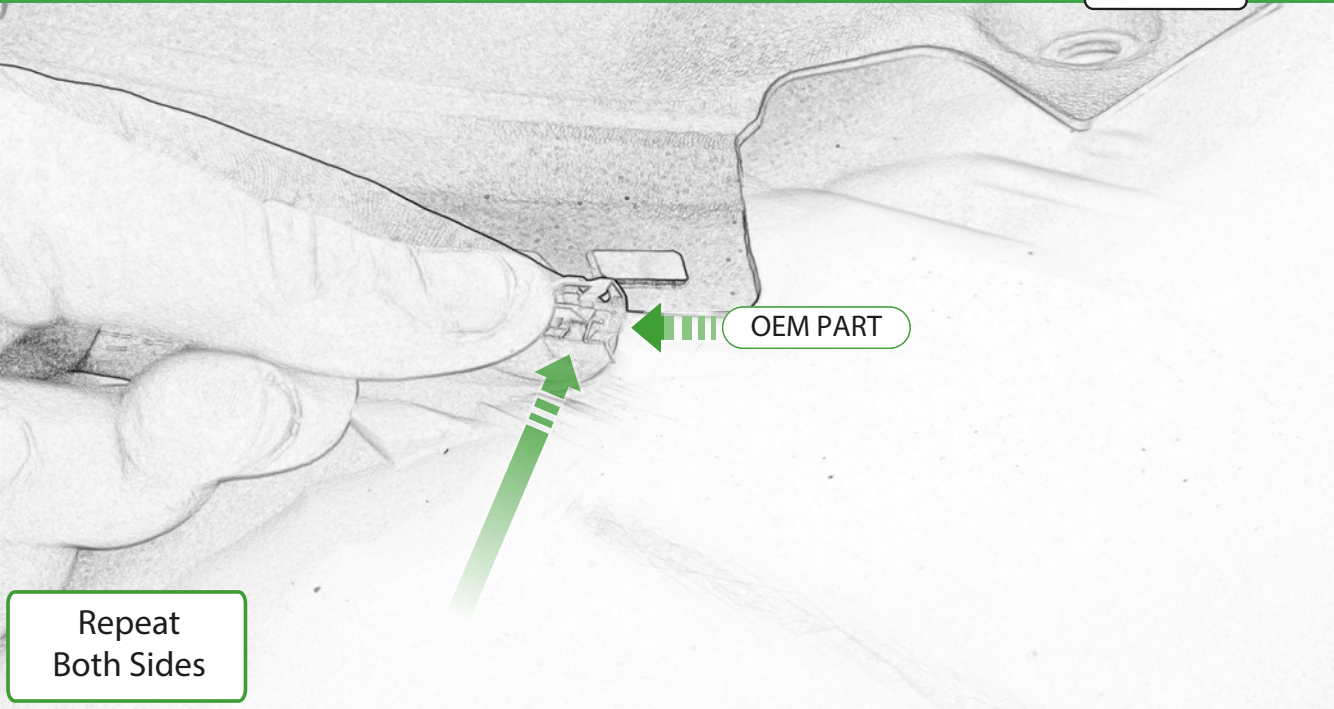

OEM PART


Repeat
Both Sides

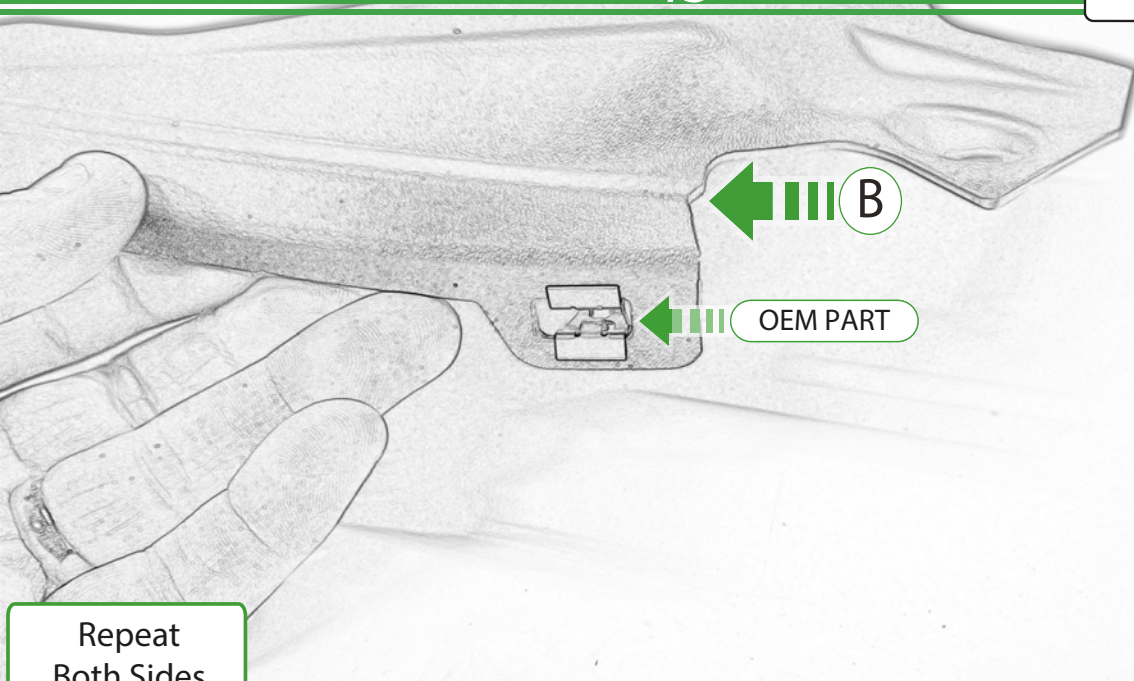



← B

← OEM PART


Repeat
Both Sides

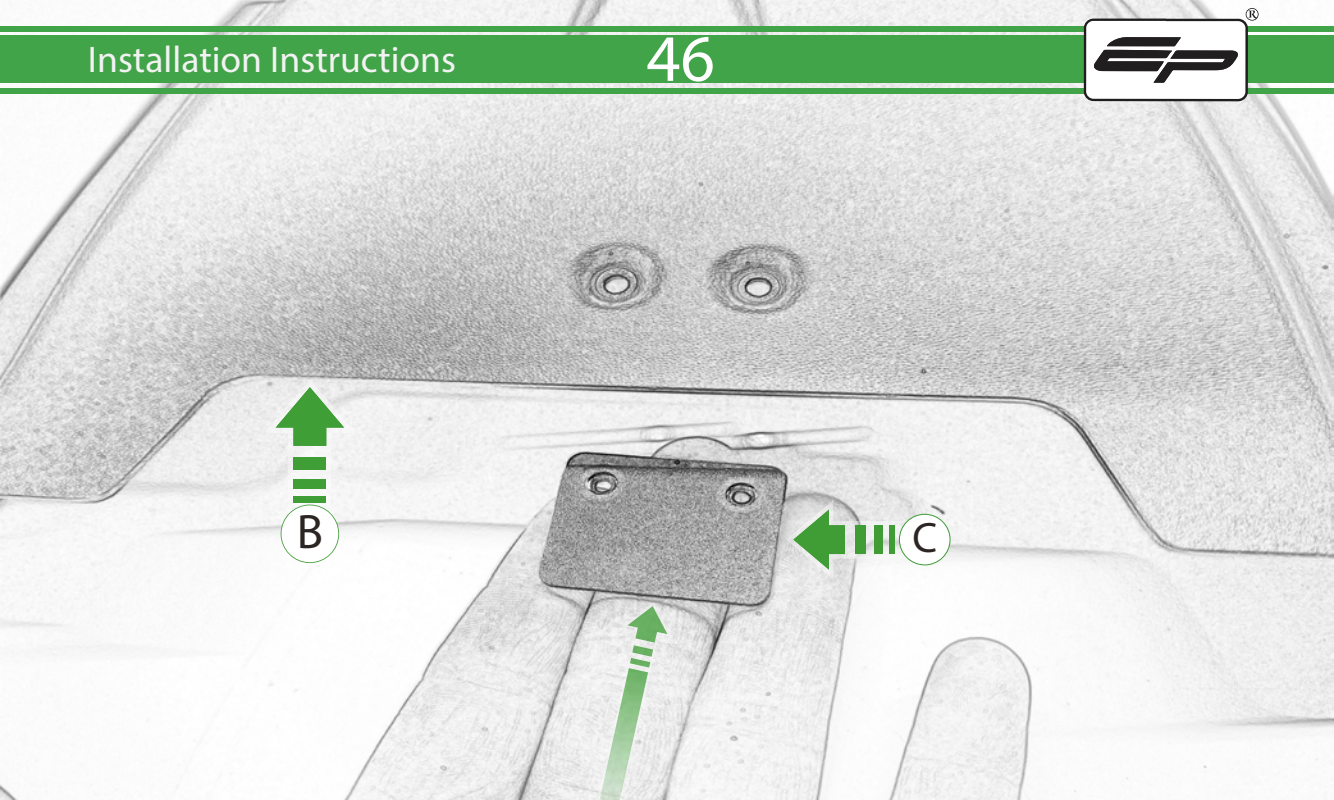

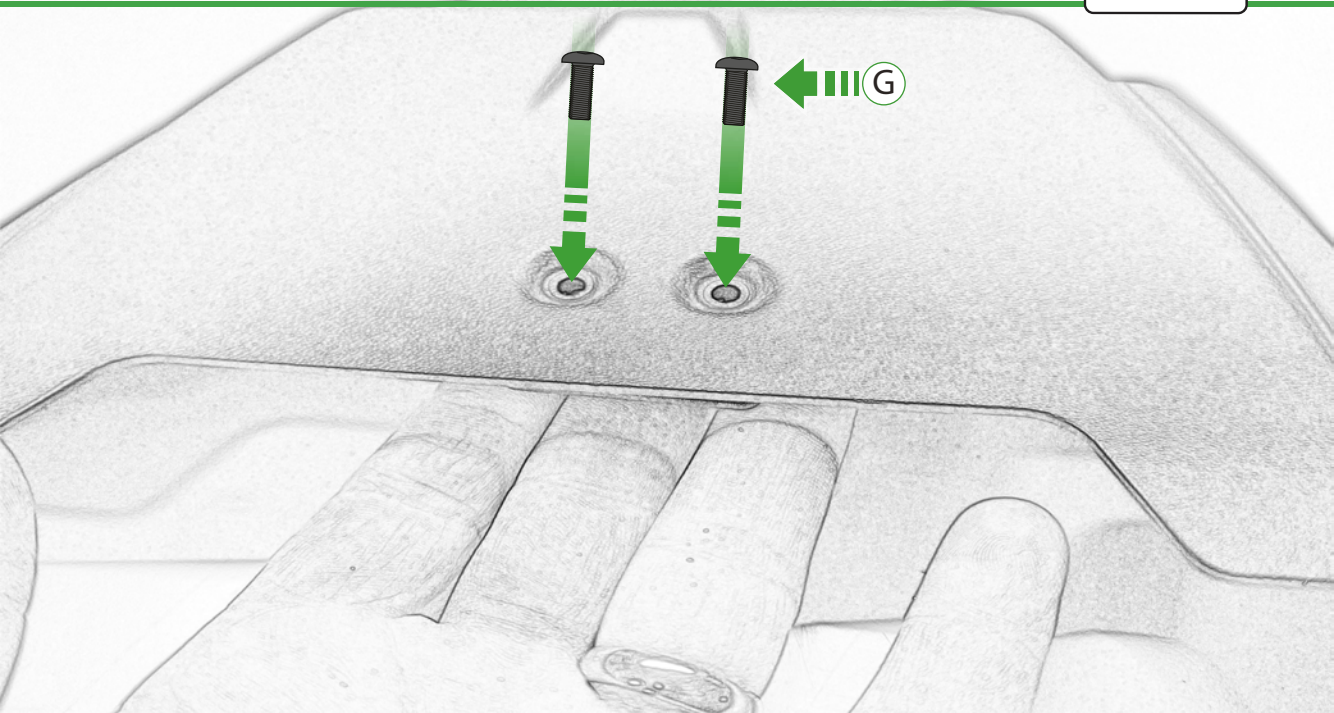

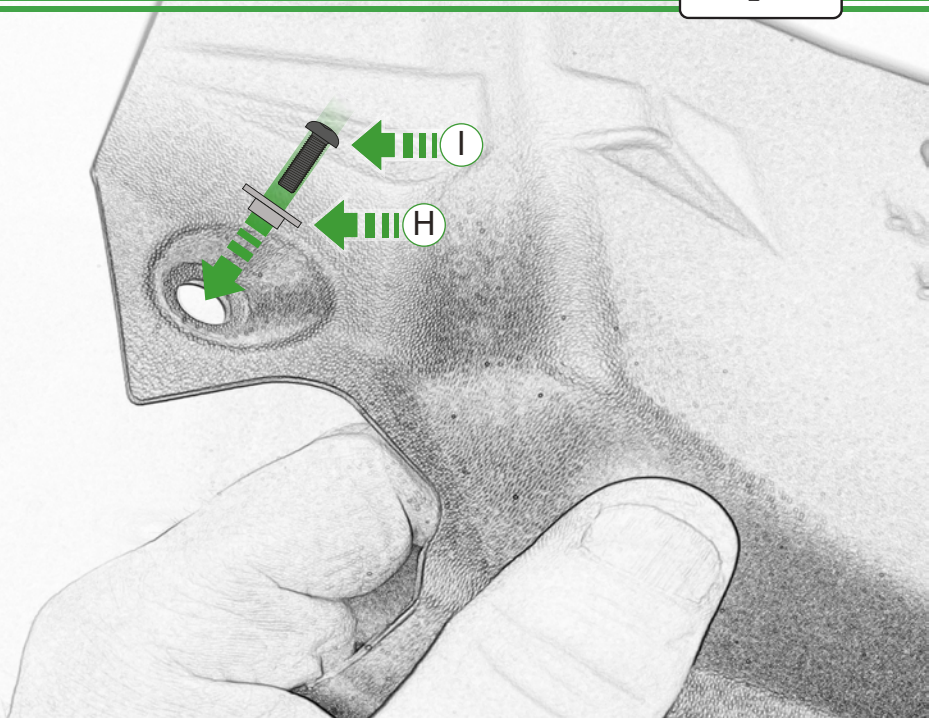


Repeat
Both Sides

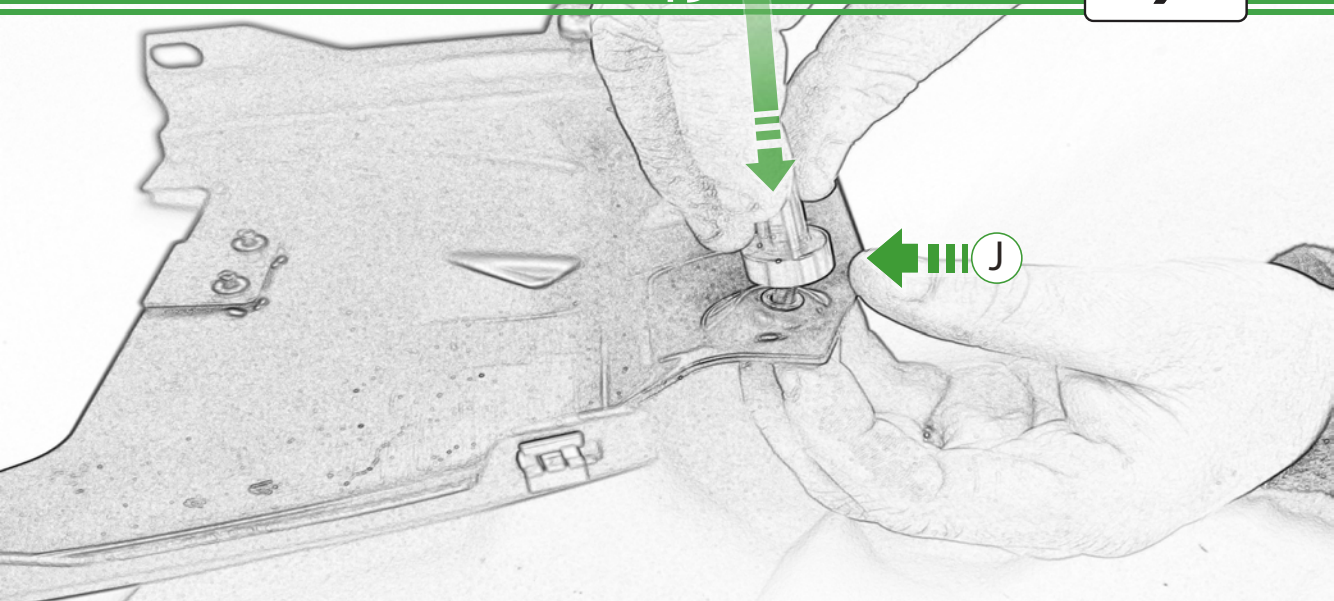



Repeat
Both Sides





Do Not Fully
Tighten


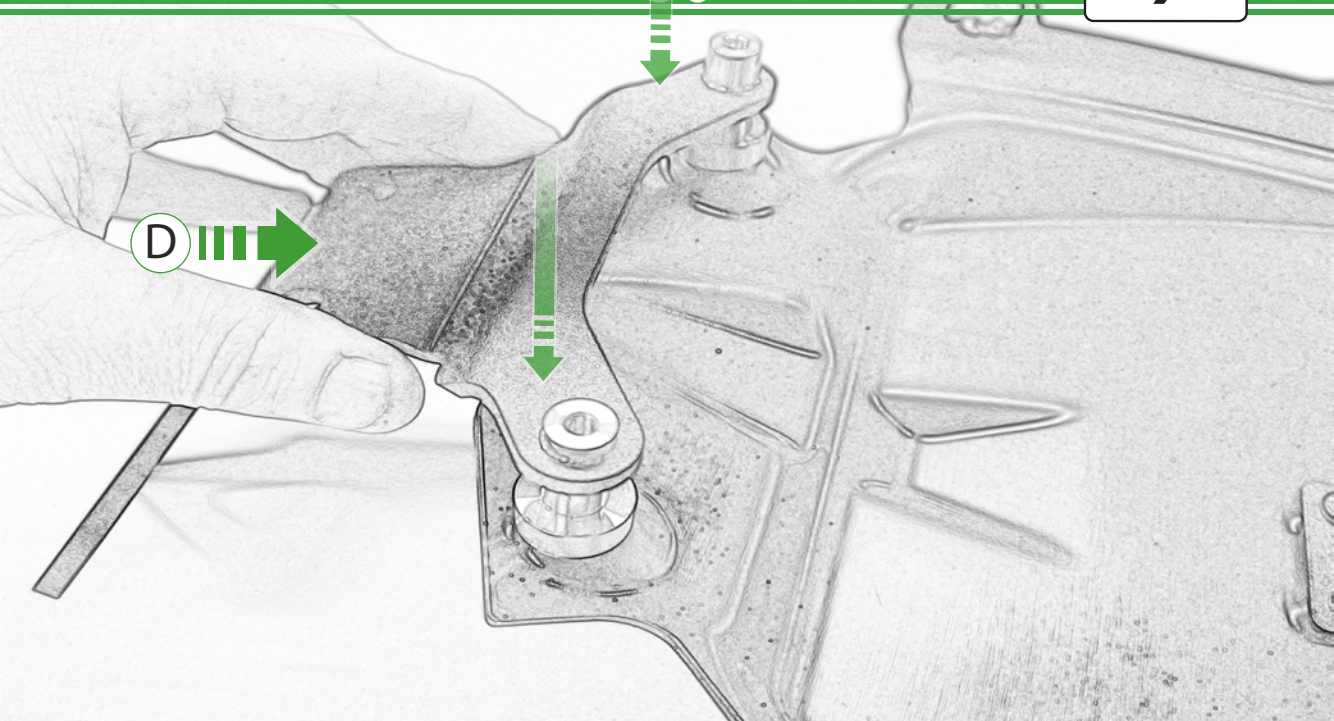



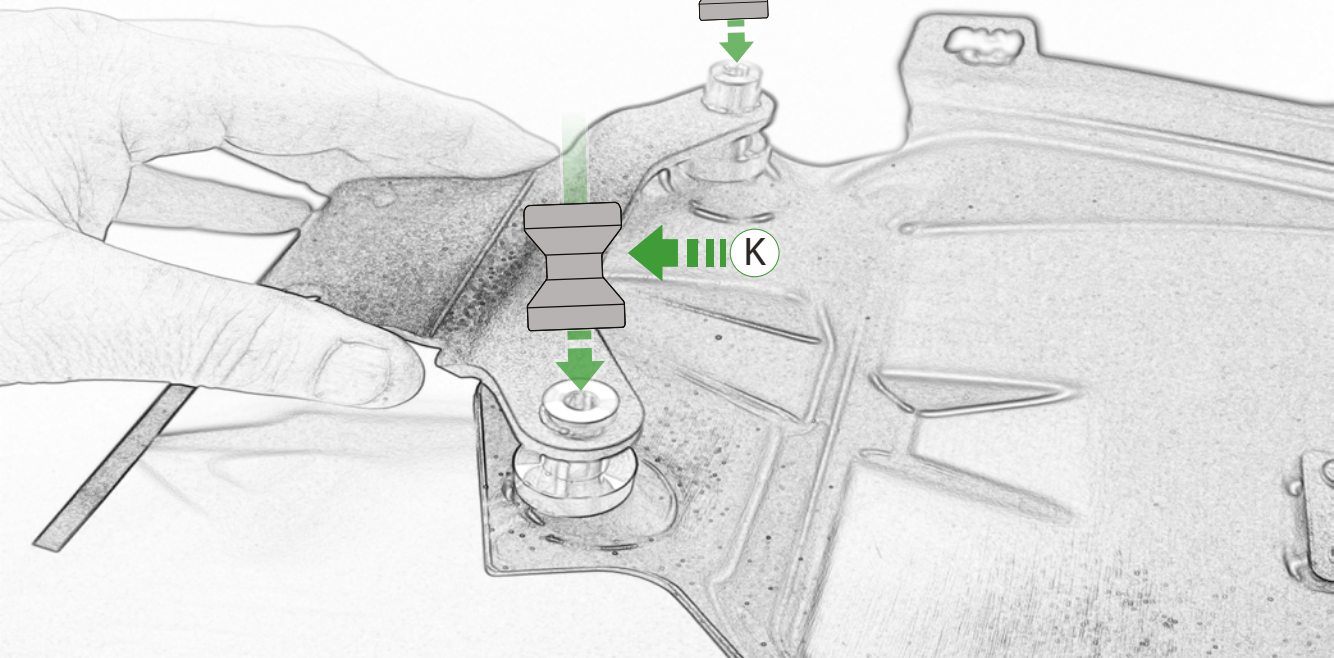



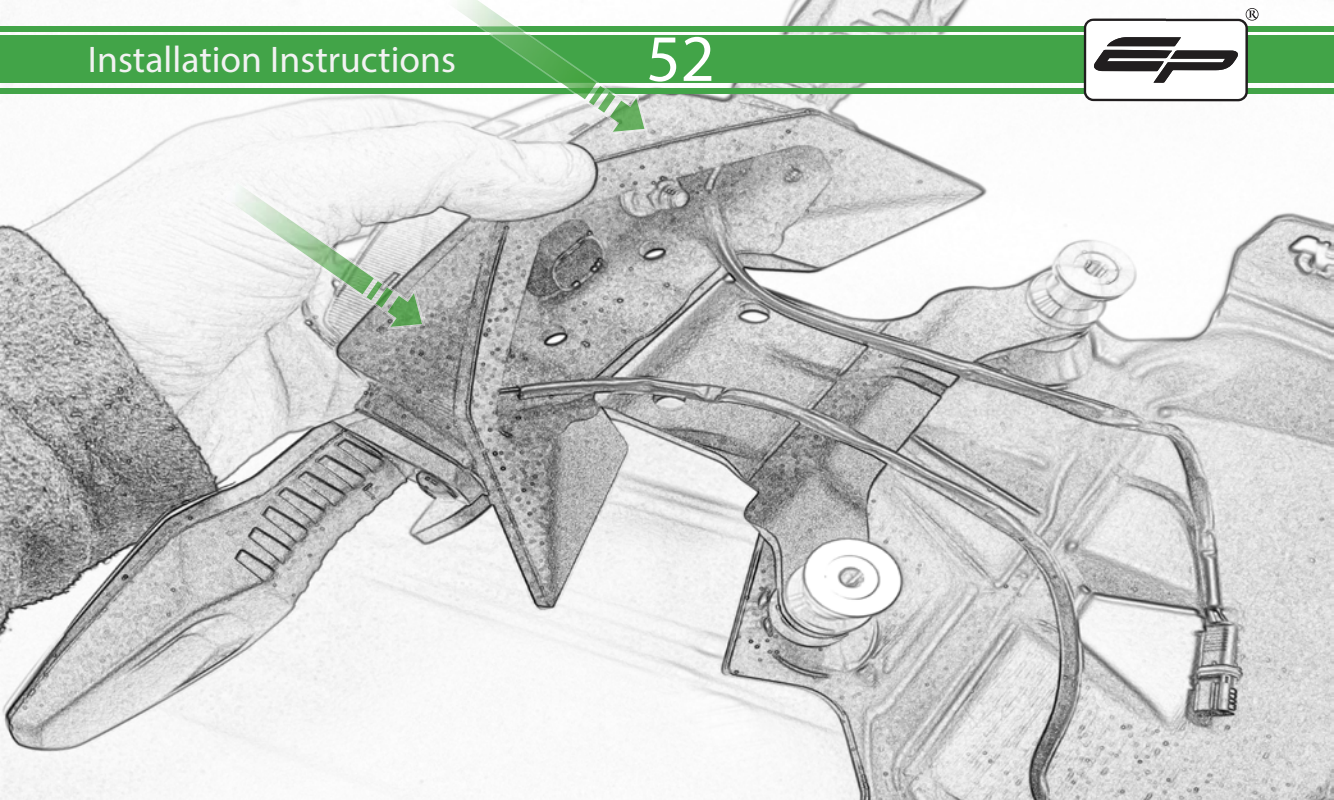


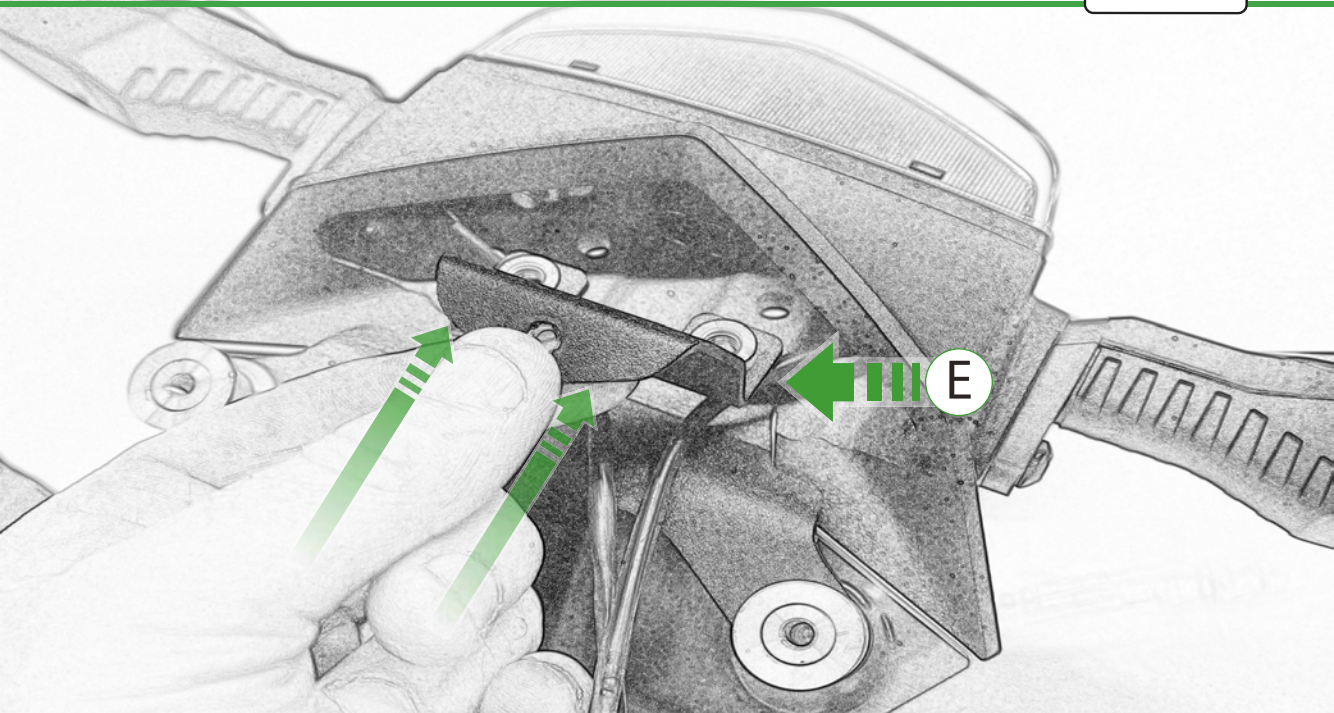


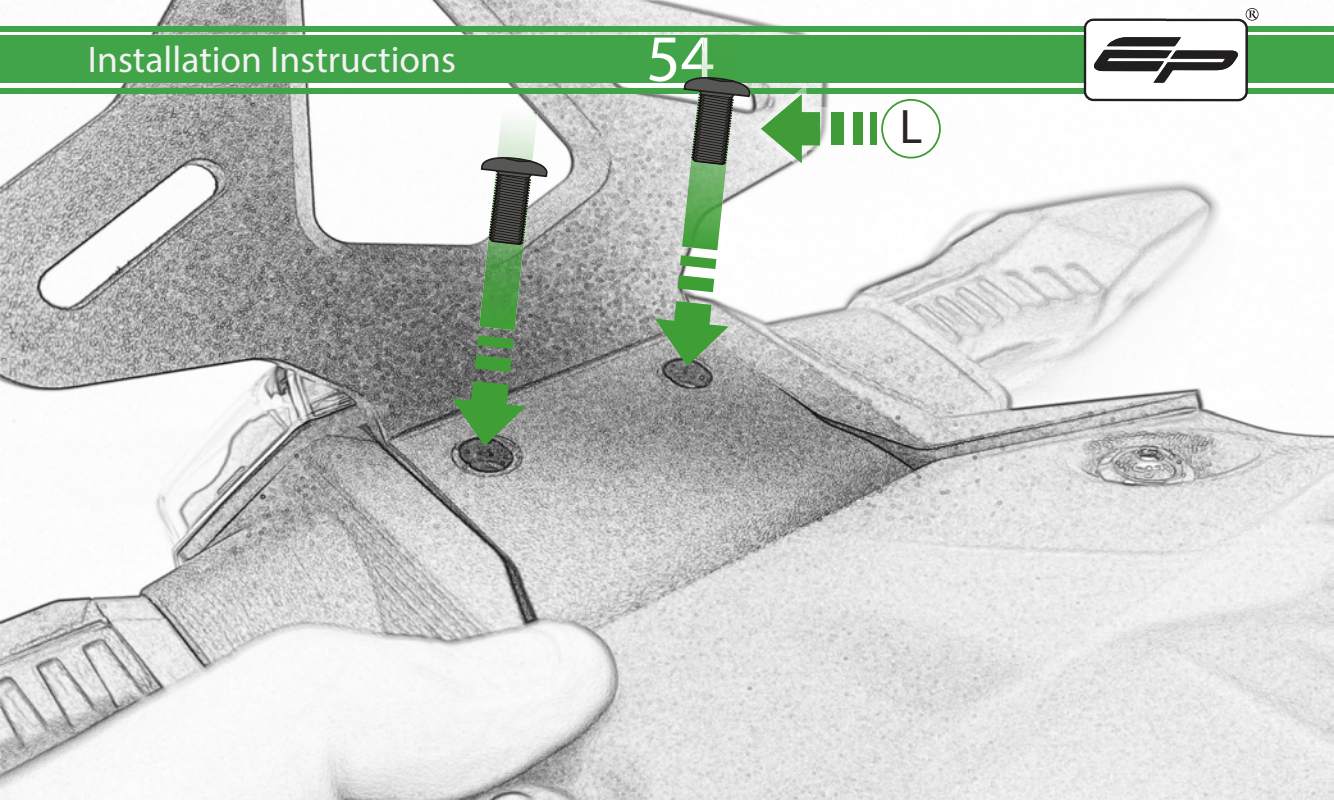


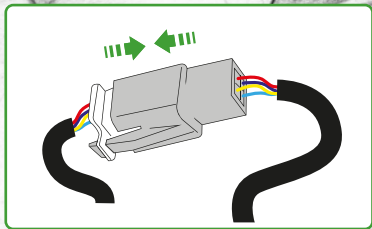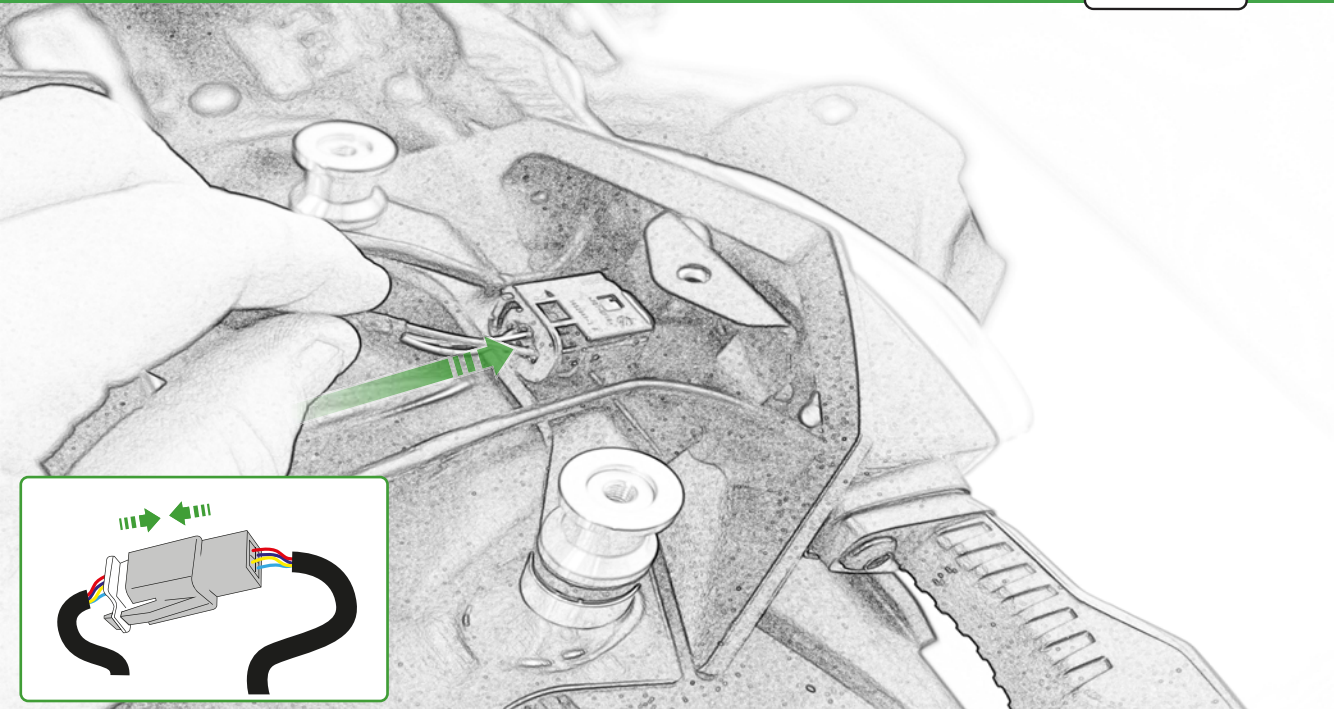

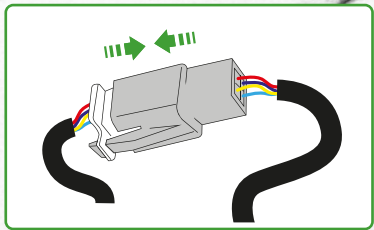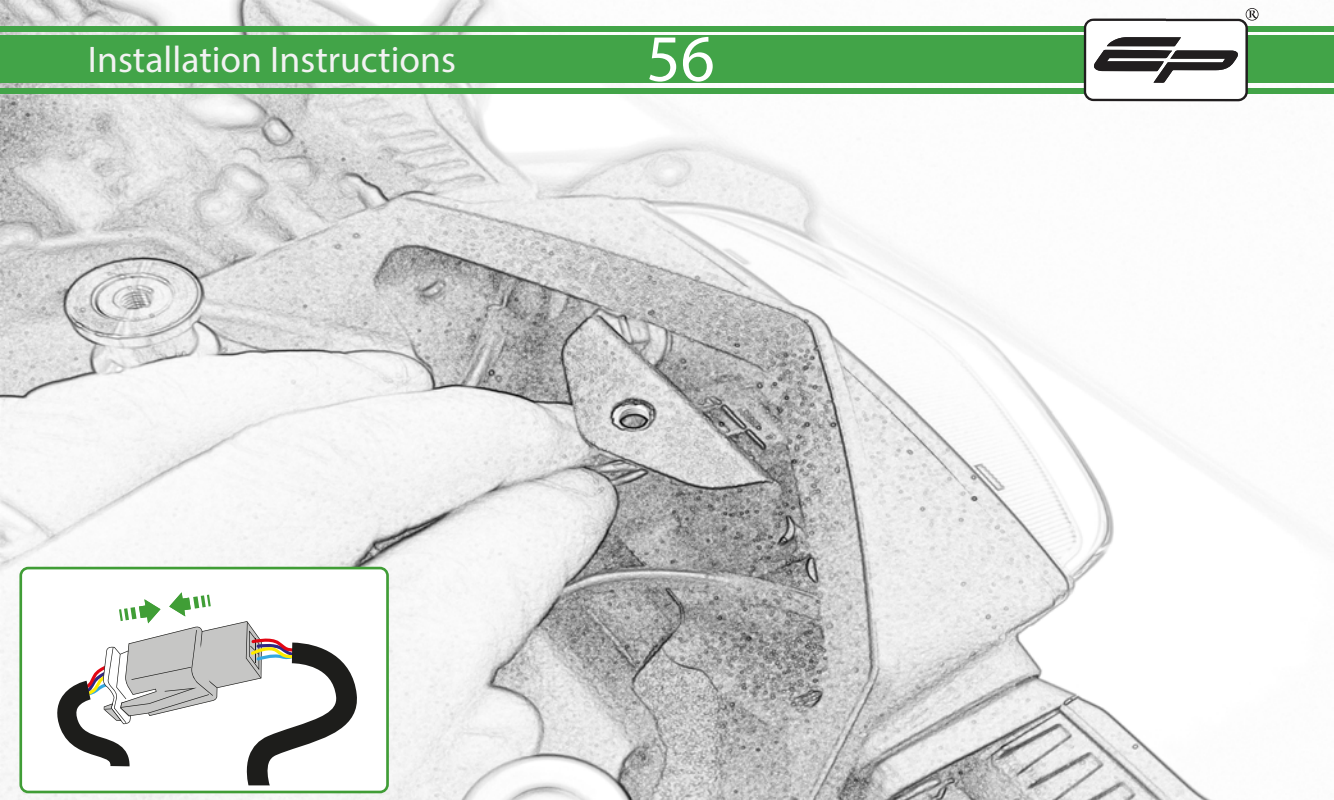

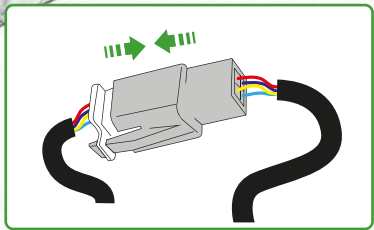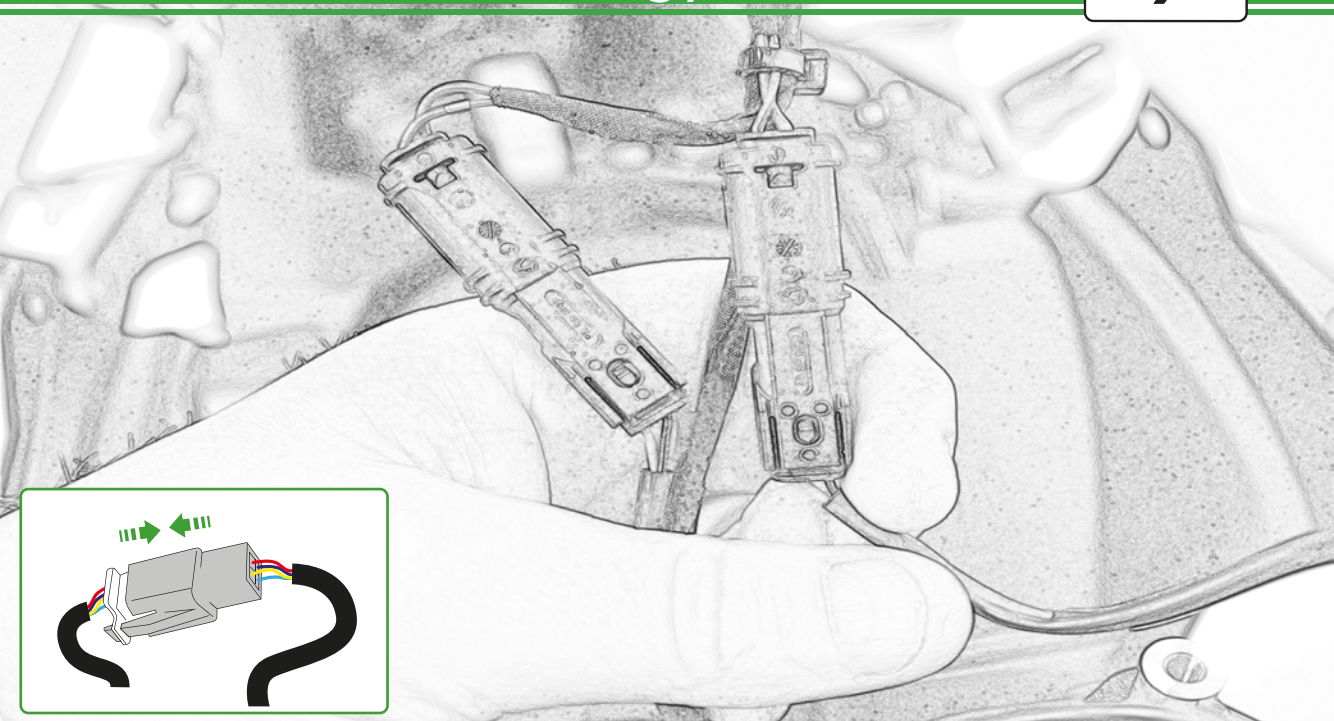

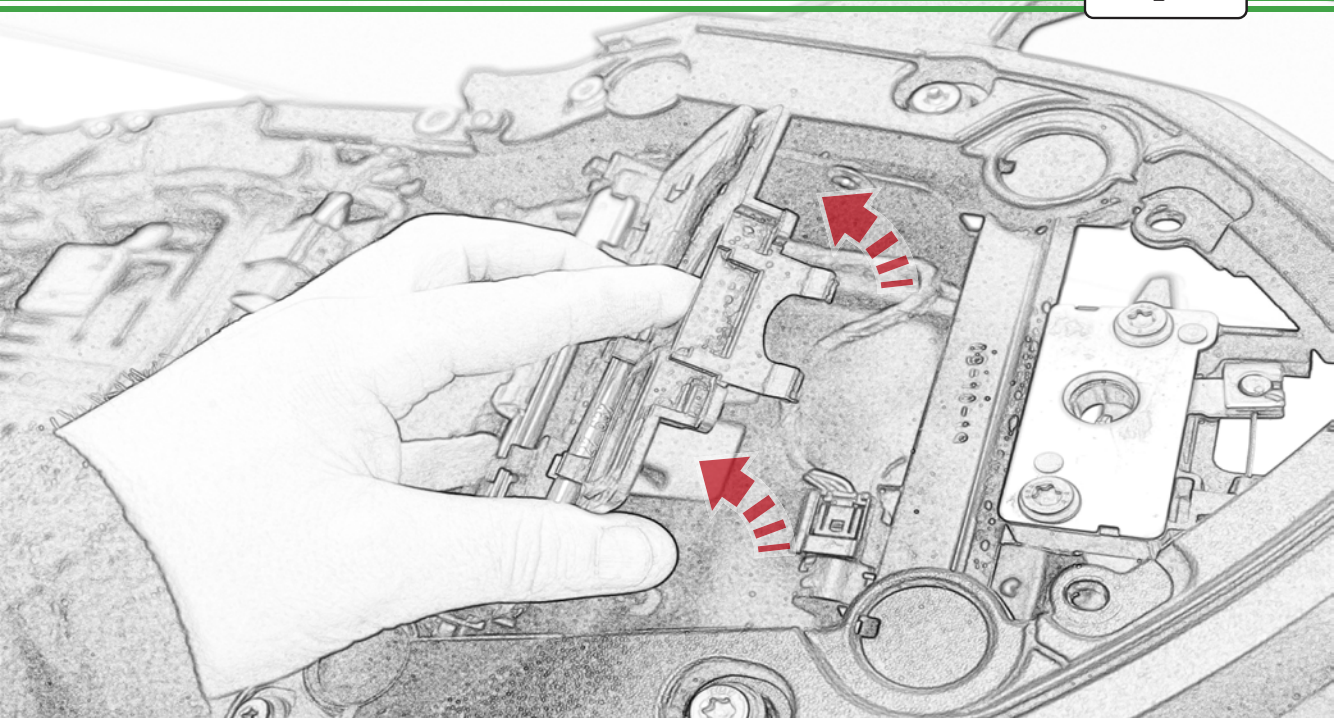


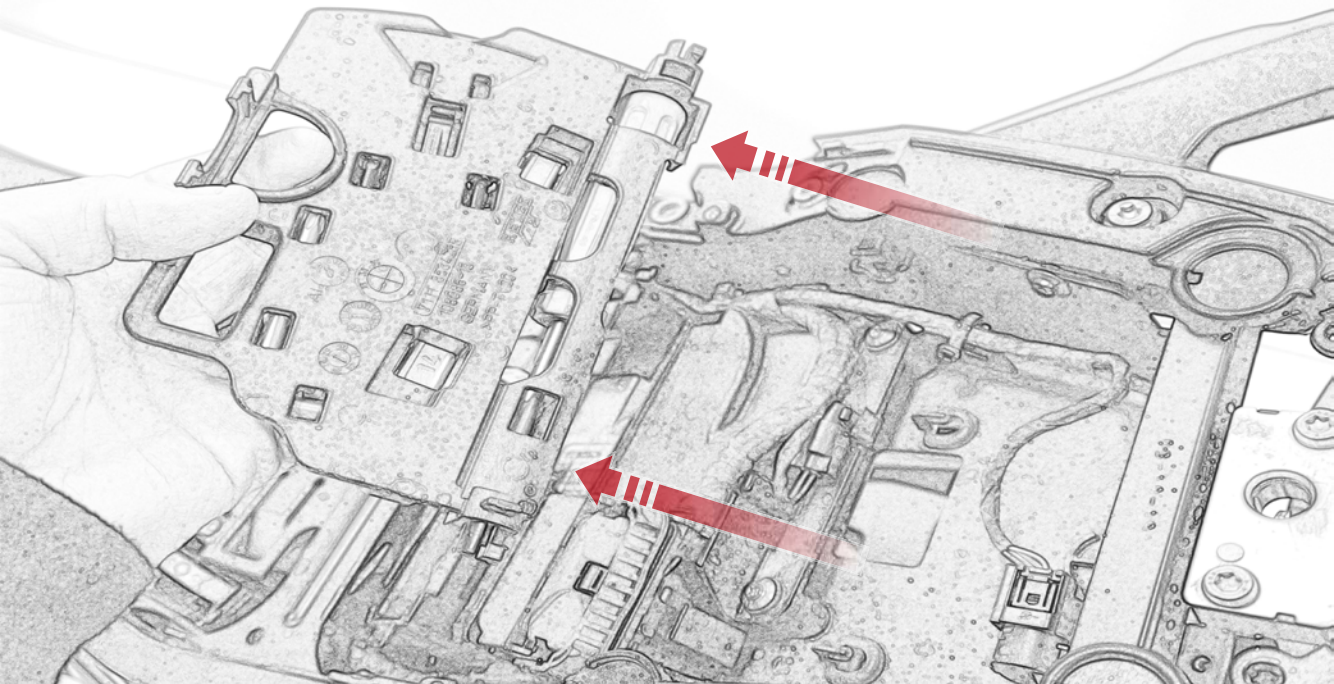




Caution

Locate loom in underseat area
ensuring they do not
get trapped or squashed


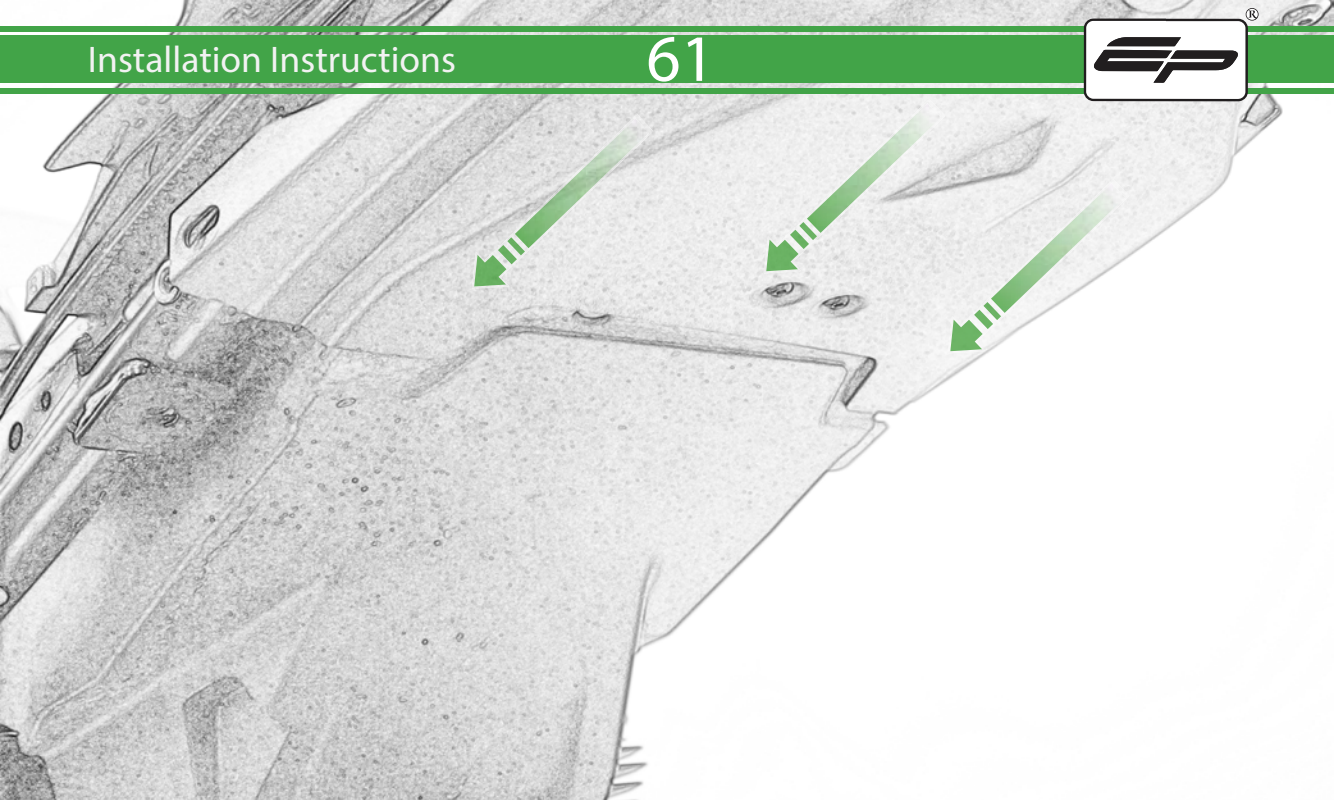


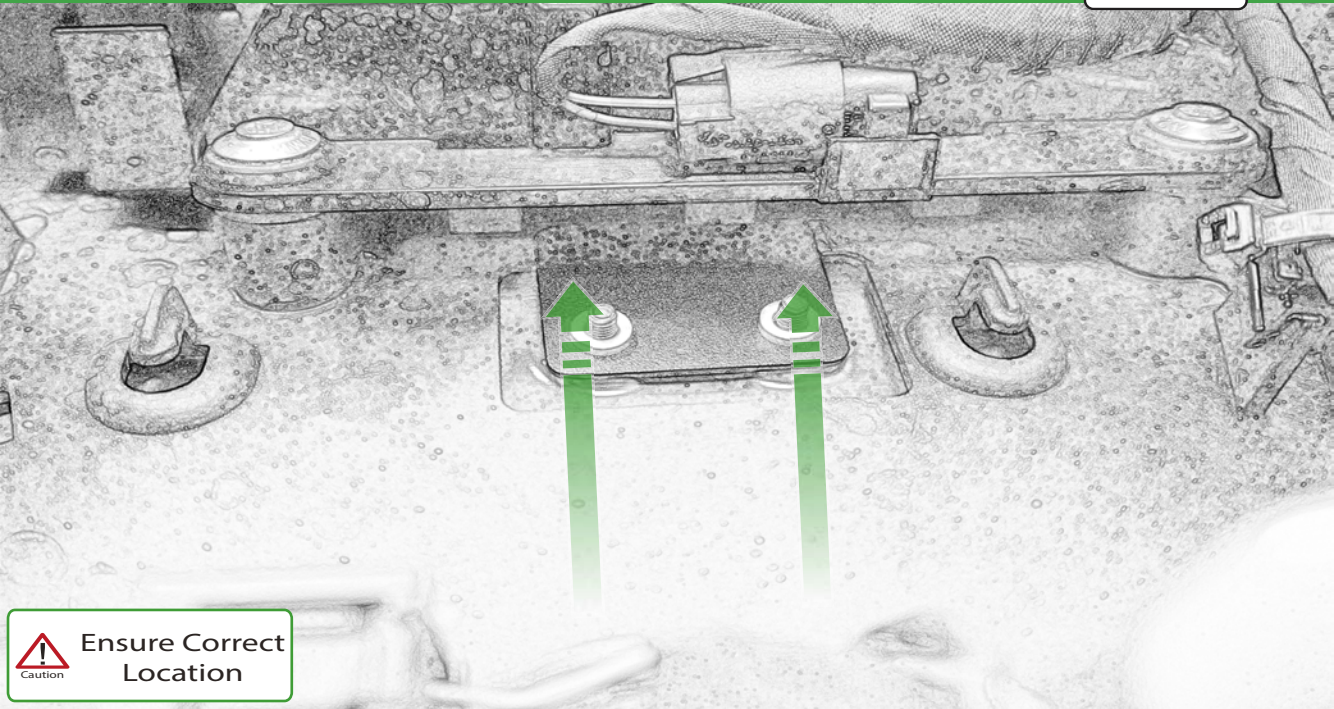


Ensure Correct
Location




OEM PART

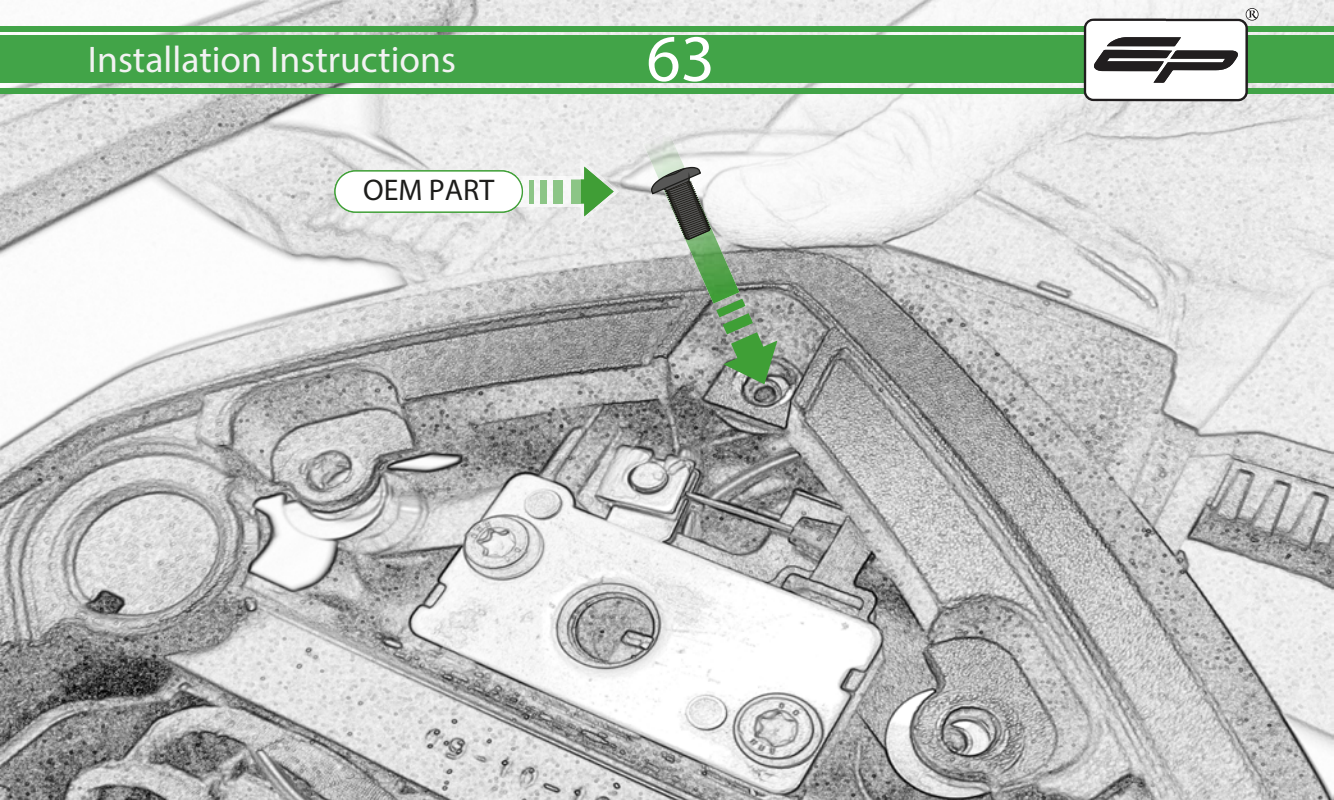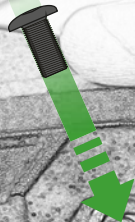


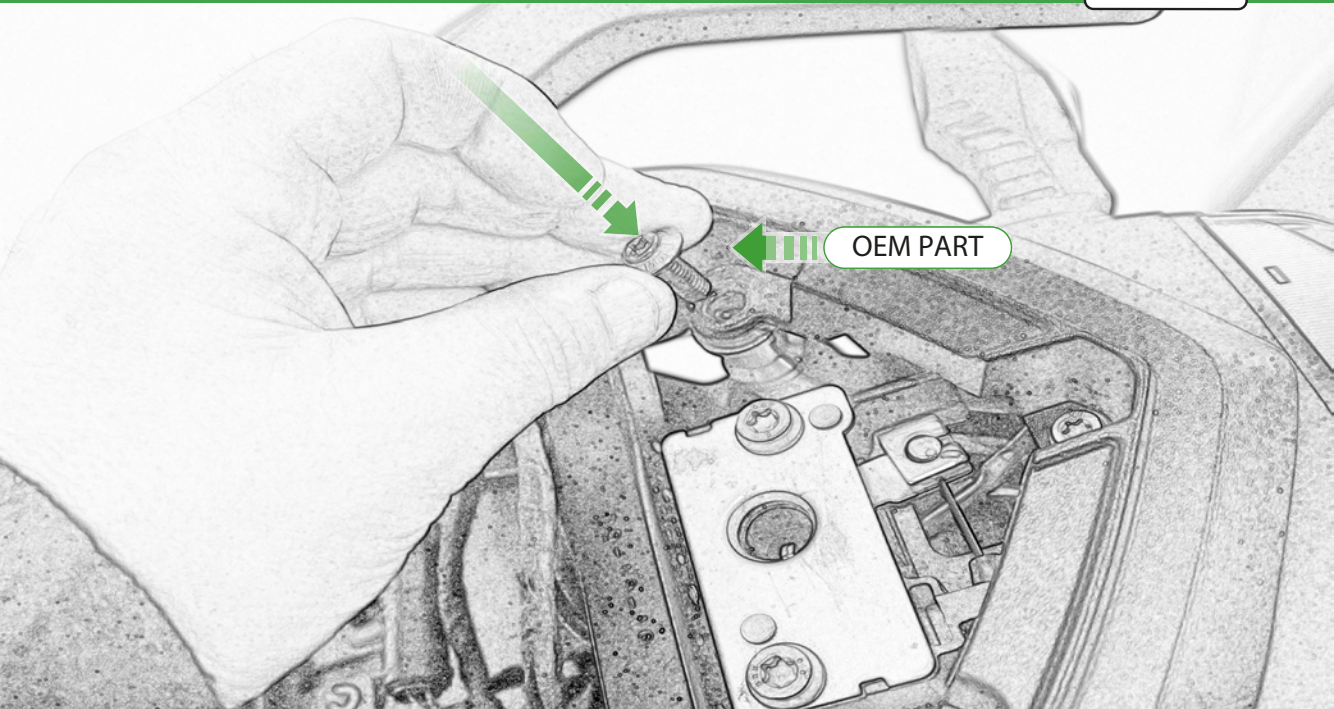

OEM PART

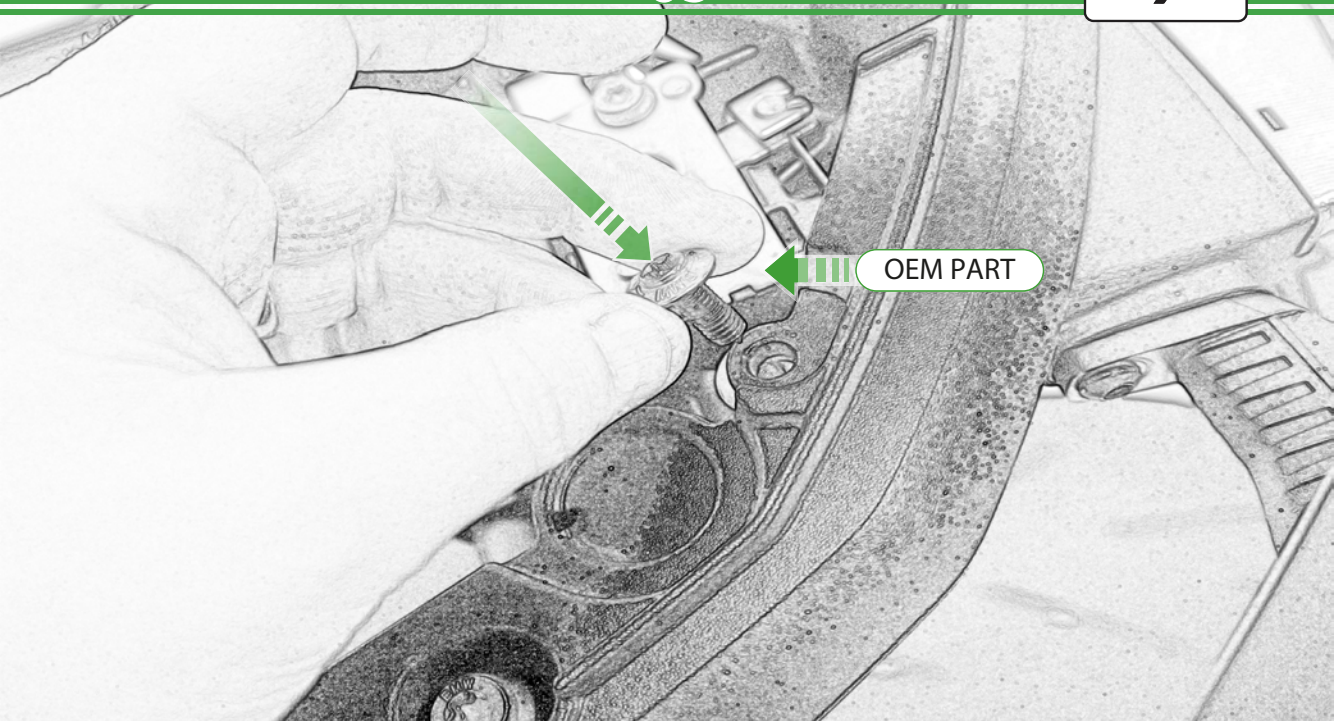


OEM PART

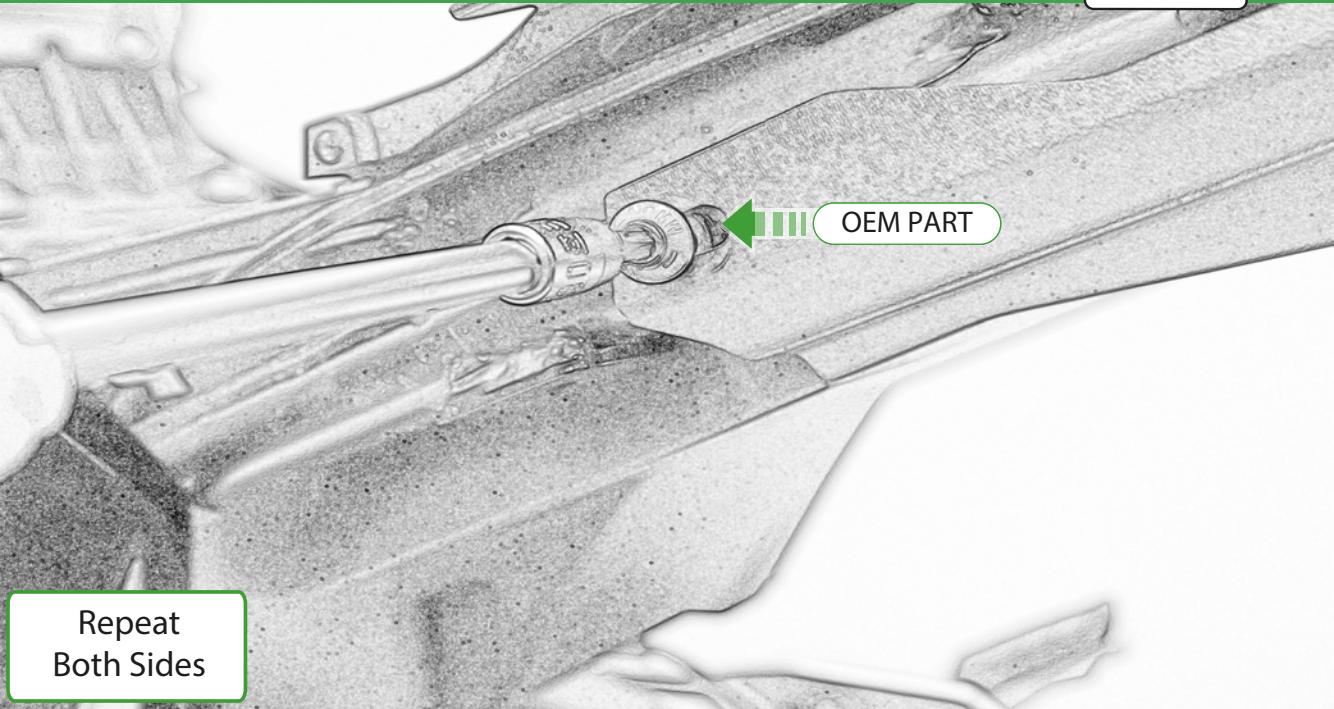

OEM PART


Repeat
Both Sides

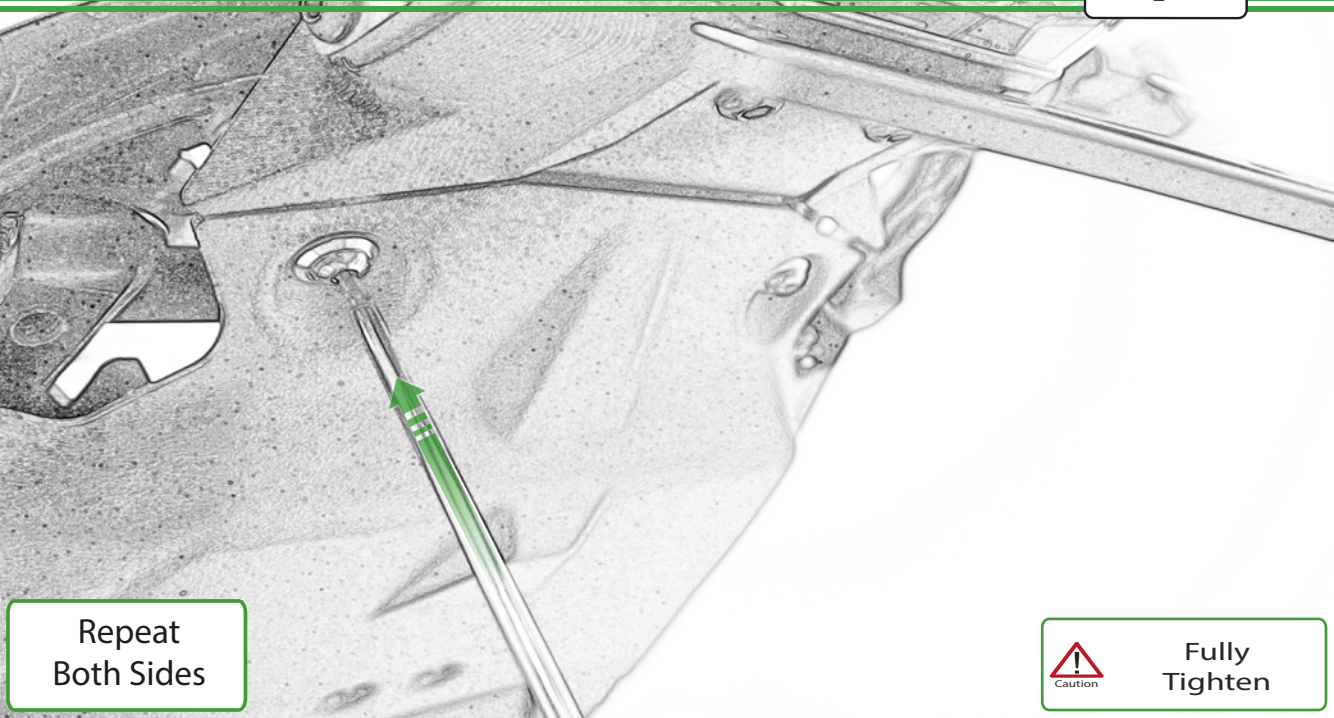



Repeat
Both Sides





Fully
Tighten

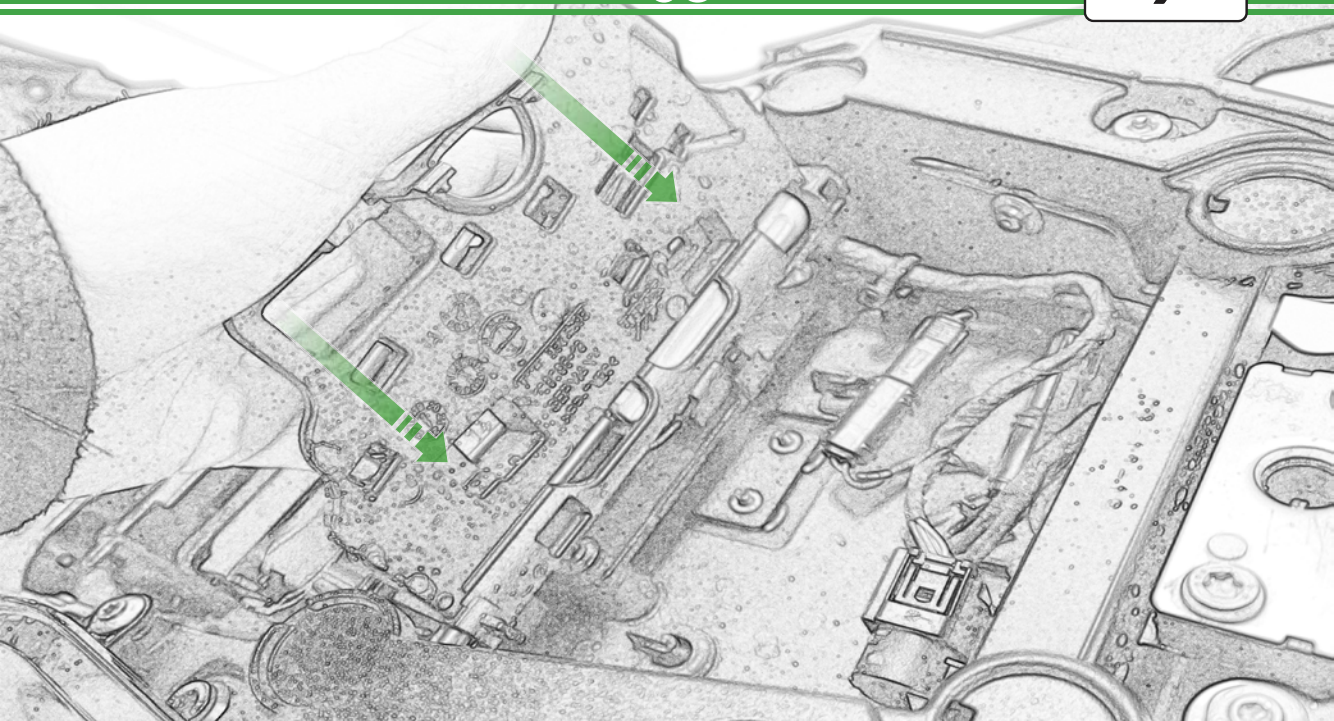


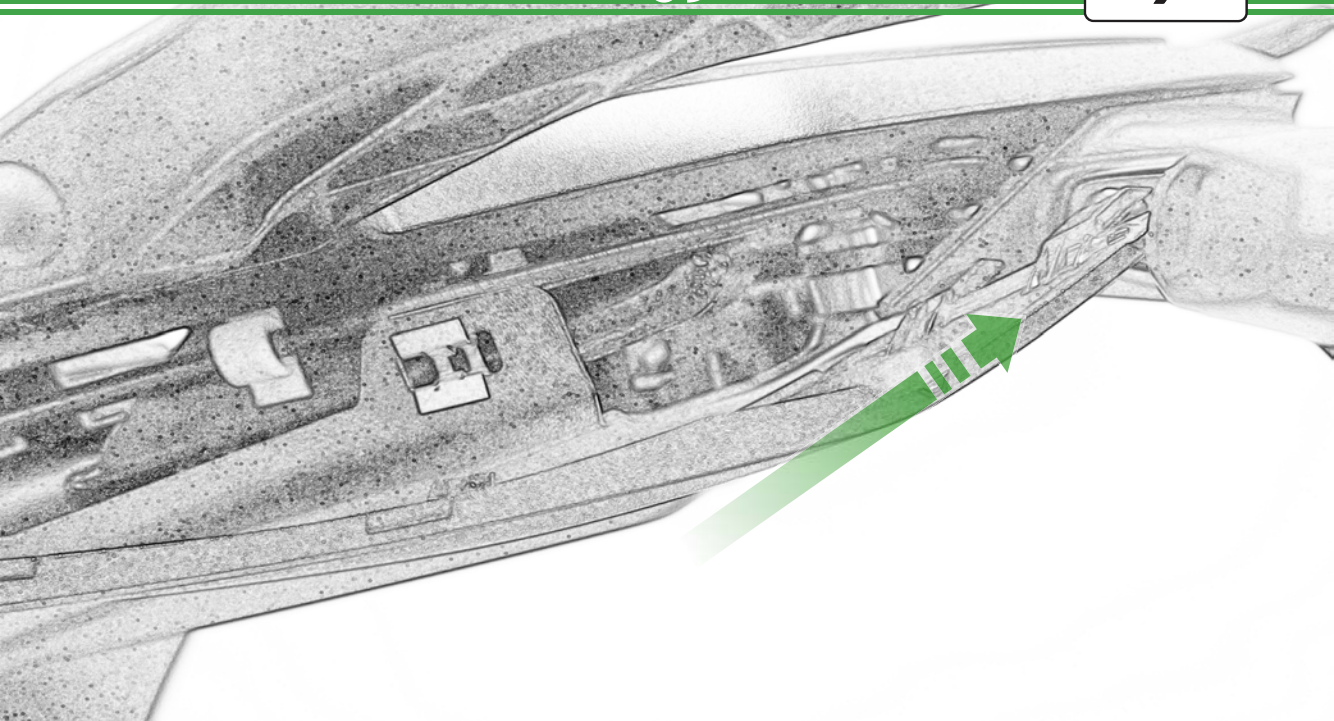

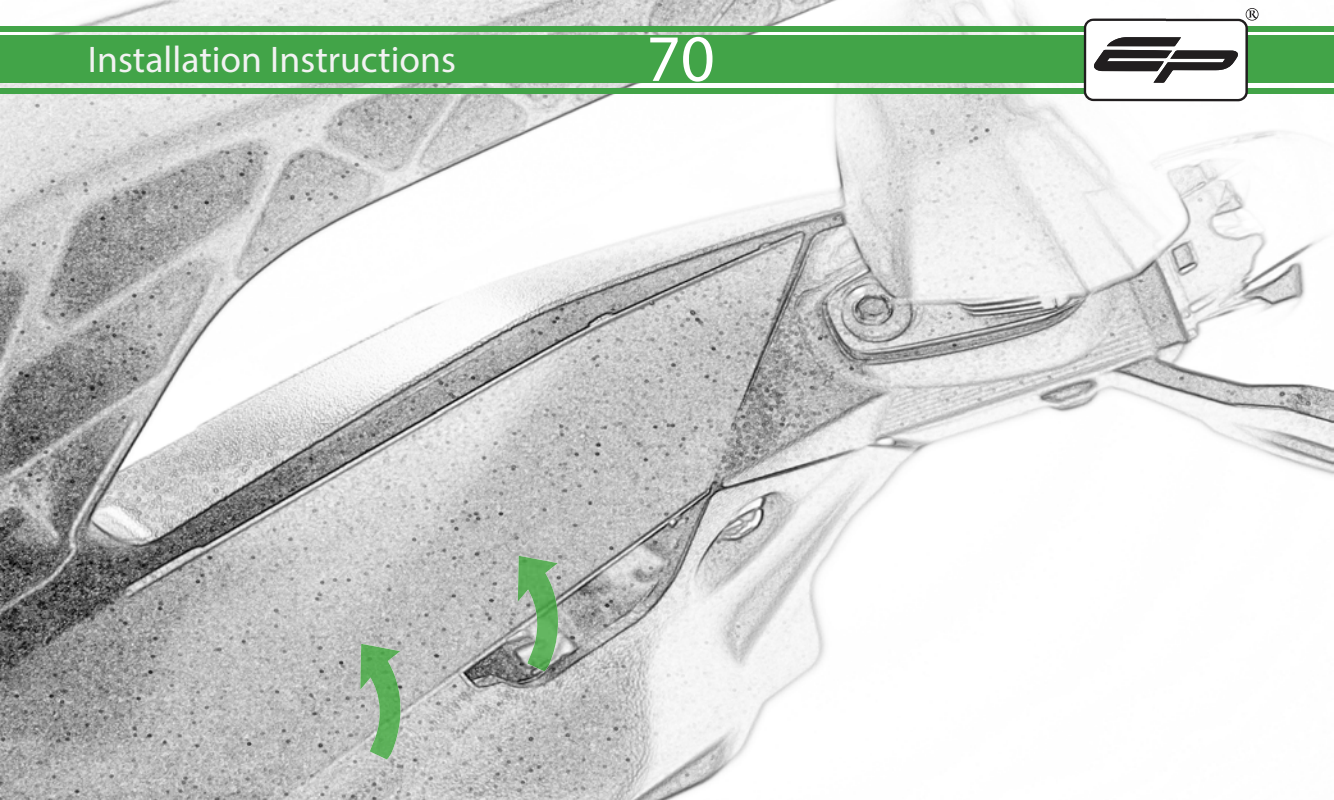

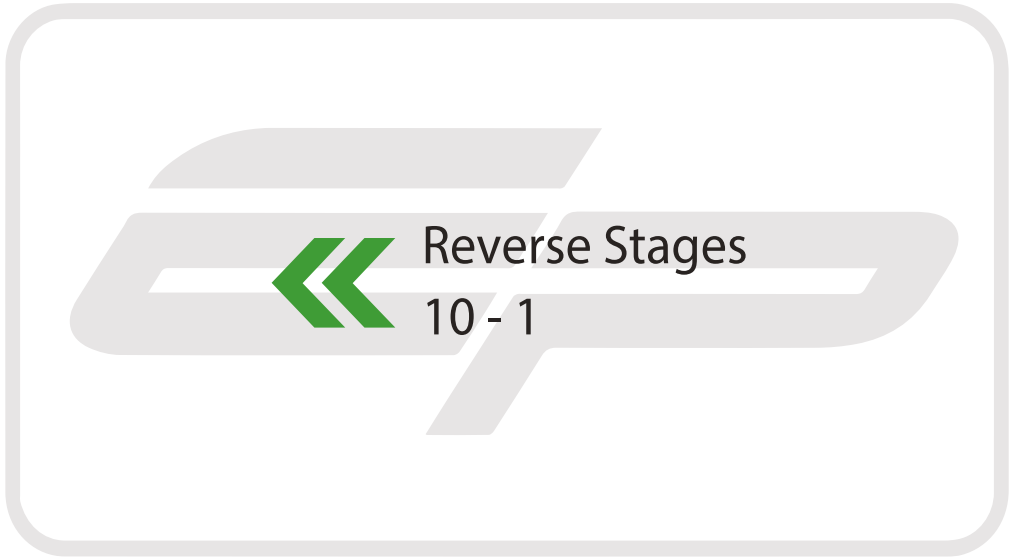

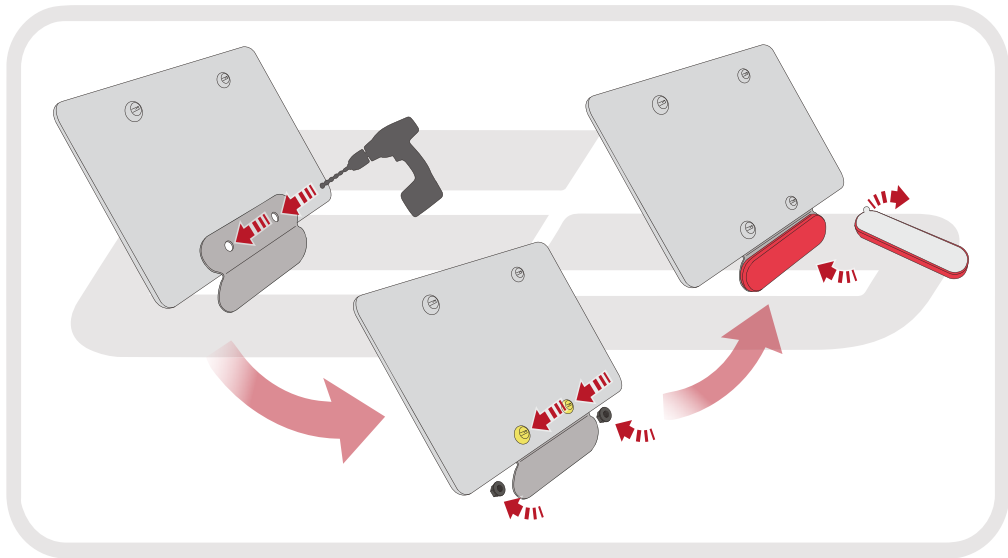

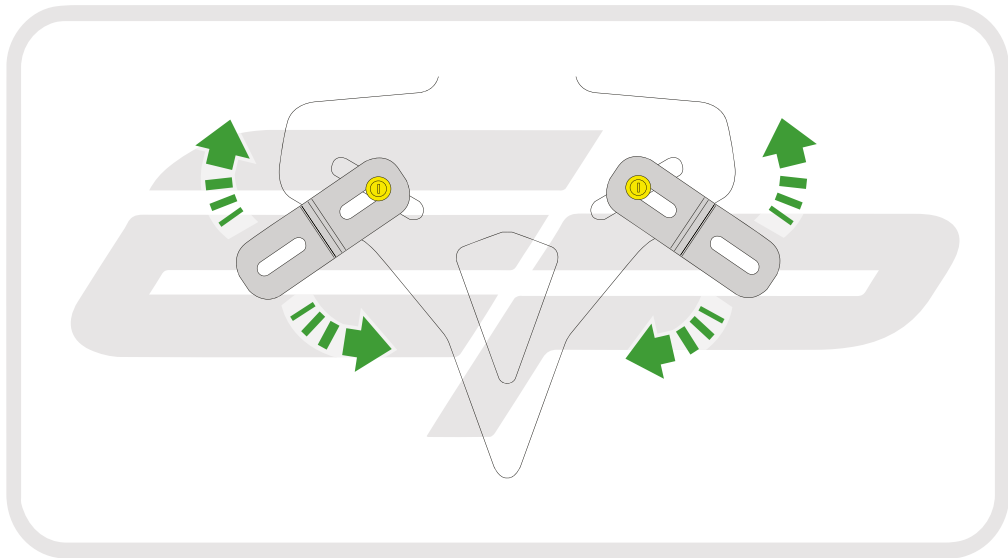



ESSENTIAL CHECKS



After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com