



**EVOTECH**®  
P E R F O R M A N C E

Ducati Diavel 1260  
SP Connect Sat Nav Mount

Installation Instructions



For SP Connect mirco stem mount alu Part number #53122  
follow instructions 1 - 20

For SP Connect anti vibration module Part number #53135  
follow instructions 21 - 38





## Kit Contents PRN01465-014677

- |                                   |                                    |
|-----------------------------------|------------------------------------|
| (A) 1 x M6 x 16 Countersunk Screw | (L) 2 x M4 x 5mm Button Head Bolts |
| (B) 1 x Pivot Plate               |                                    |
| (C) 1 x SP Connect Plate          | Sub Kit                            |
| (D) 2 x M5 x 10mm Caphead Bolts   | (M) 1 x Lower Bracket              |
| (E) 2 x P-clips (No.1)            | (N) 1 x Upper Bracket              |
| (F) 2 x P-clips (No.2)            | (O) 1 x Spanner                    |
| (G) 2 x P-clips (No.3)            | (P) 2 x Rubber Grommet             |
| (H) 2 x P-clips (No.4)            | (Q) 2 x M6 x 16 Button Head Bolts  |
| (I) 2 x Lobe Screw                | (R) 1 x M5 Nylock Nut              |
| (J) 2 x Locking Washer            |                                    |
| (K) 2 x M5 Black Washer           |                                    |






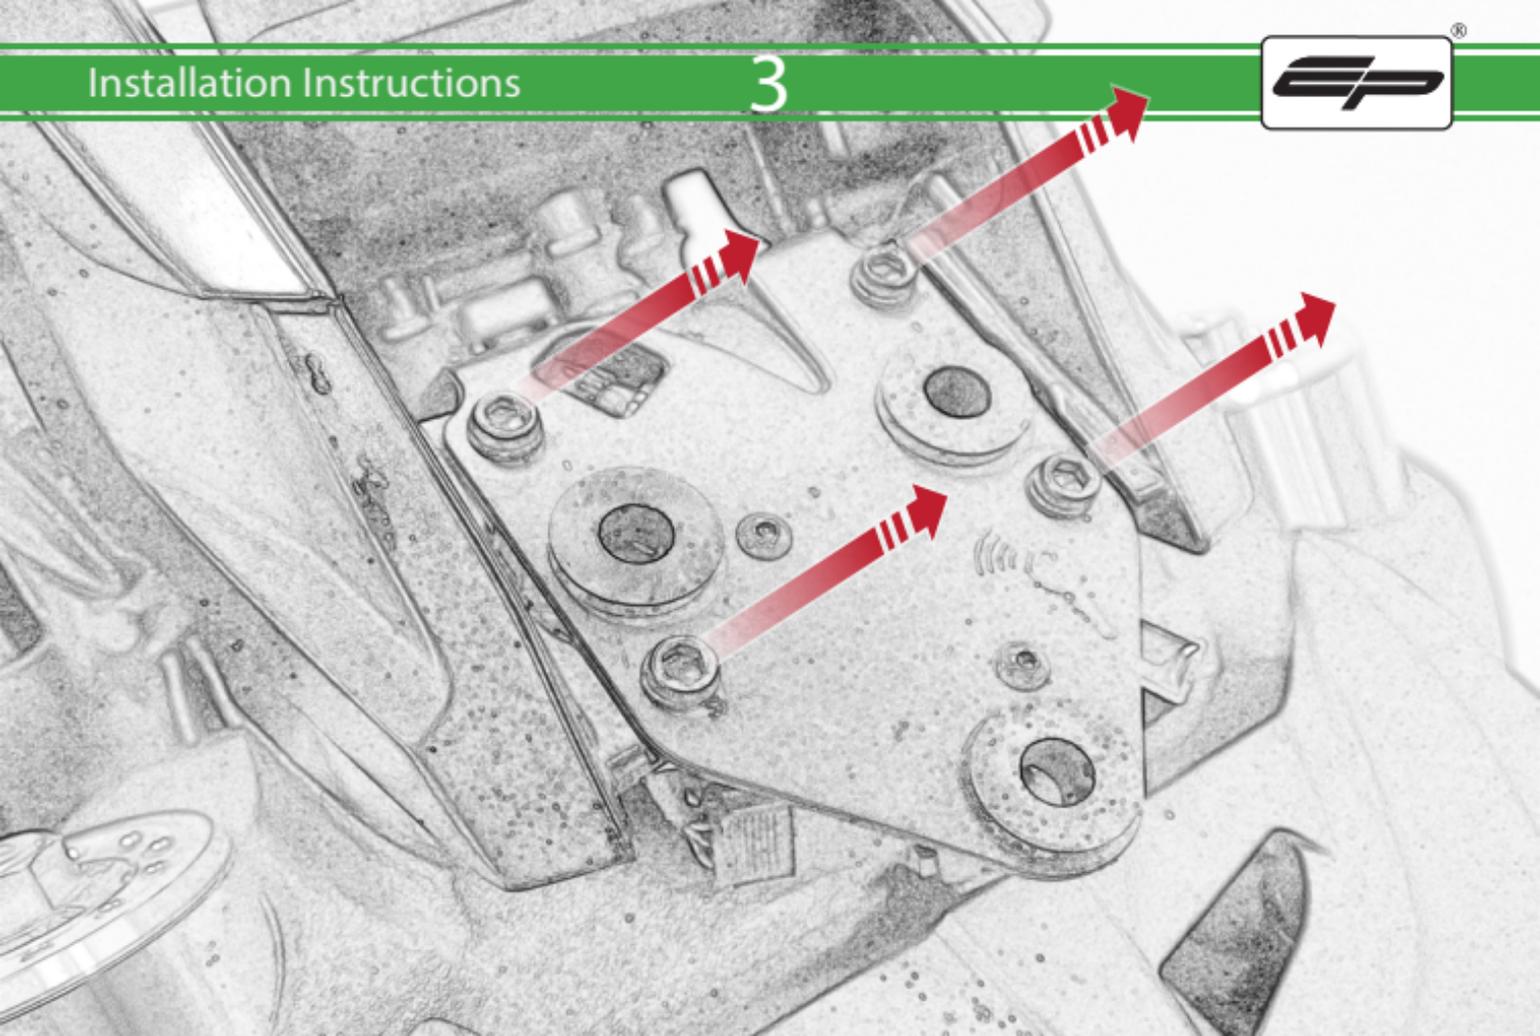


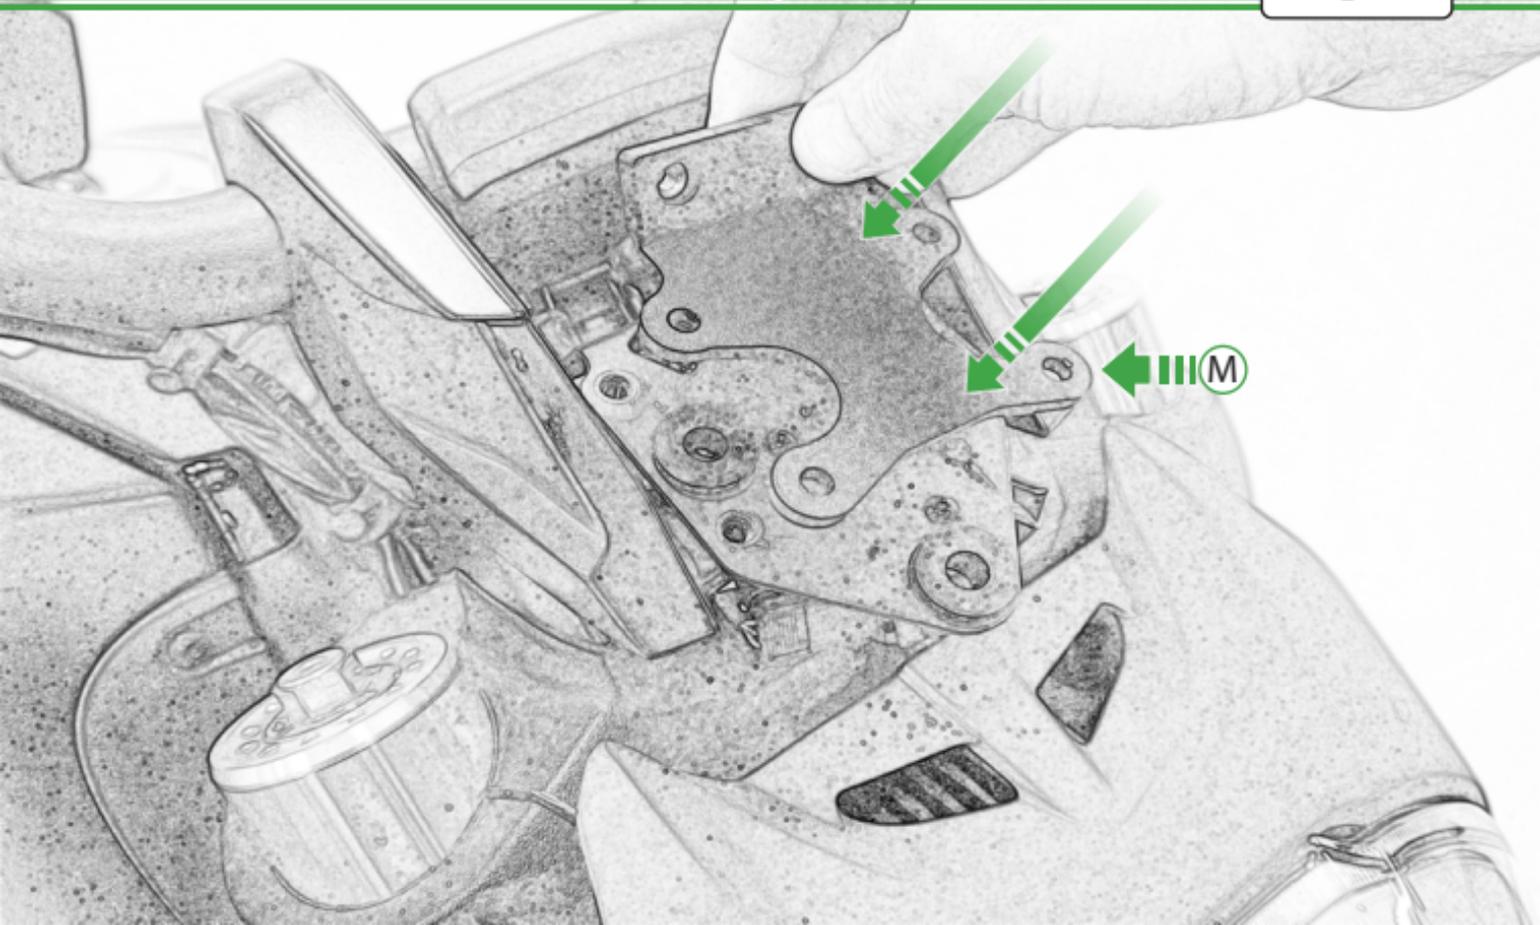







← OEM PART

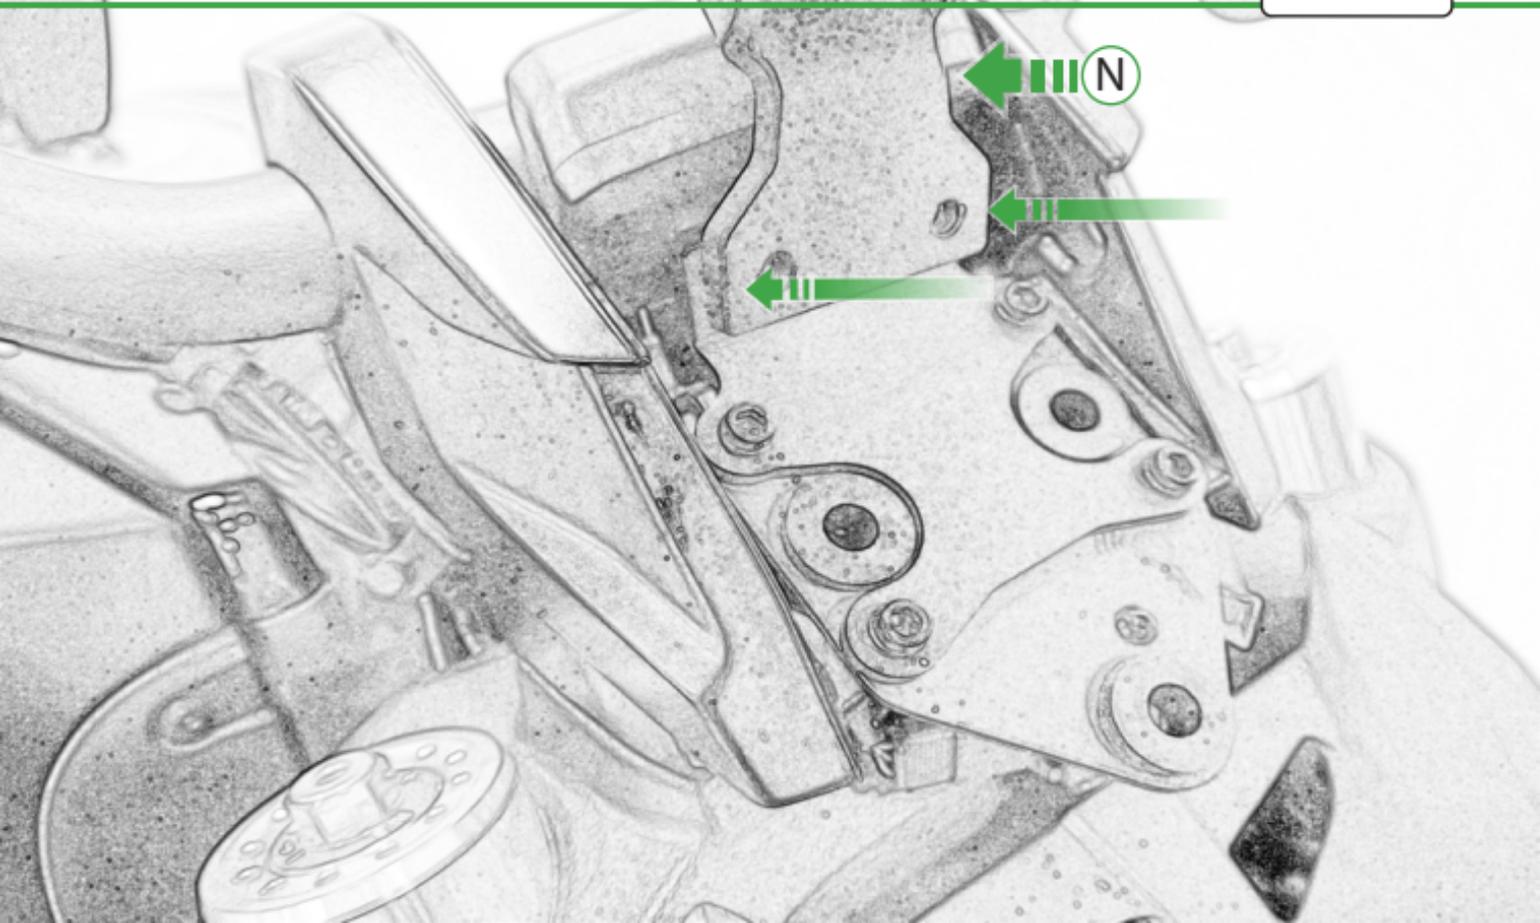


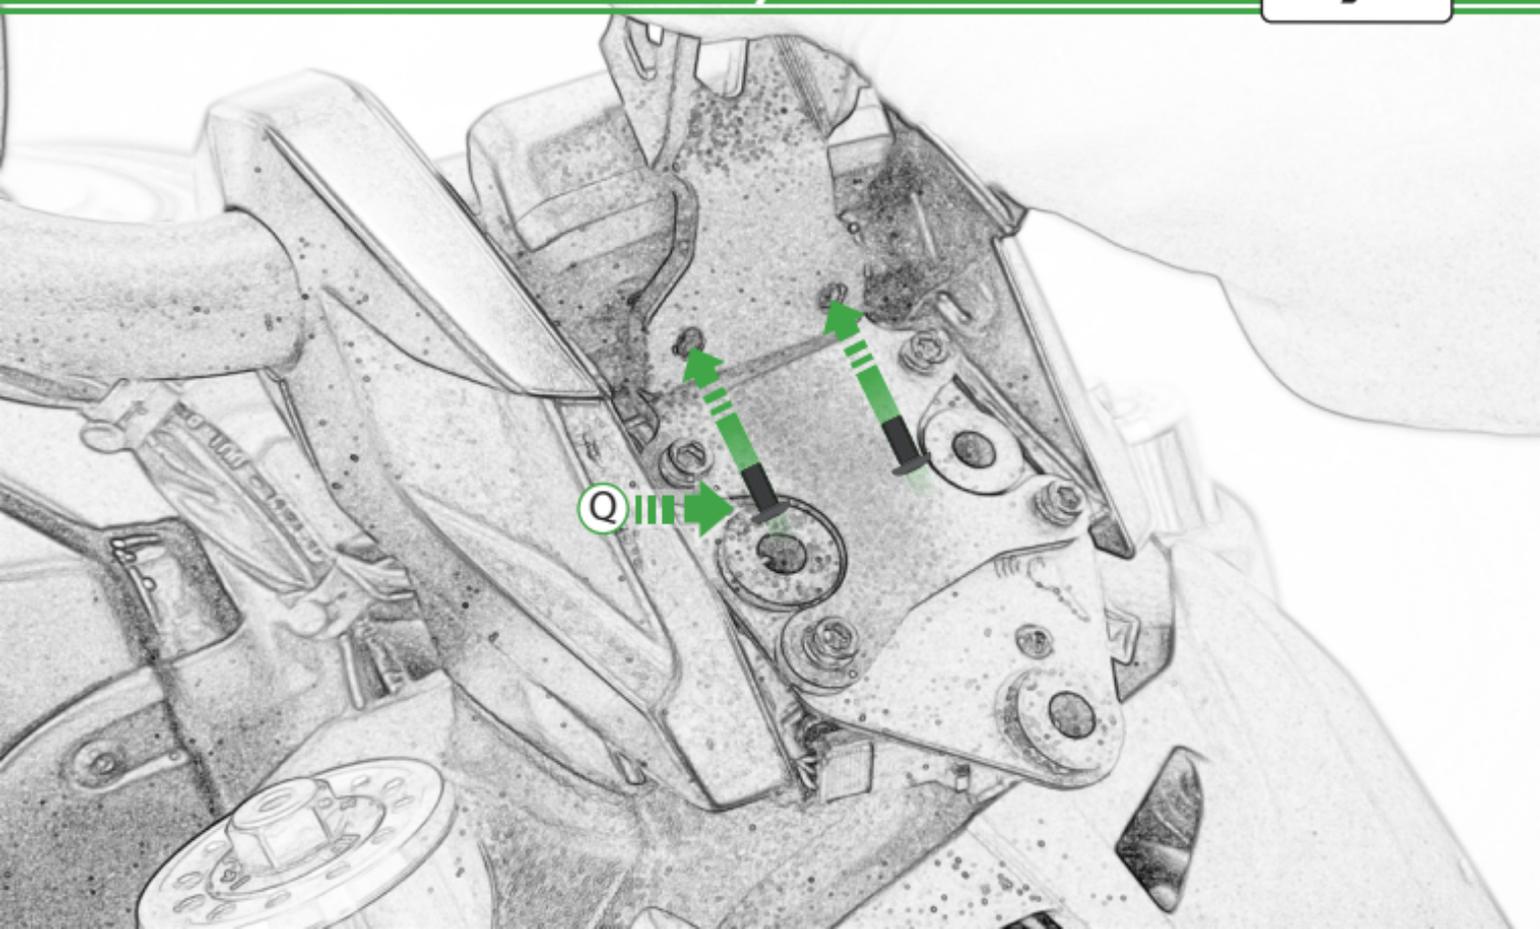


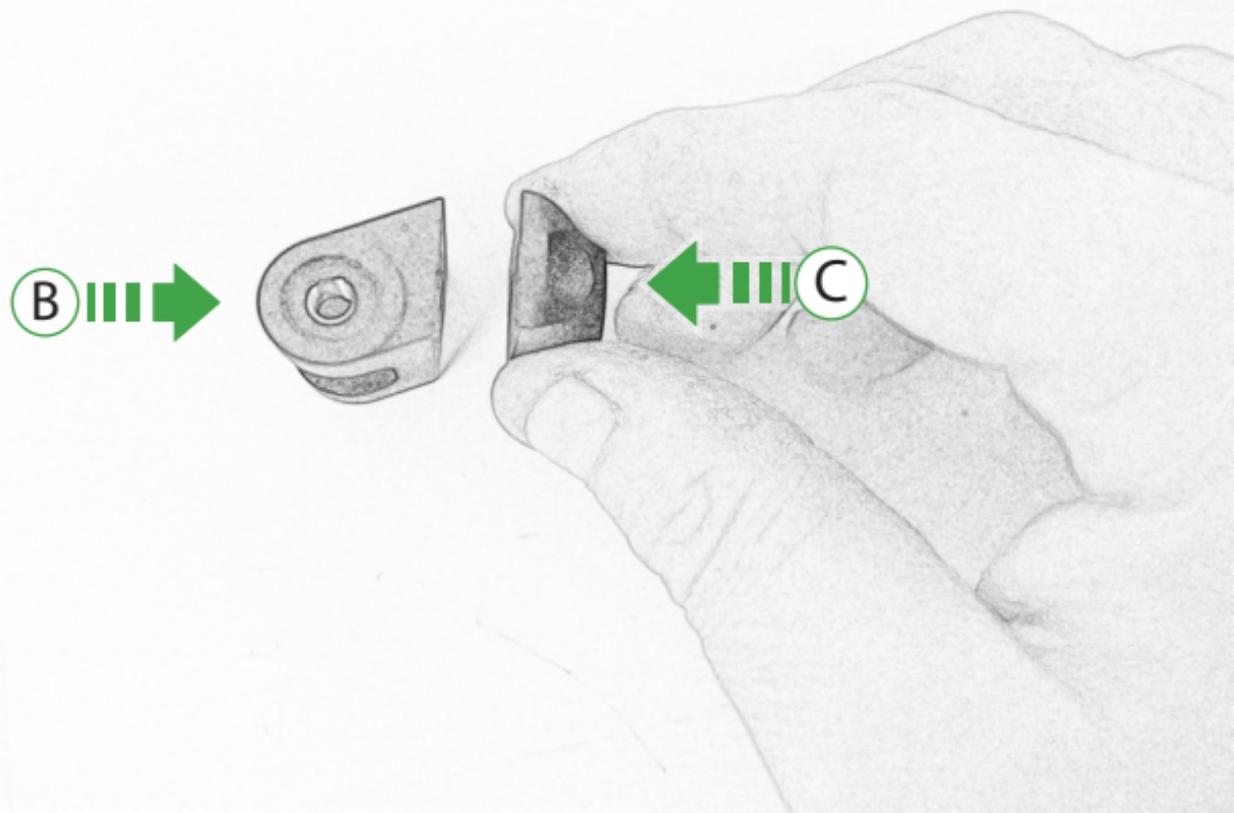


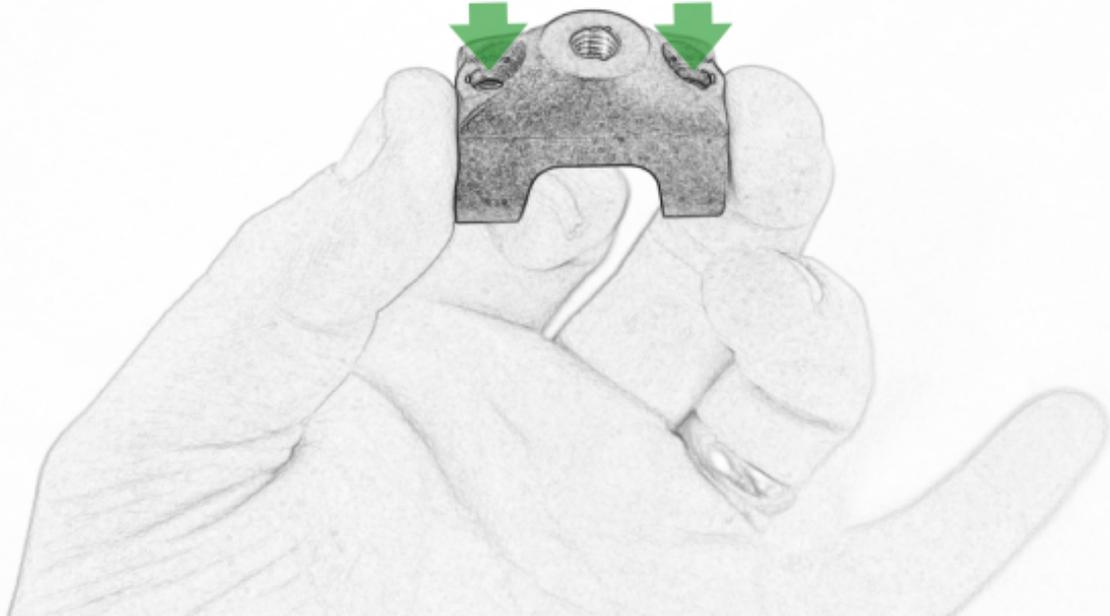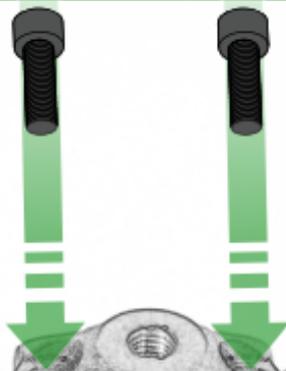

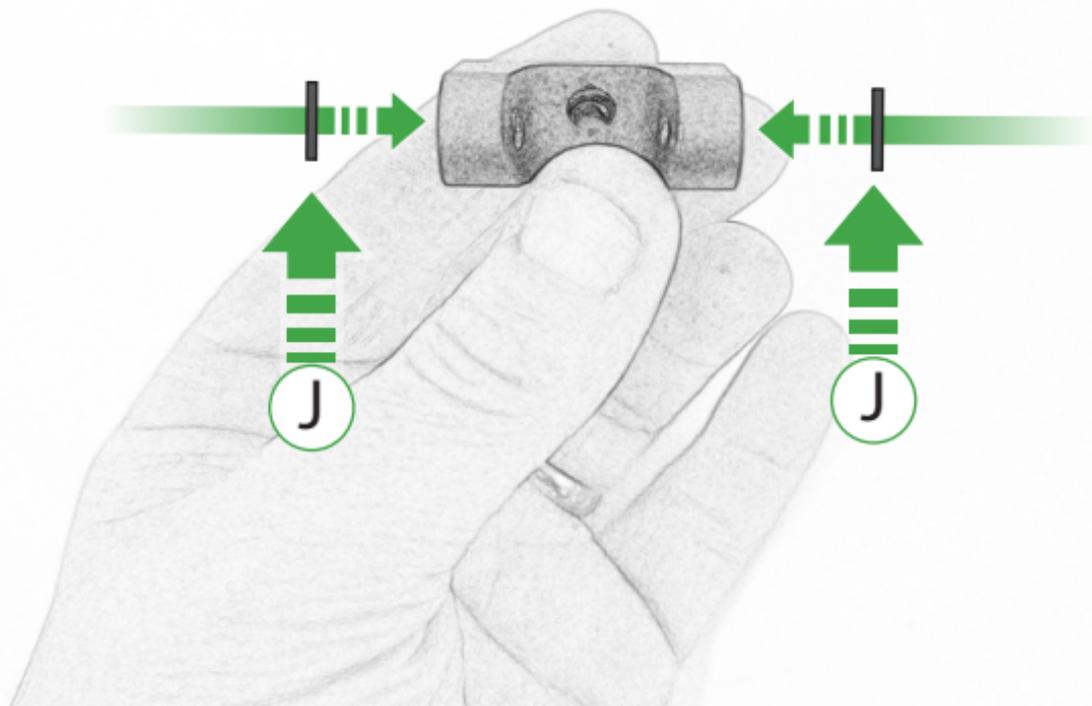


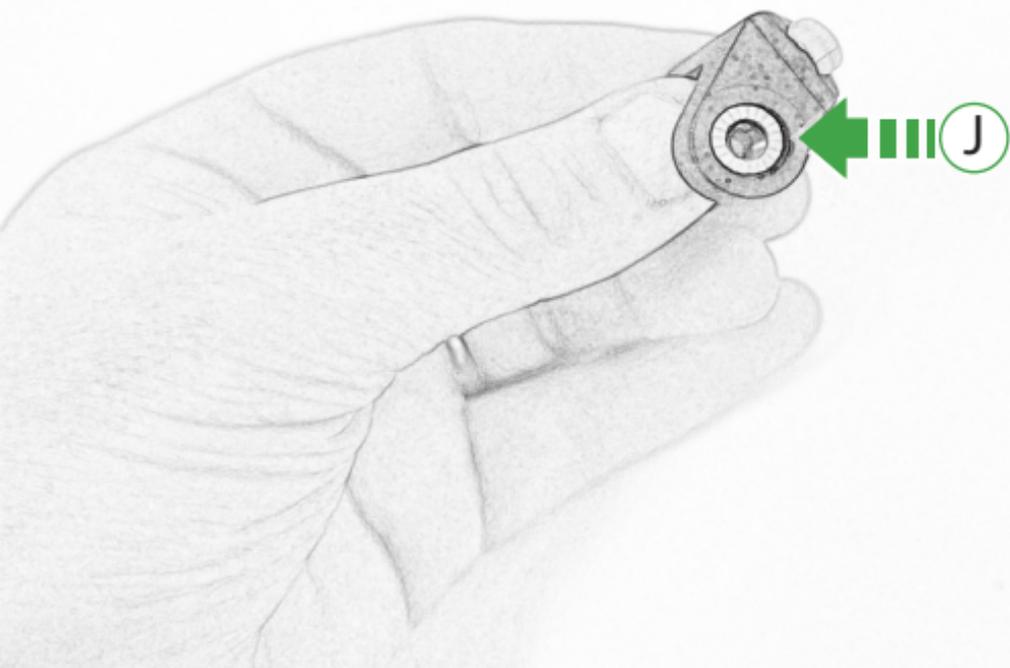


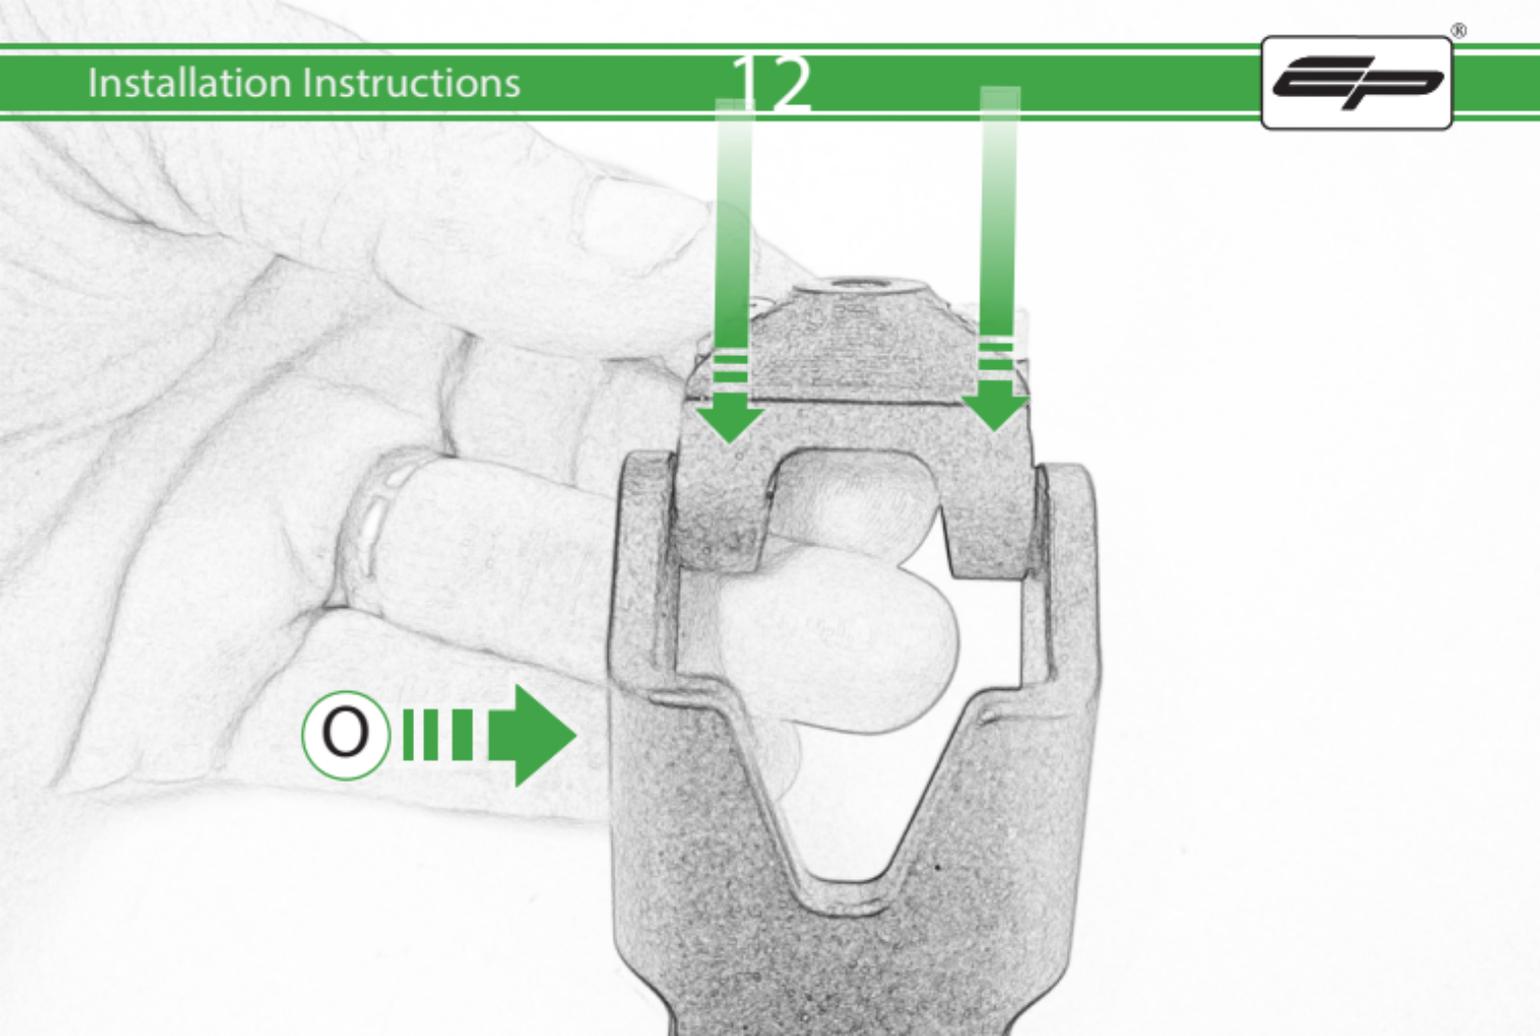


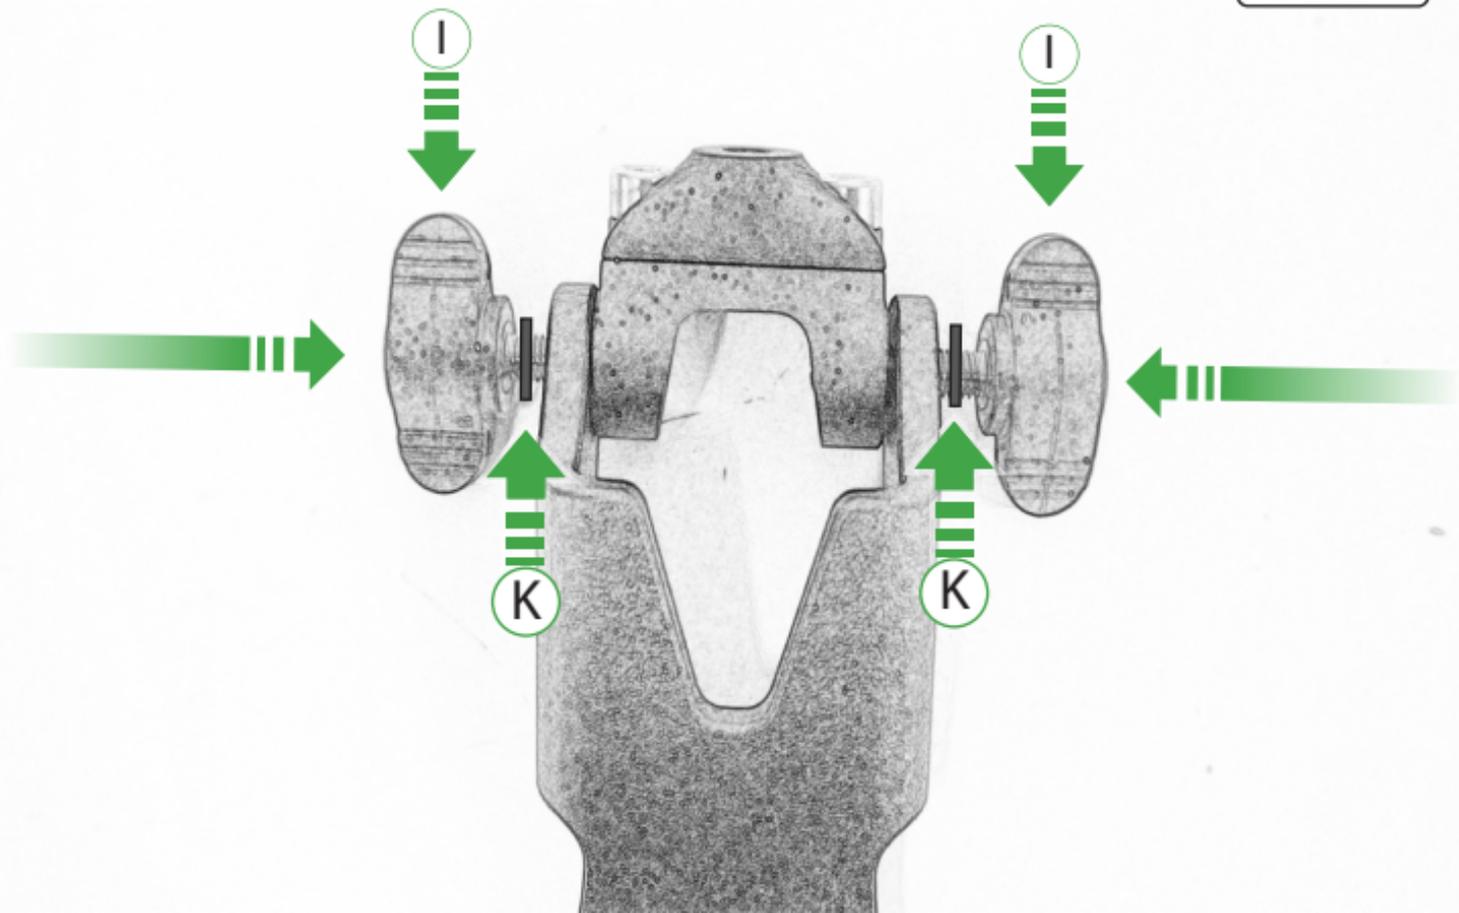





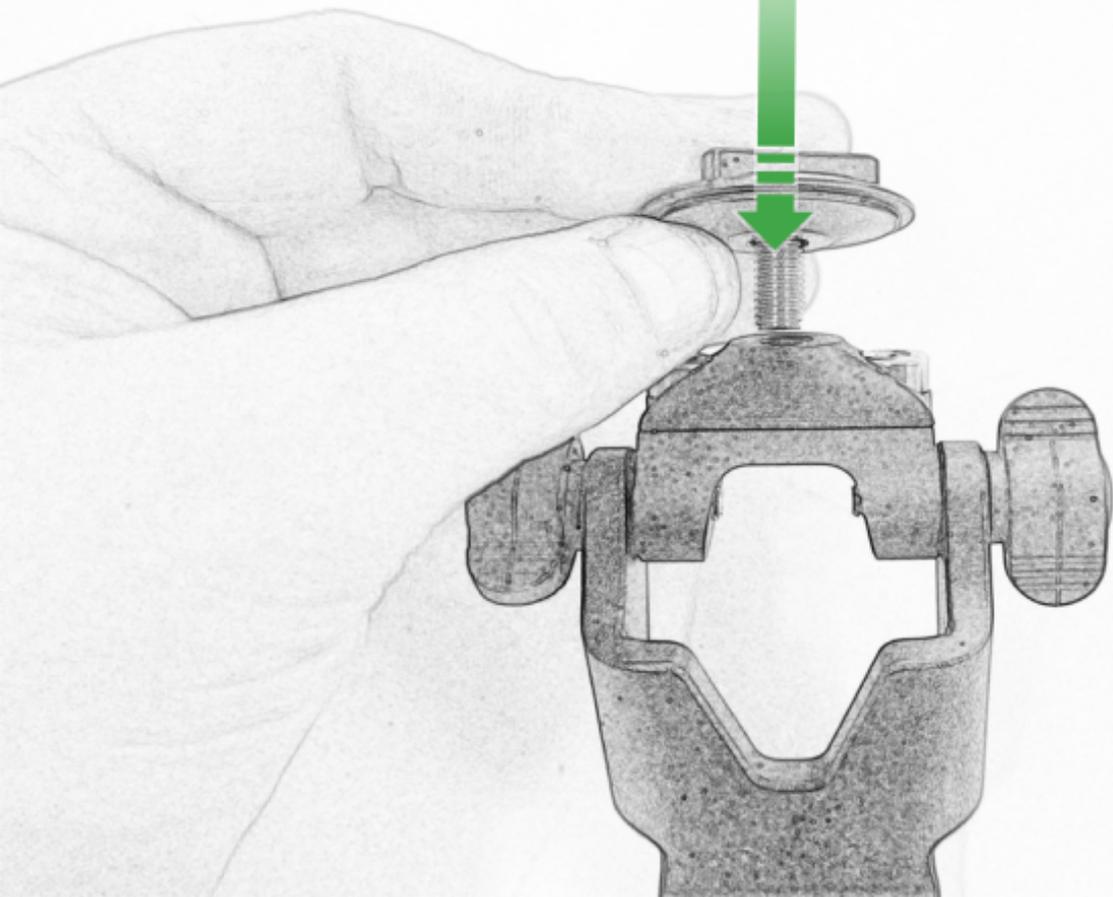


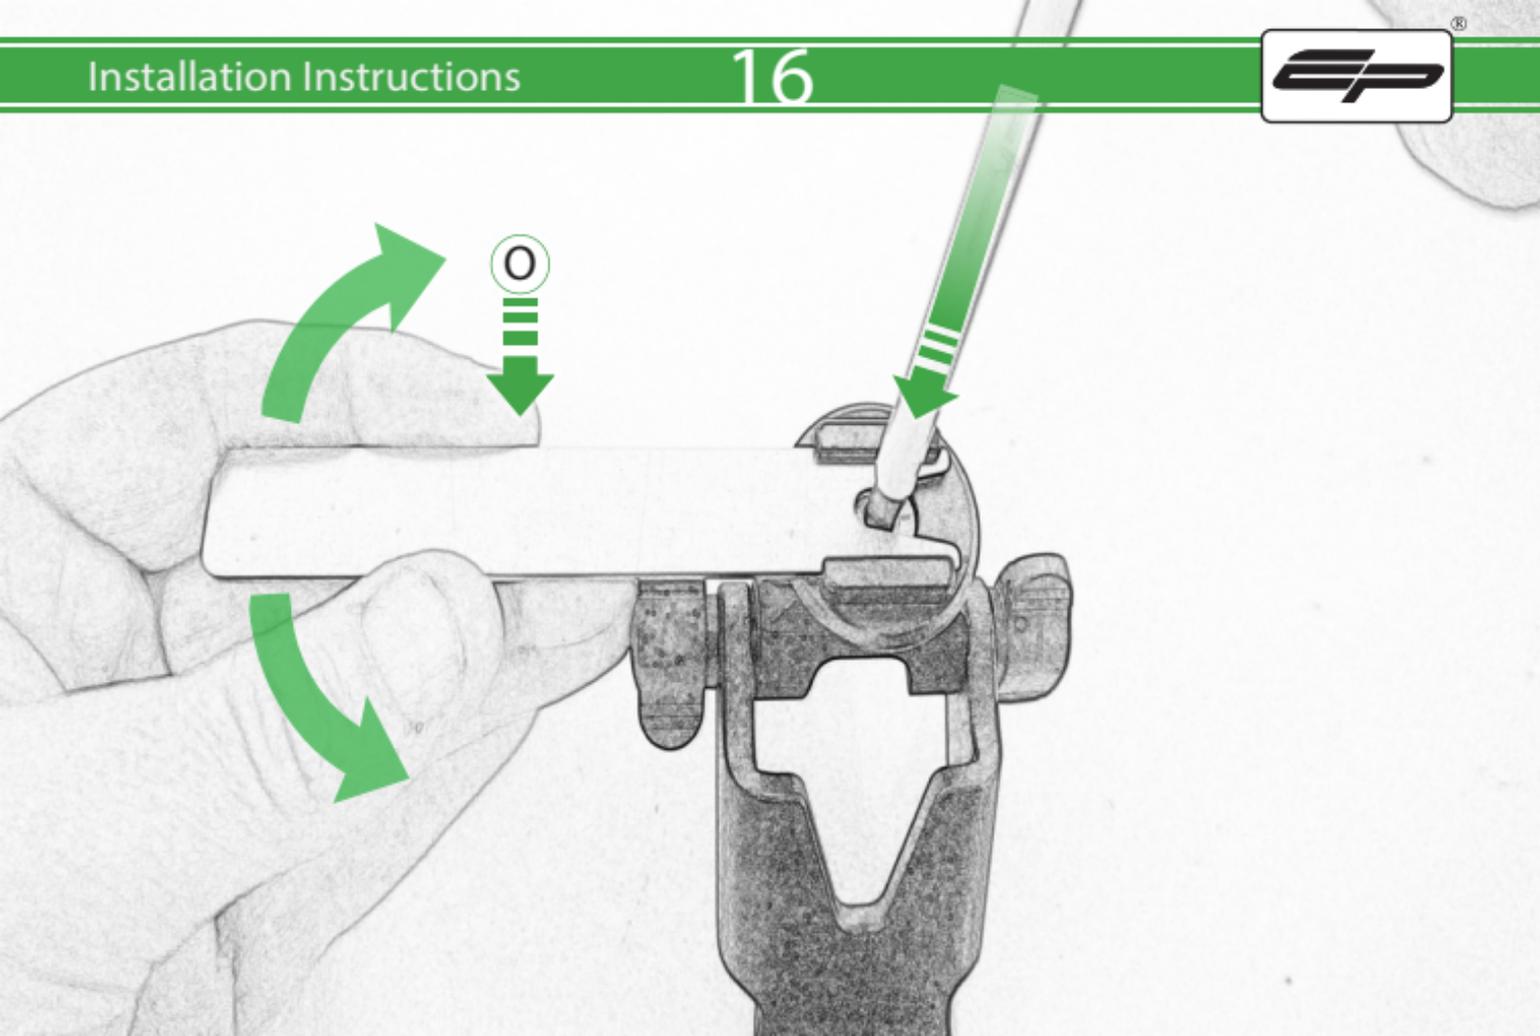

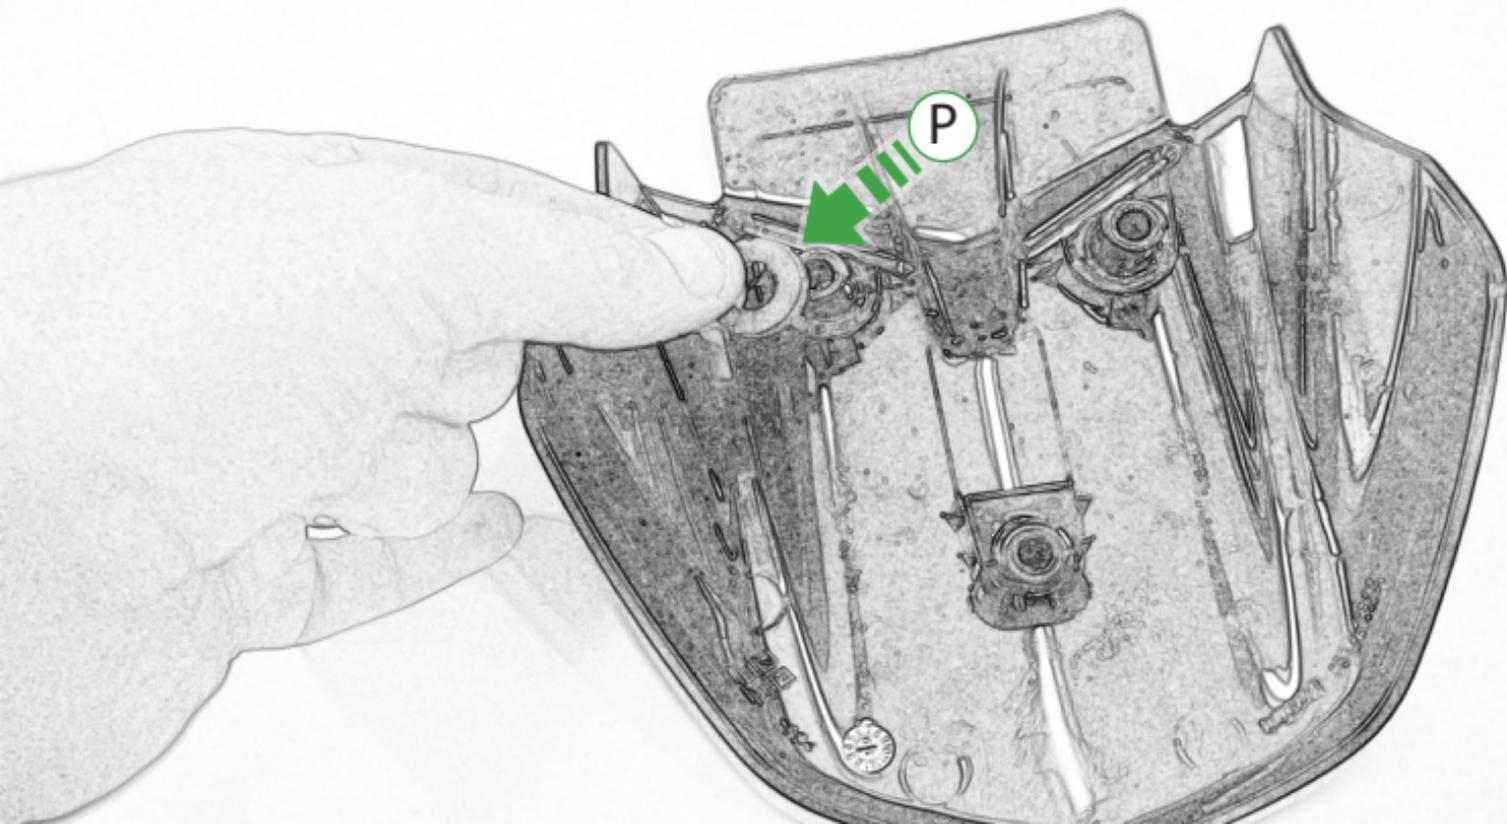

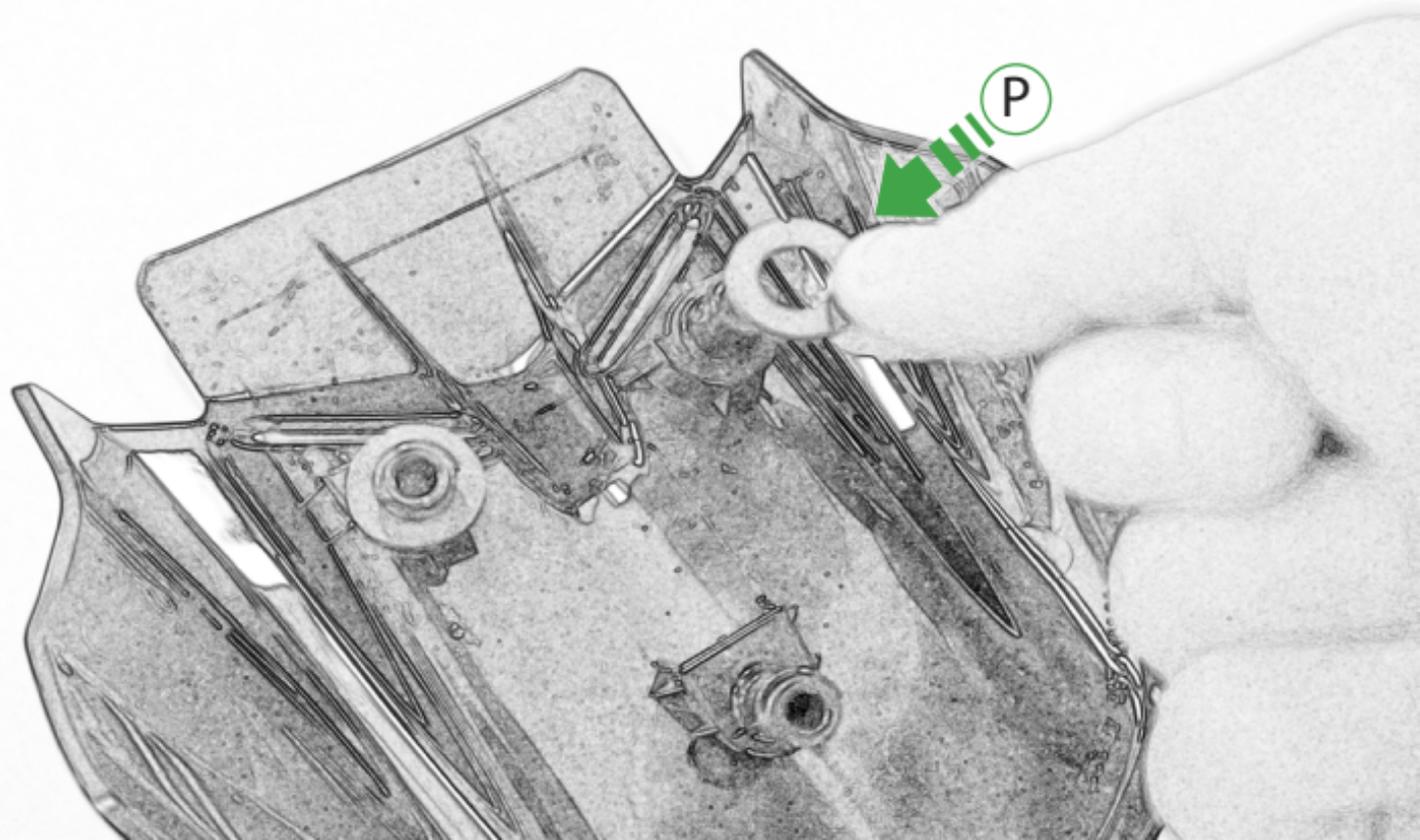

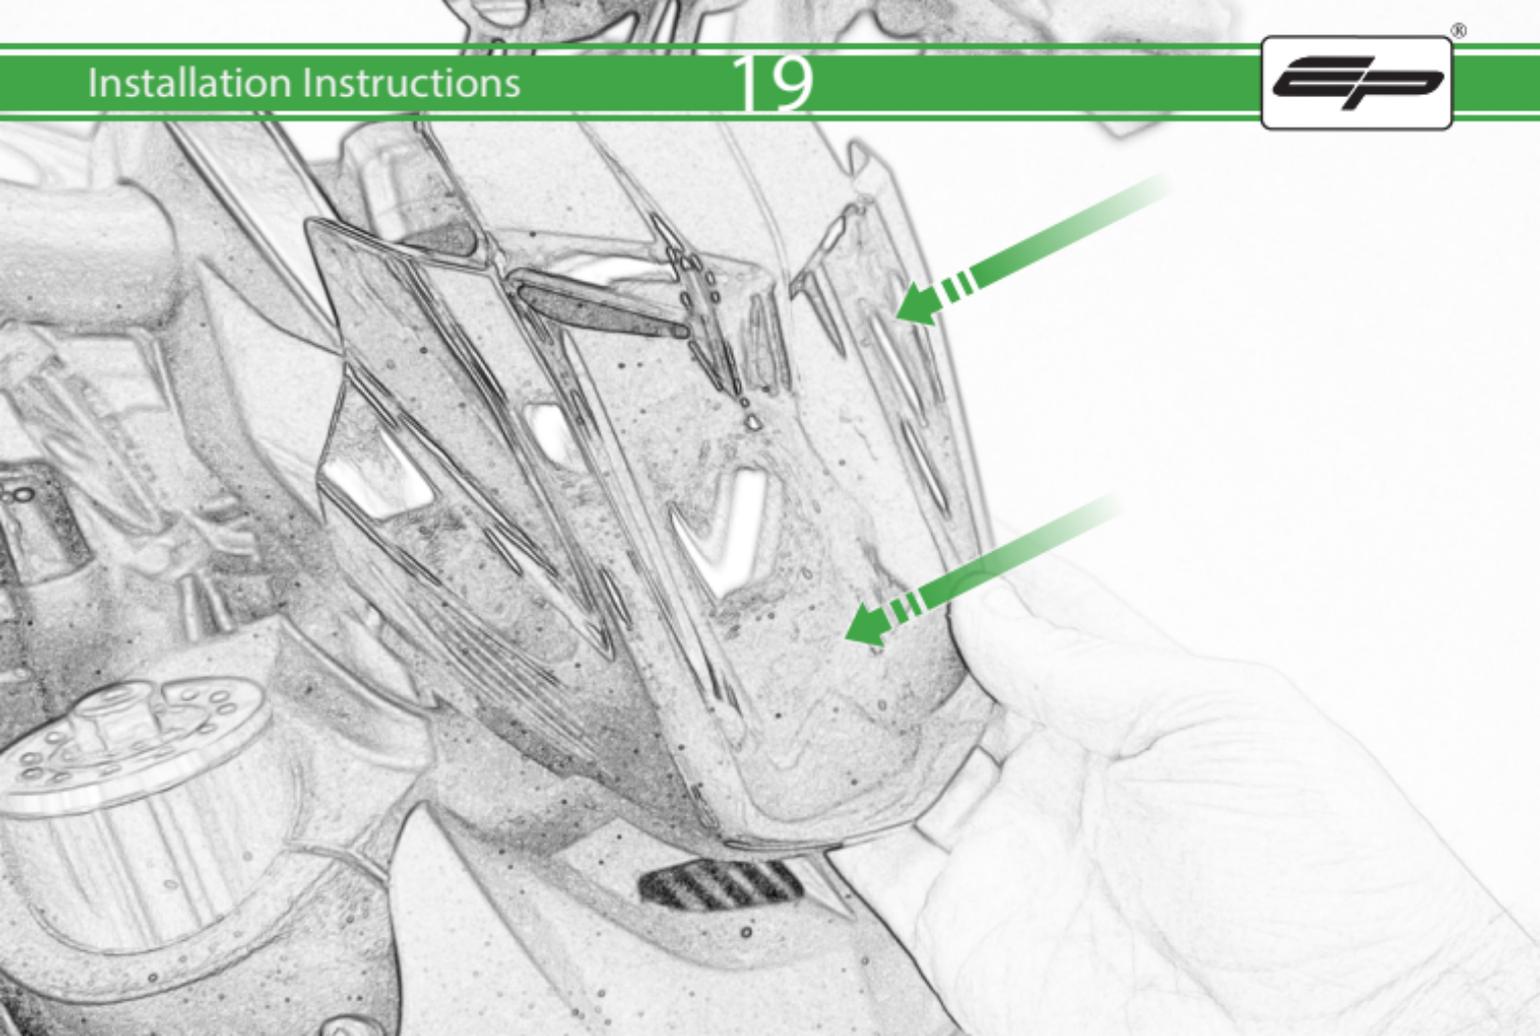

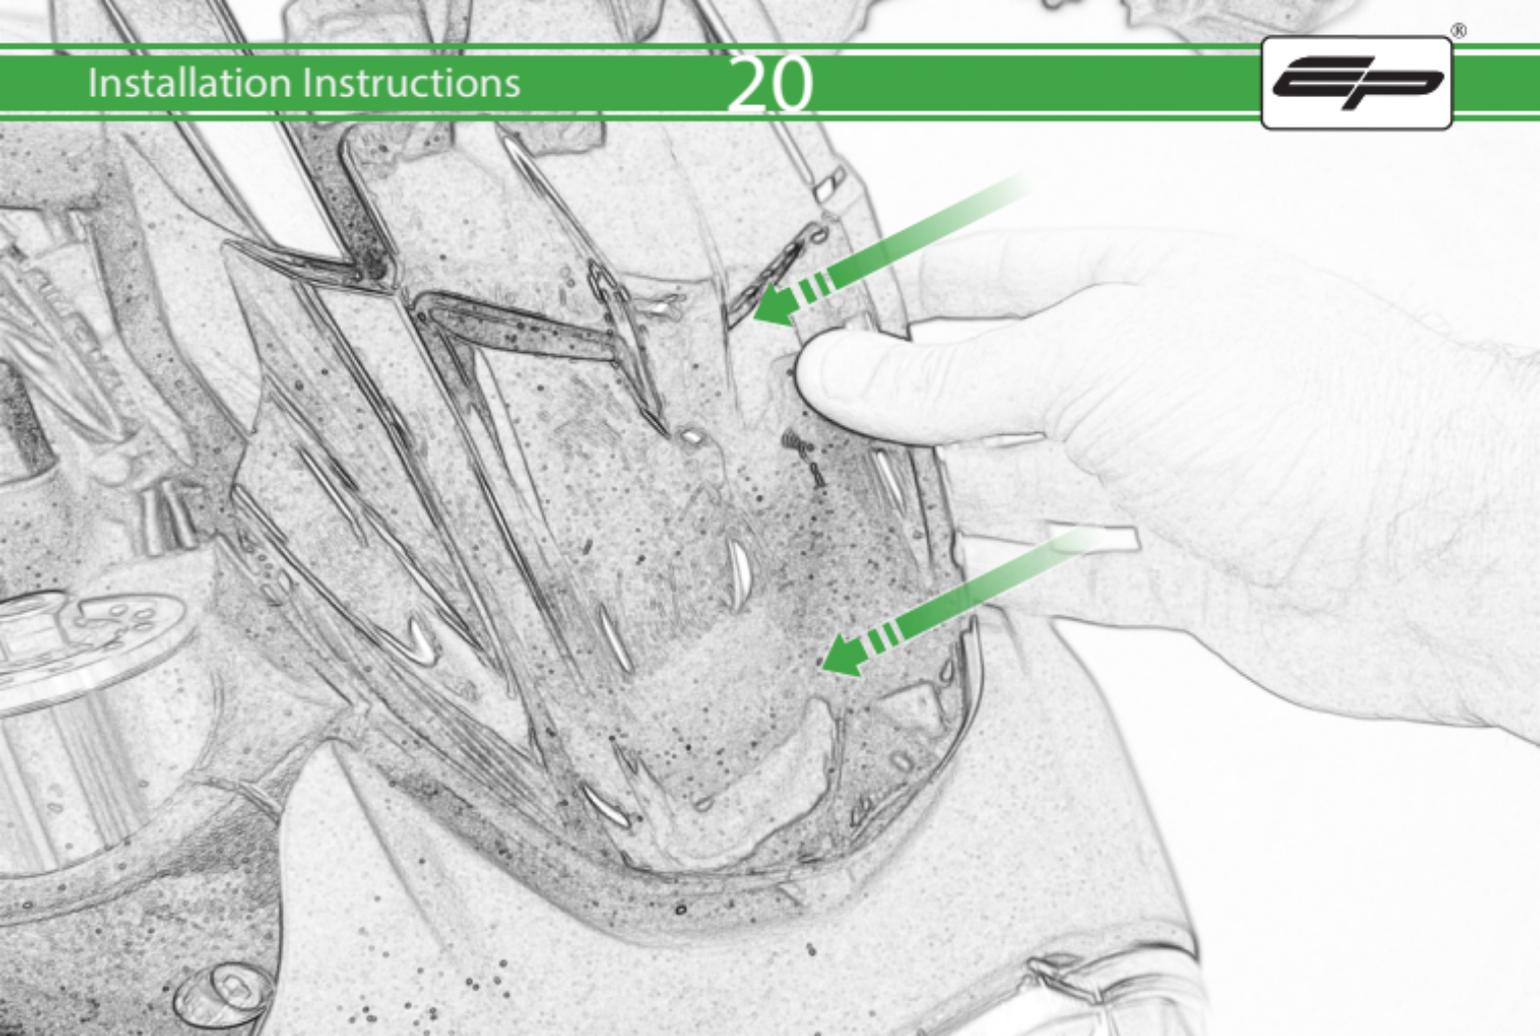






## Kit Contents PRN01465-014677

- |                                   |                                    |
|-----------------------------------|------------------------------------|
| (A) 1 x M6 x 16 Countersunk Screw | (L) 2 x M4 x 5mm Button Head Bolts |
| (B) 1 x Pivot Plate               |                                    |
| (C) 1 x SP Connect Plate          | Sub Kit                            |
| (D) 2 x M5 x 10mm Caphead Bolts   | (M) 1 x Lower Bracket              |
| (E) 2 x P-clips (No.1)            | (N) 1 x Upper Bracket              |
| (F) 2 x P-clips (No.2)            | (O) 1 x Spanner                    |
| (G) 2 x P-clips (No.3)            | (P) 2 x Rubber Grommet             |
| (H) 2 x P-clips (No.4)            | (Q) 2 x M6 x 16 Button Head Bolts  |
| (I) 2 x Lobe Screw                | (R) 1 x M5 Nylock Nut              |
| (J) 2 x Locking Washer            |                                    |
| (K) 2 x M5 Black Washer           |                                    |



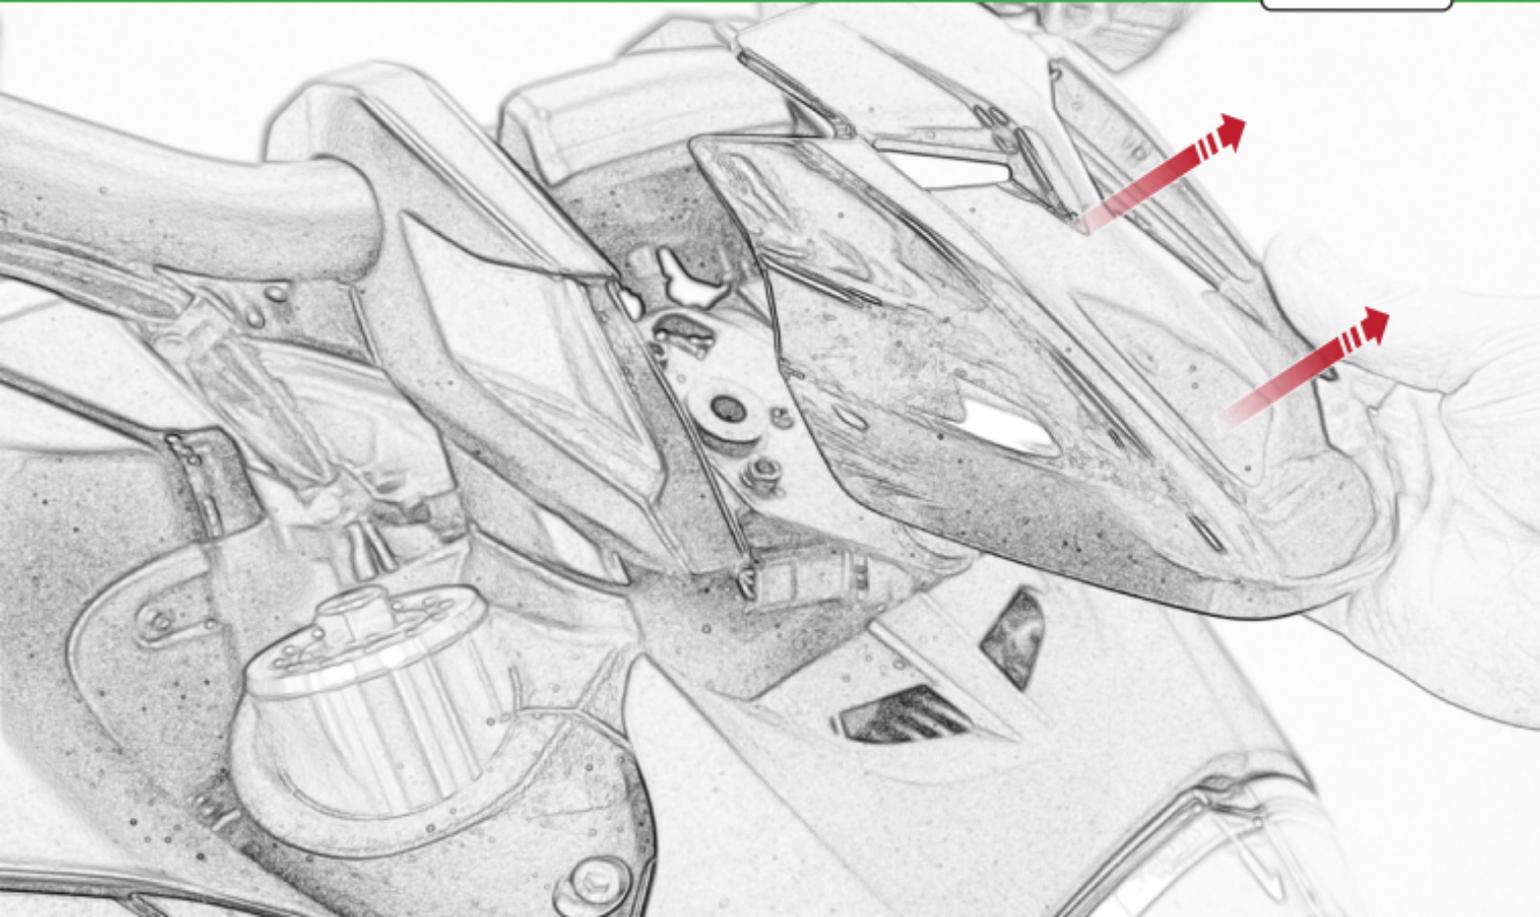


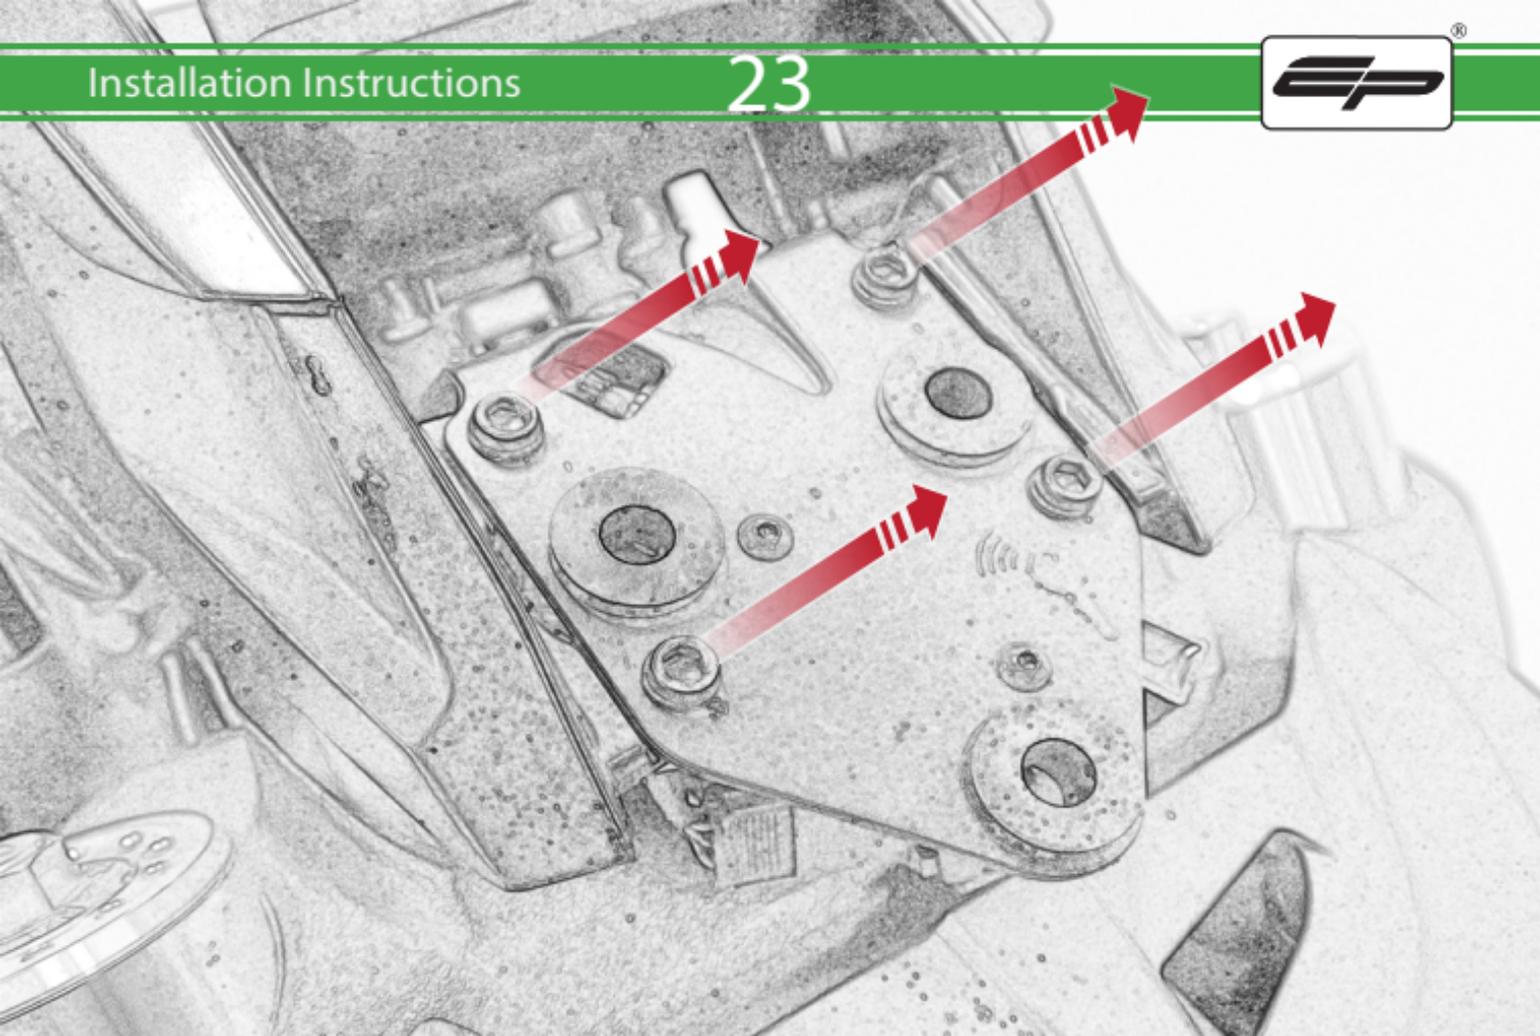


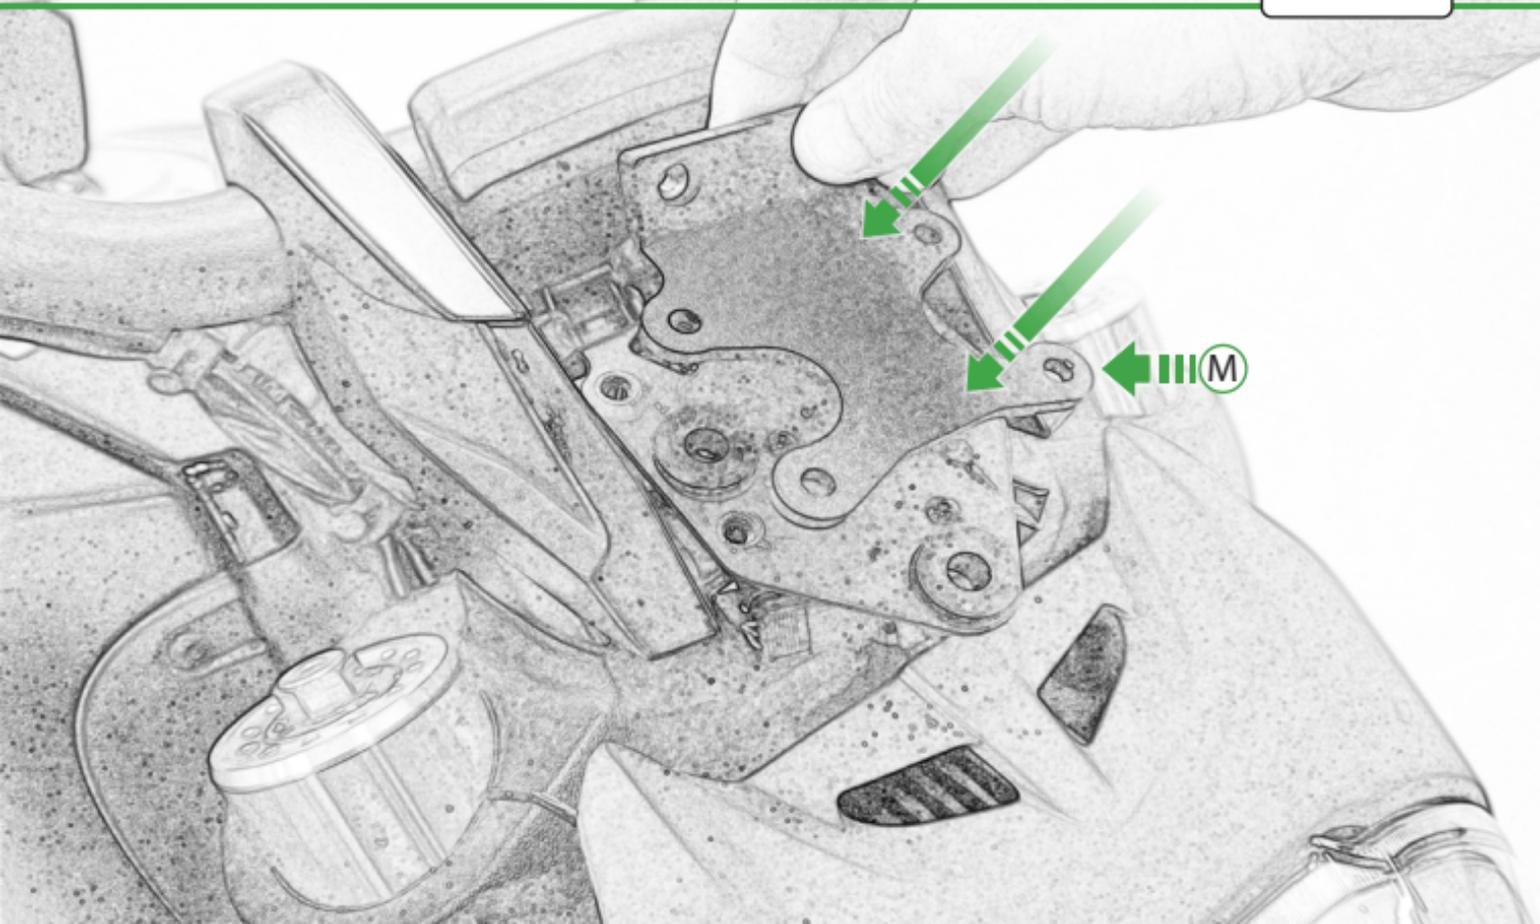




← OEM PART

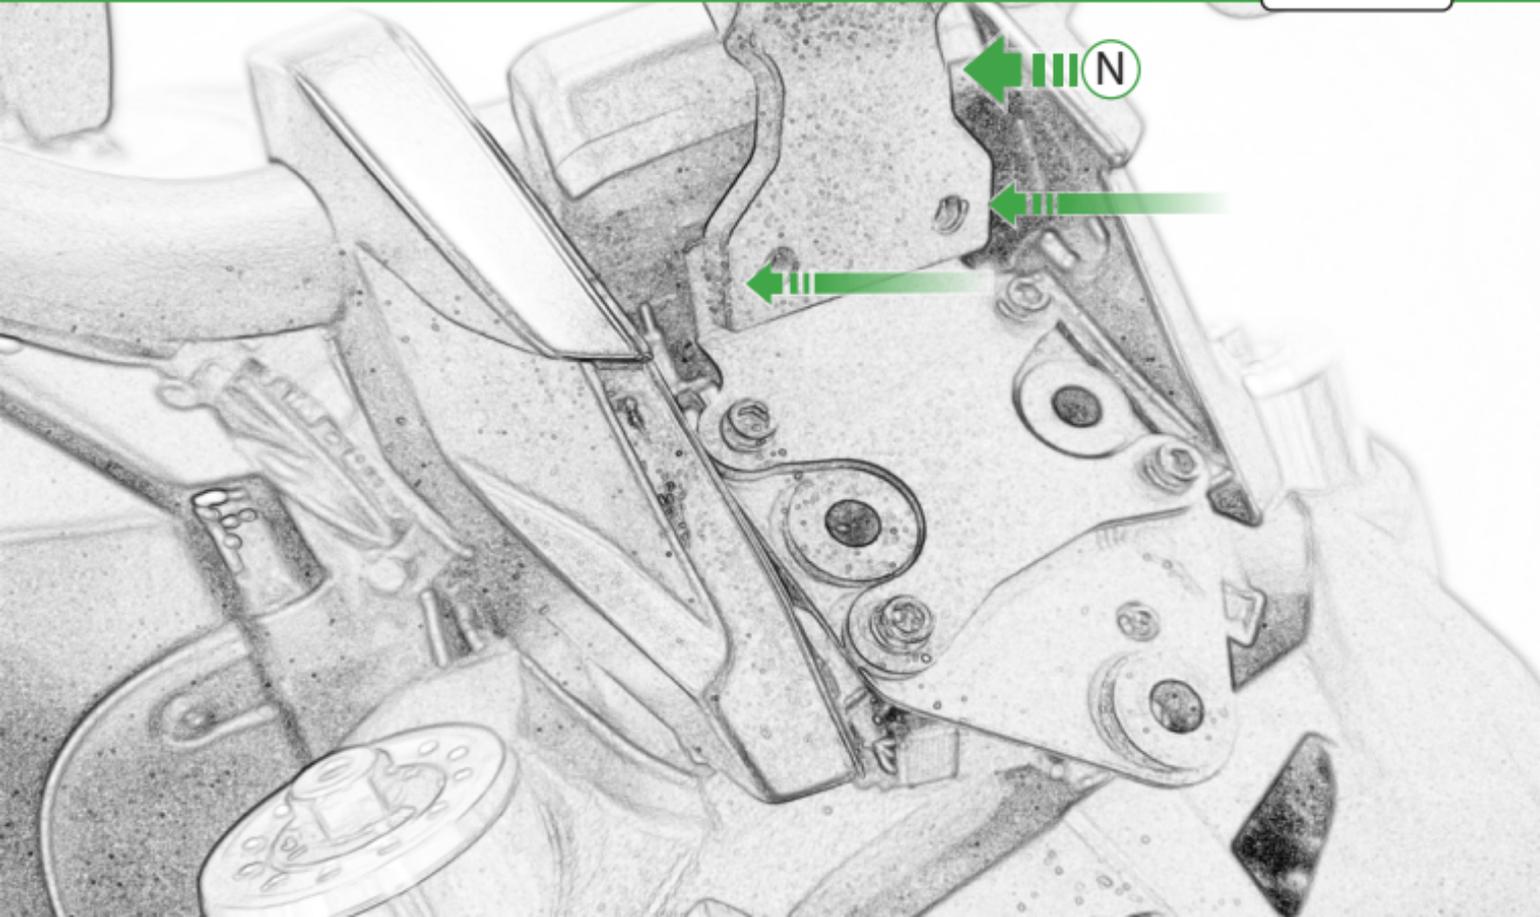


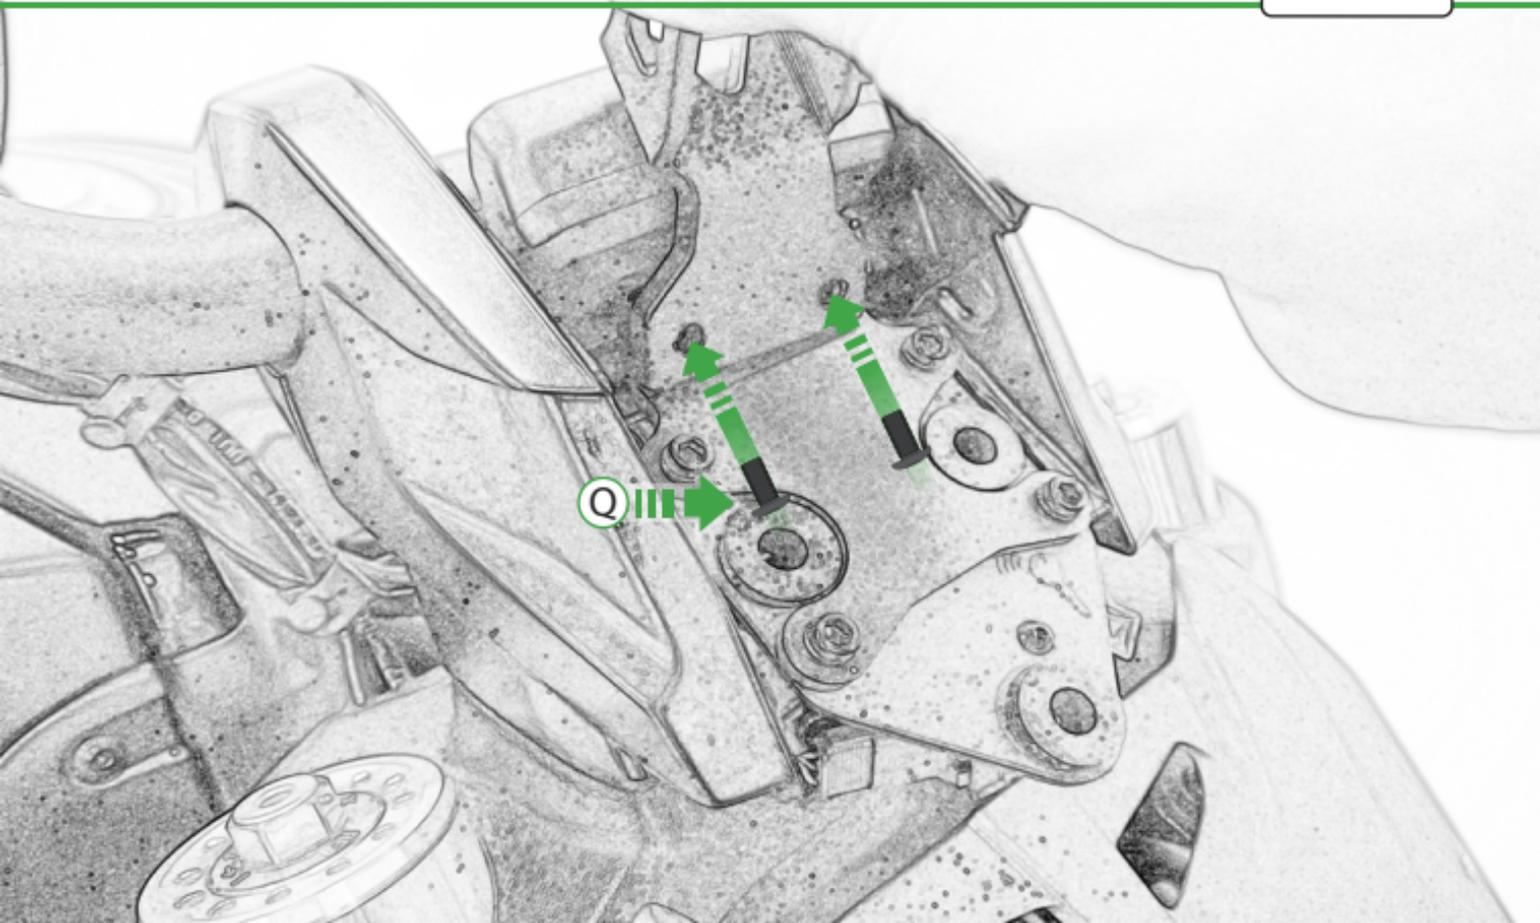


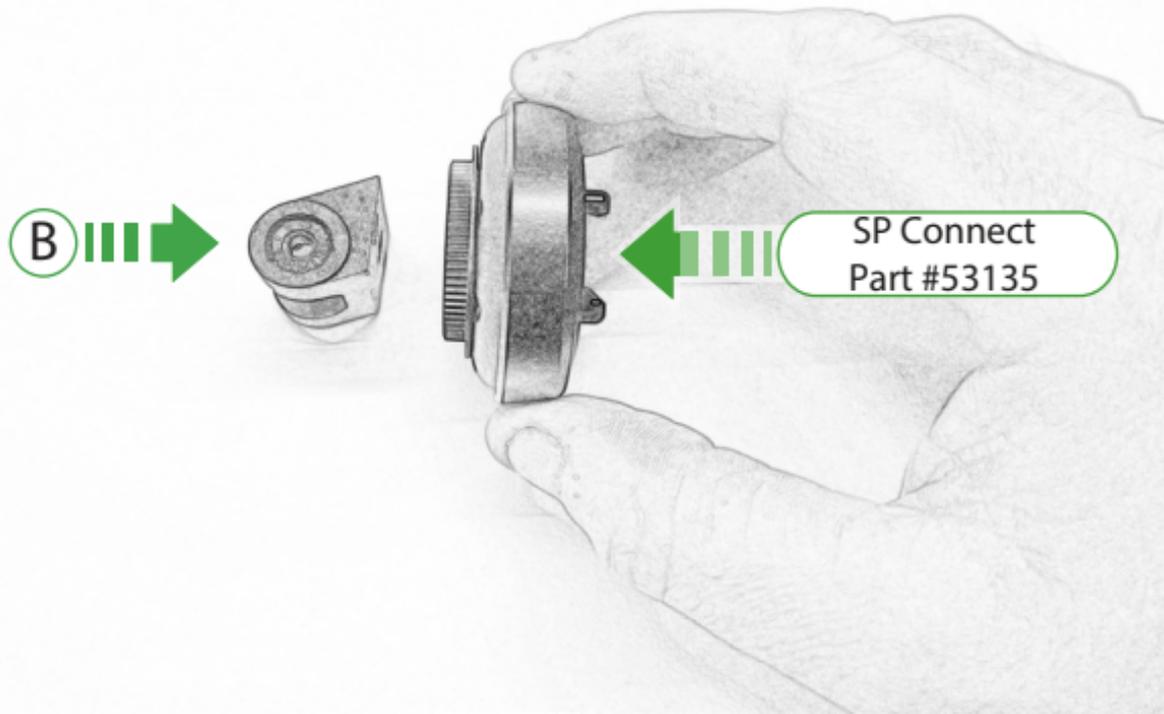




Supplied with  
#53135

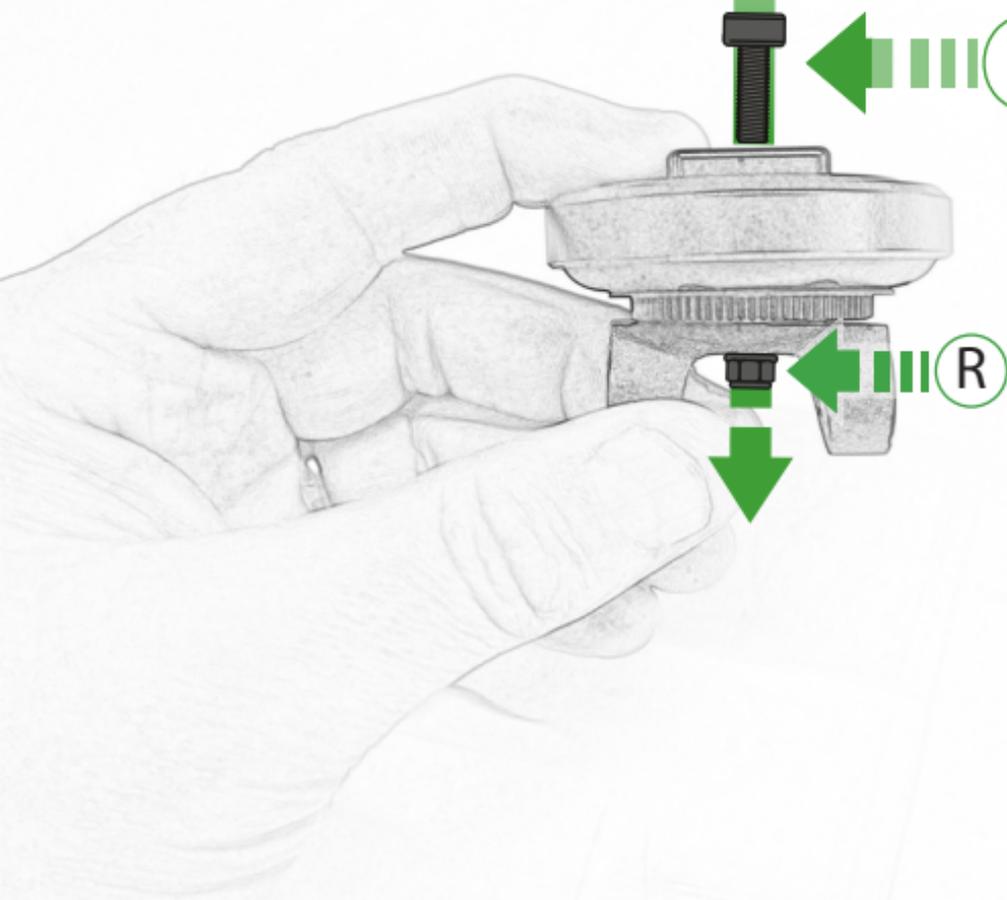


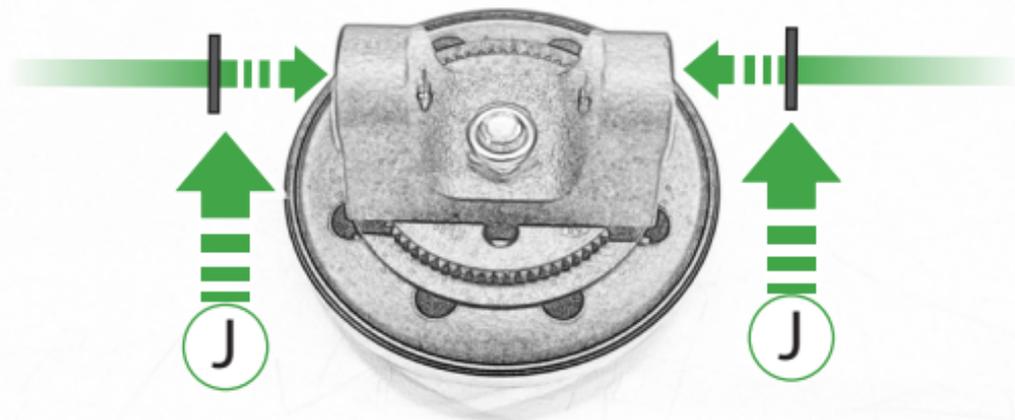





Repeat  
Both Sides

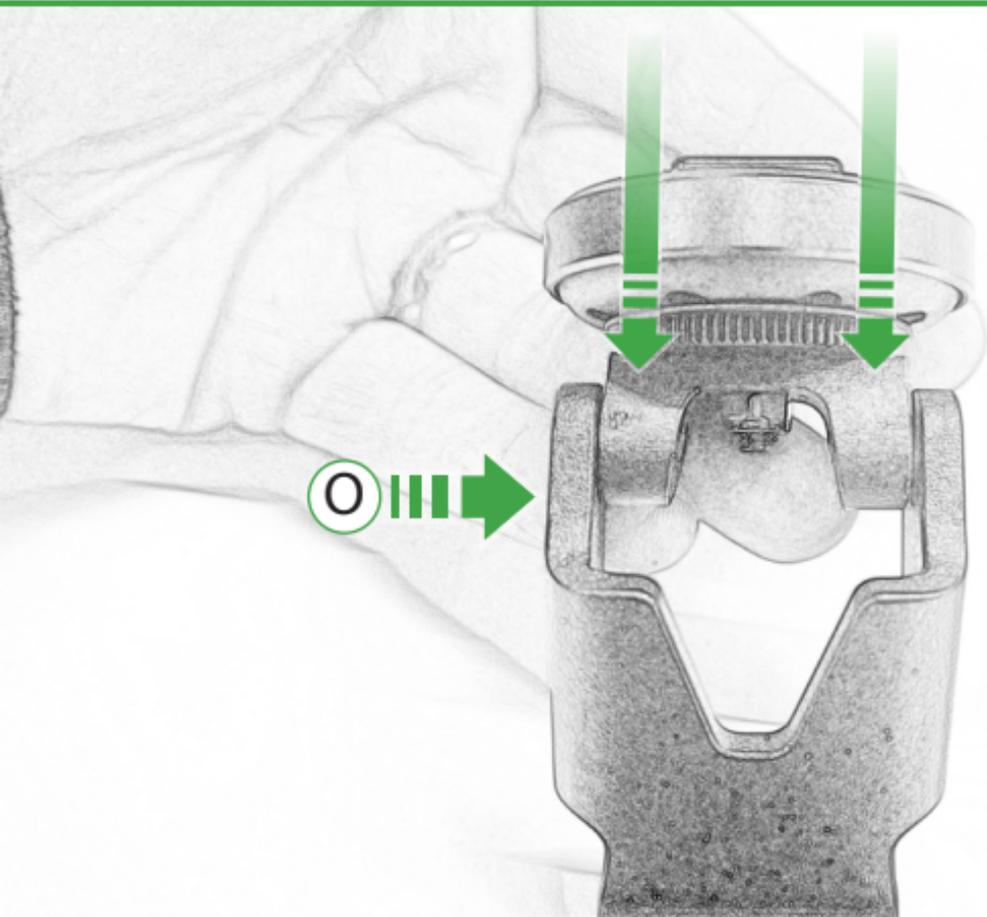

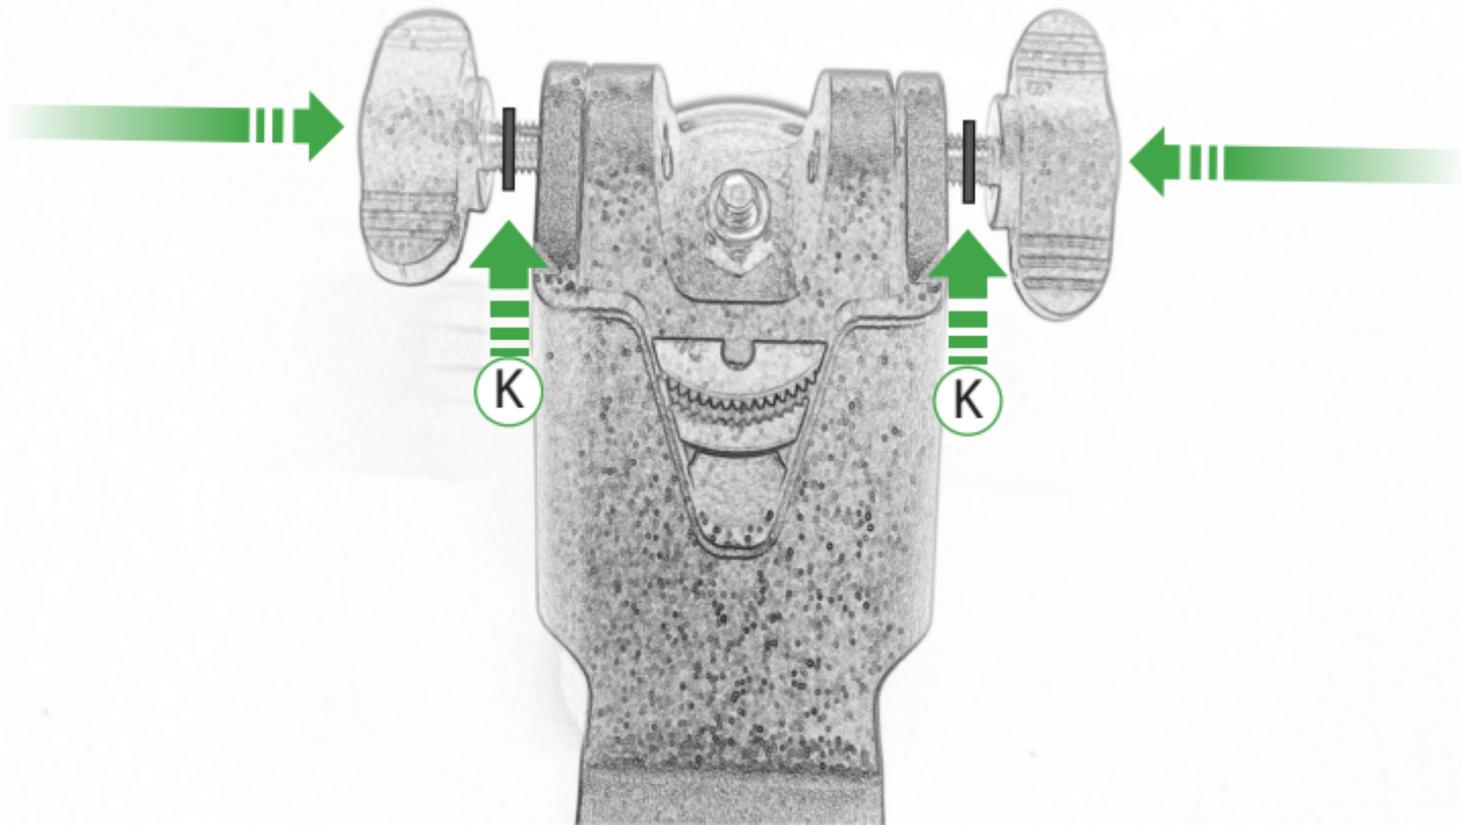


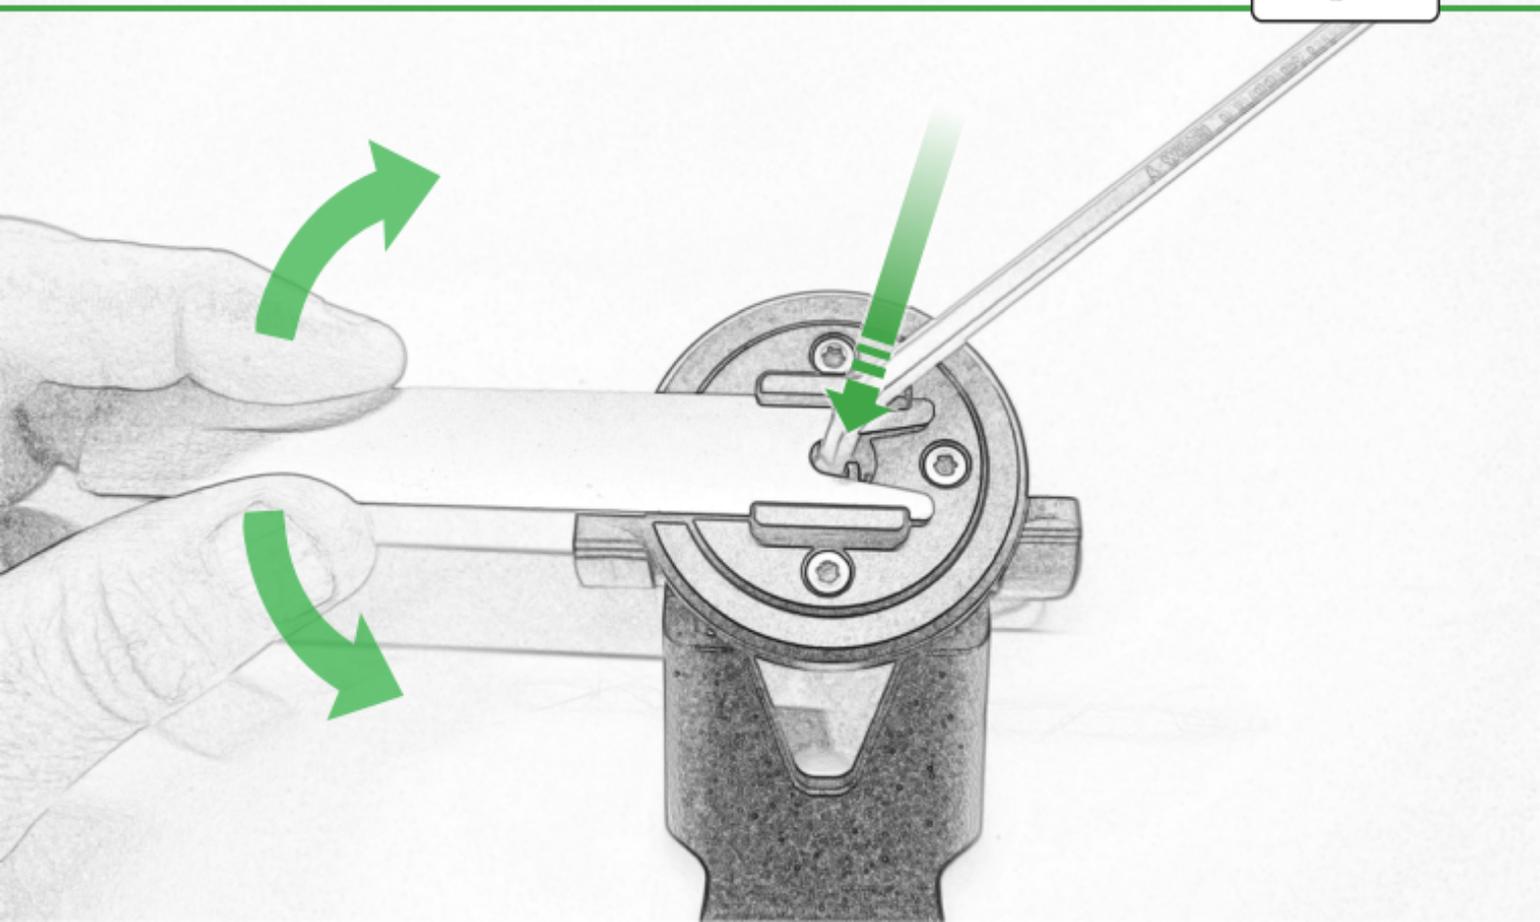

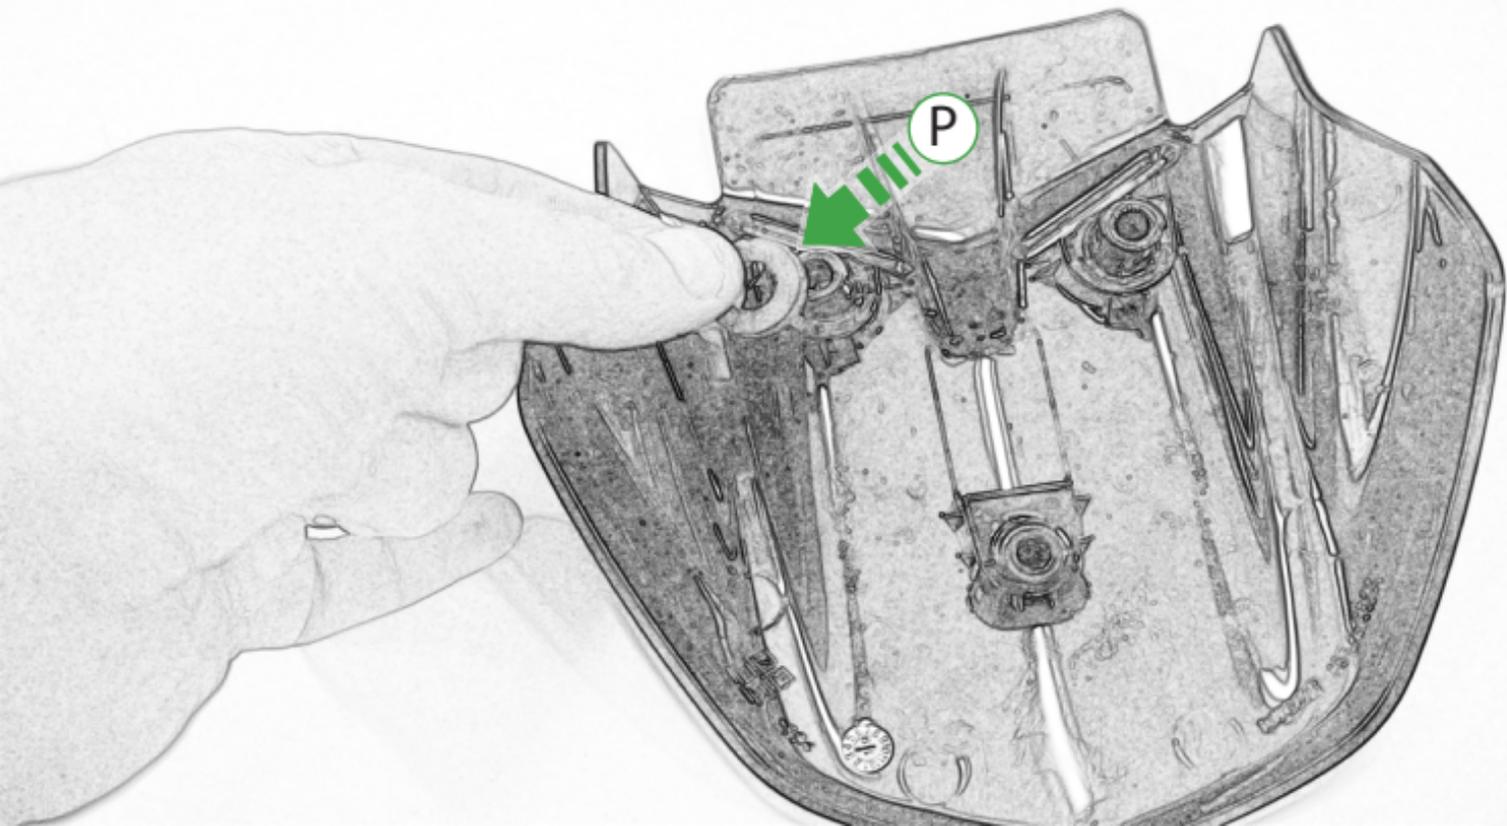





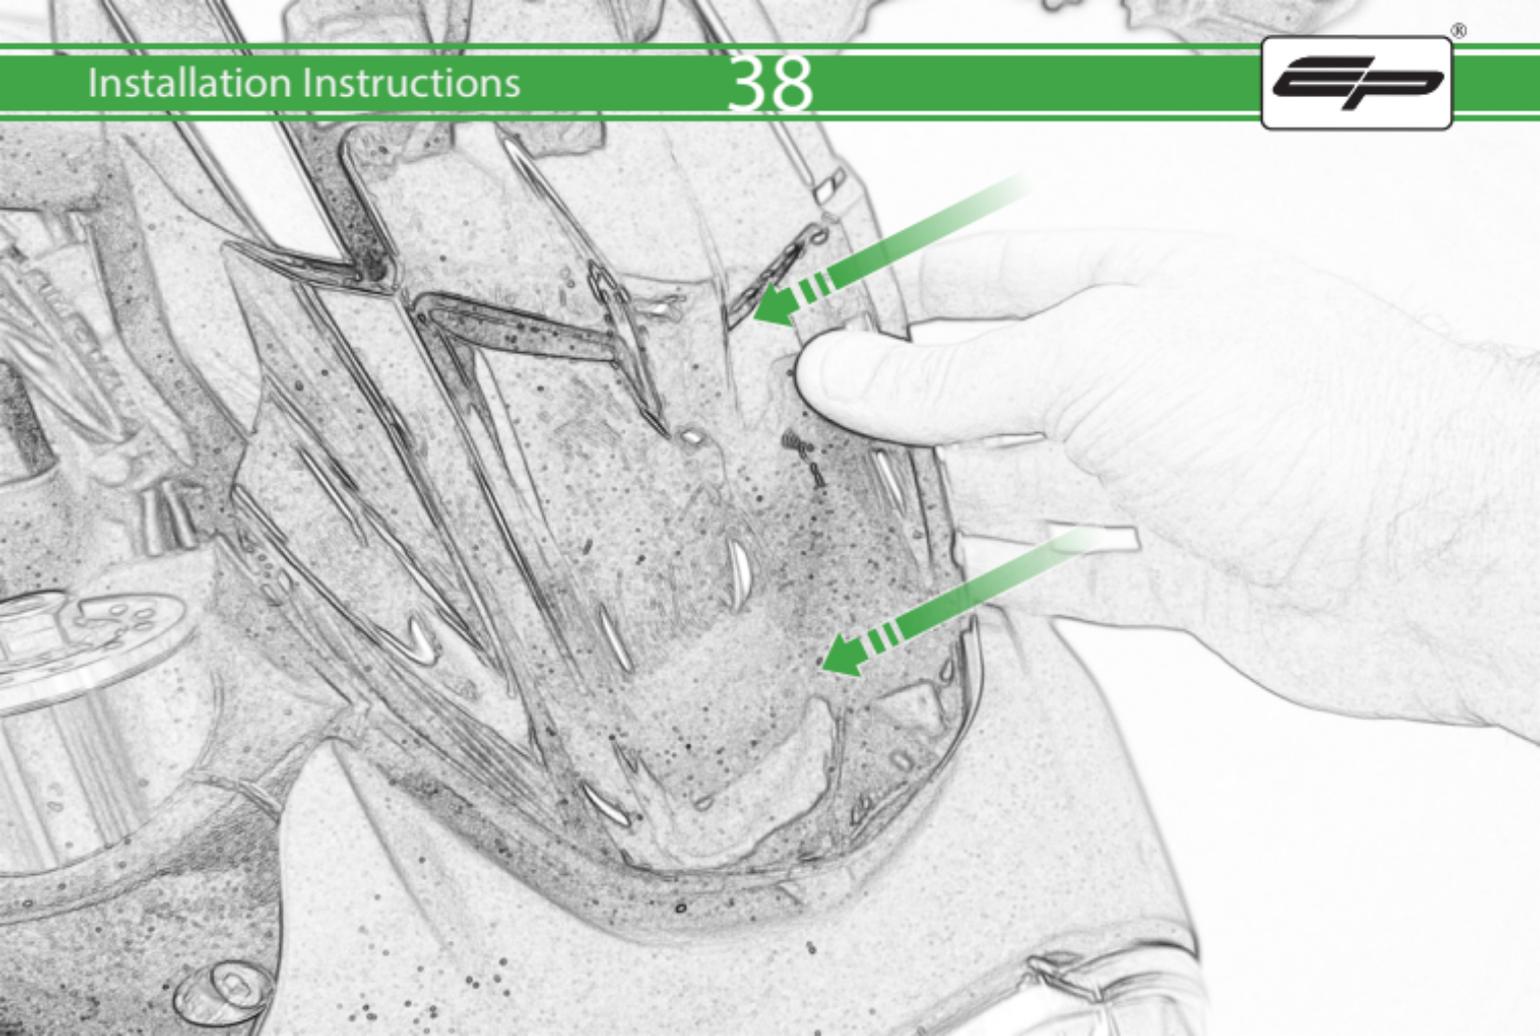



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)