



EVOTECH®
P E R F O R M A N C E

Husqvarna Vitpilen/Svartpilen
Tail Tidy


Installation Instructions





Kit Contents PRN014052


- (A) 1 x Reflector Kit
- (B) 1 x Rubber Cap
- (C) 1 x Grommet
- (D) 1 x Chain Adjuster Block
- (E) 2 x Indicator Stem
- (F) 2 x Indicator Nut
- (G) 2 x M5 x 10 Caphead Bolts
- (H) 2 x M5 x 12 Caphead Bolts
- (I) 2 x M5 x 10 C/sink Screws
- (J) 2 x 4mm Dowel Pins
- (K) 4 x M8 x 20 Black Button Head Bolts (Vitpilen Only)
- (L) 4 x M8 x 30 Black Button Head Bolts (Svartpilen Only)




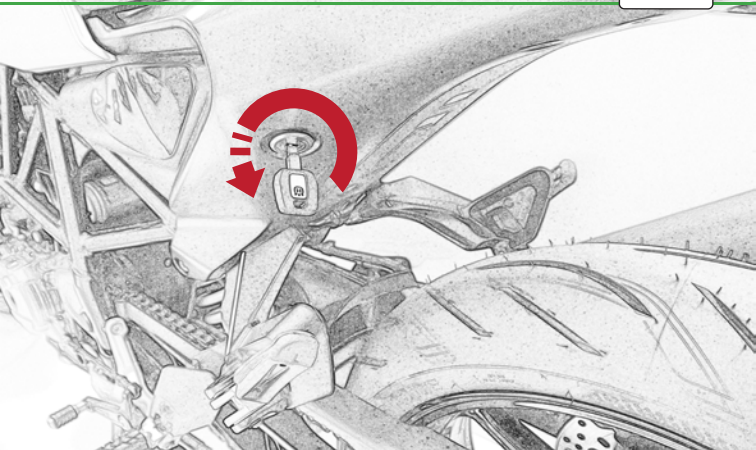


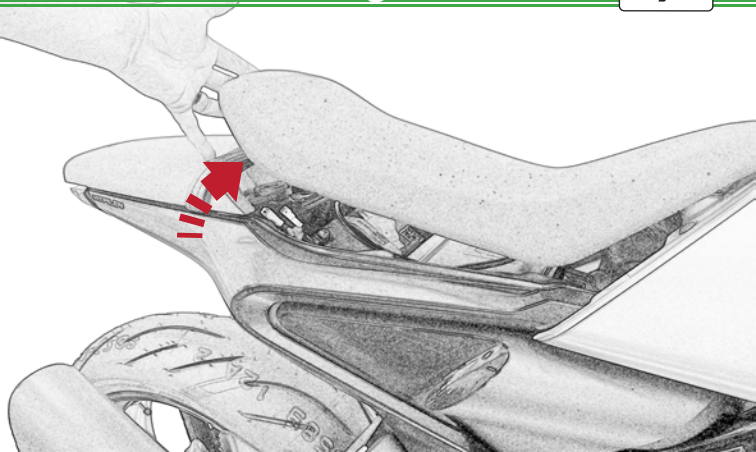


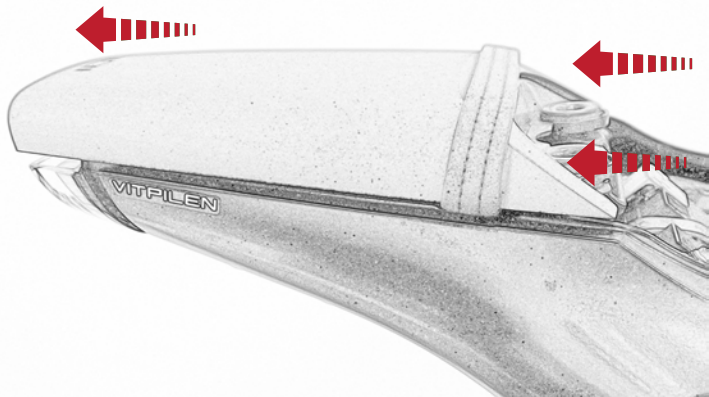


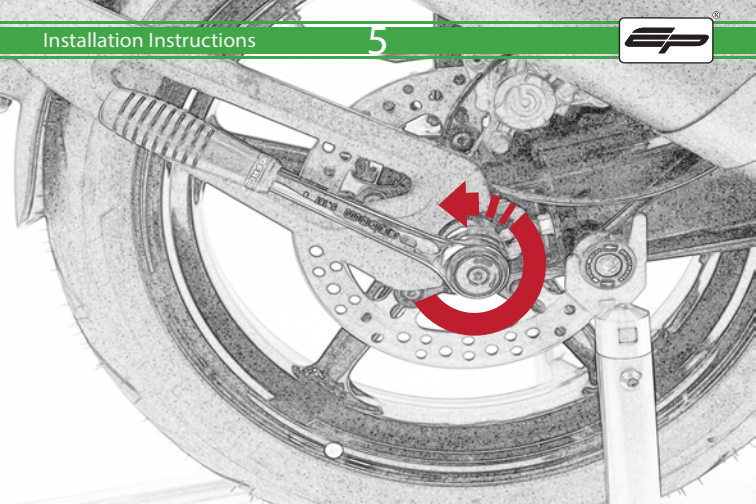

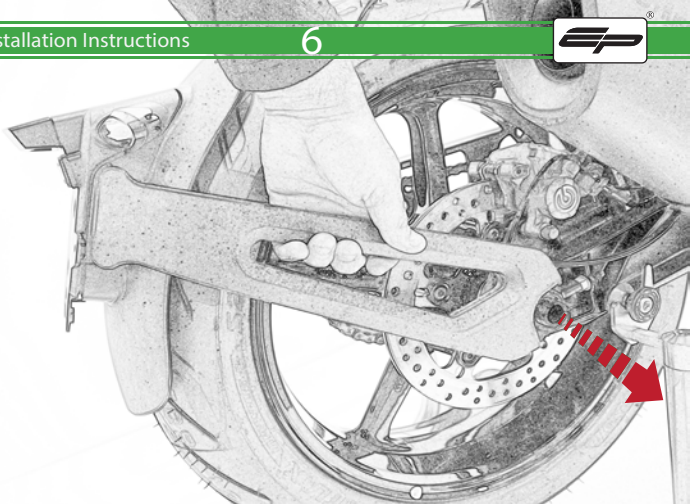

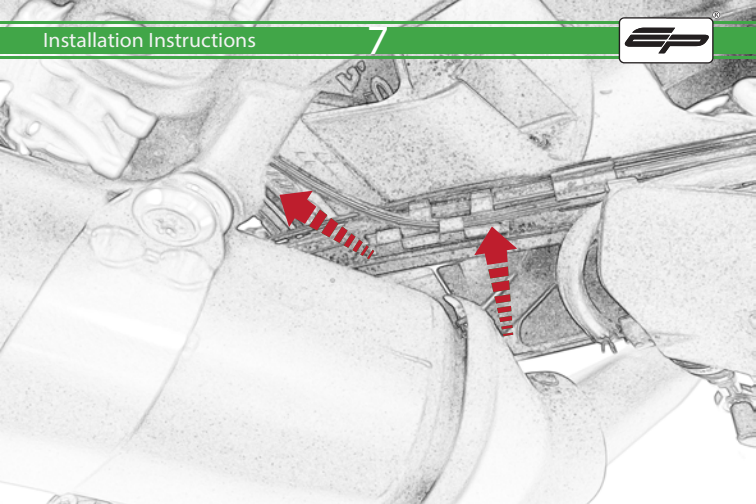

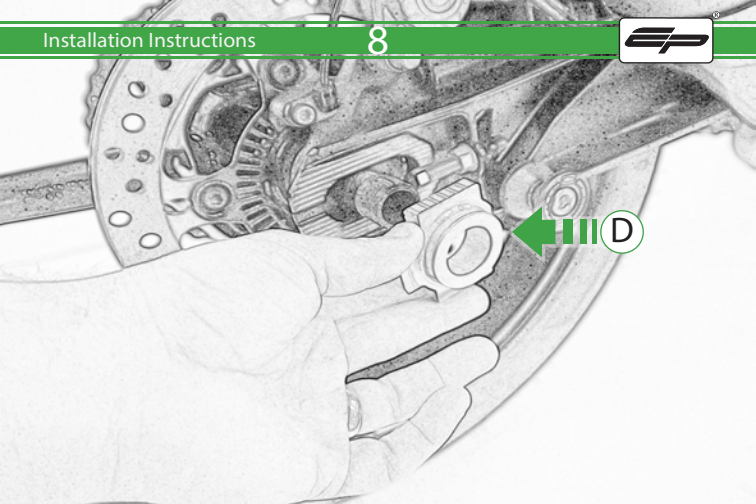

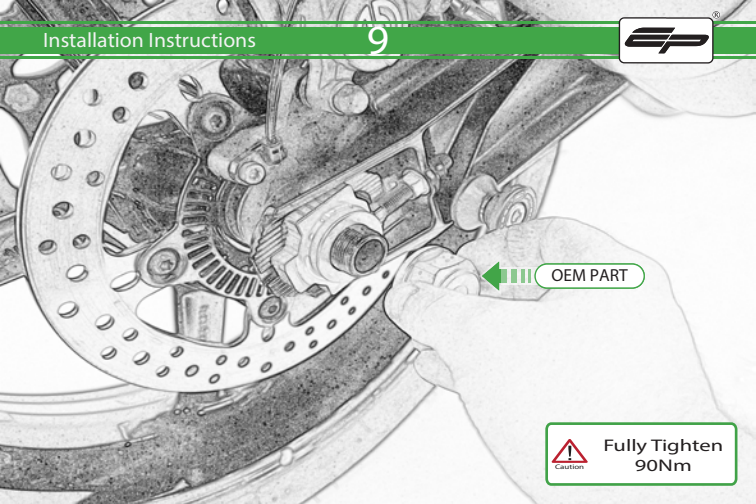



OEM PART






Caution


Fully Tighten
90Nm


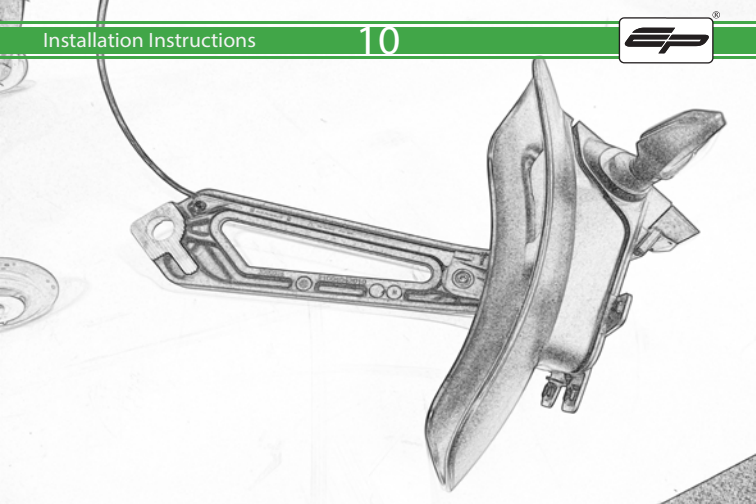


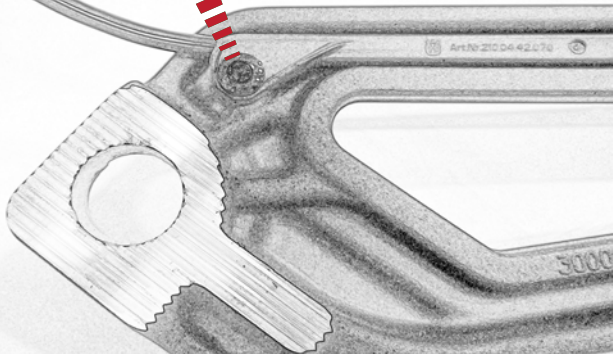


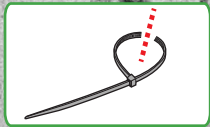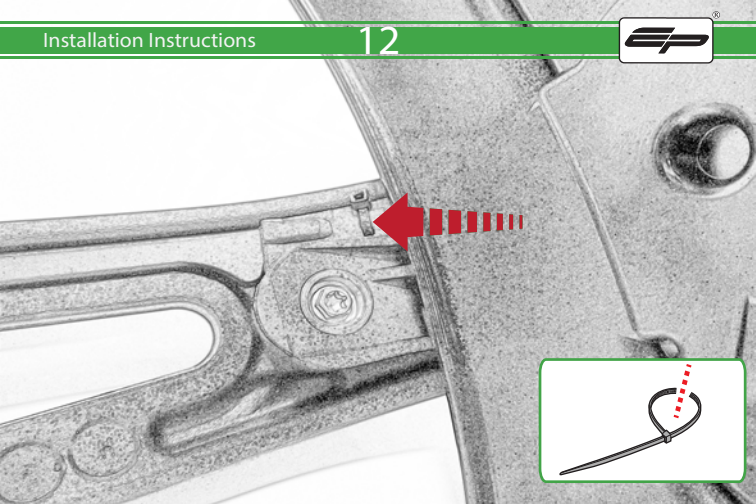


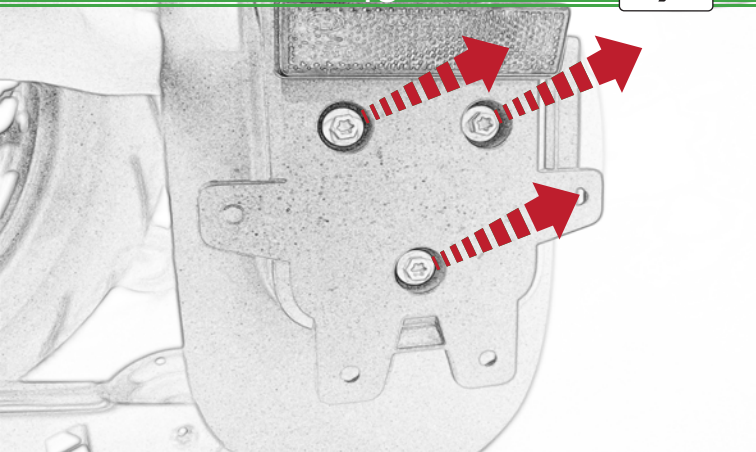


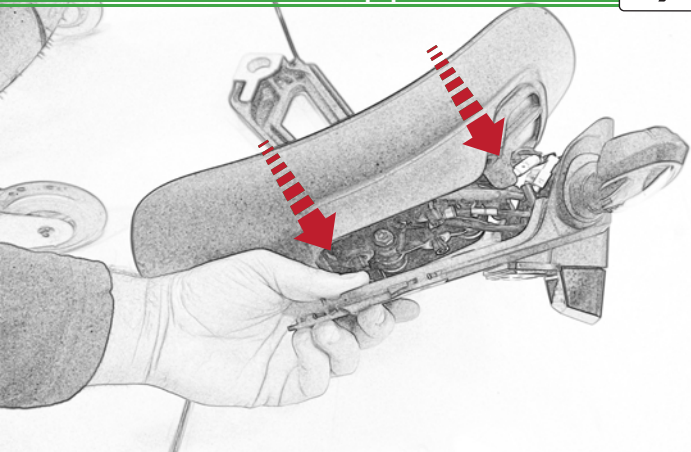

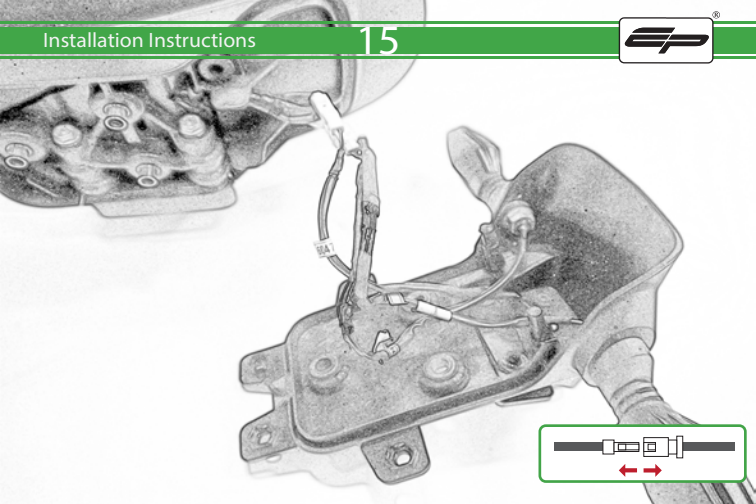

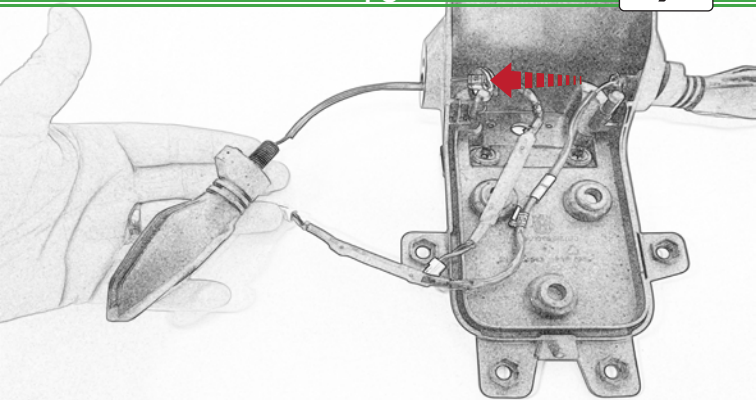


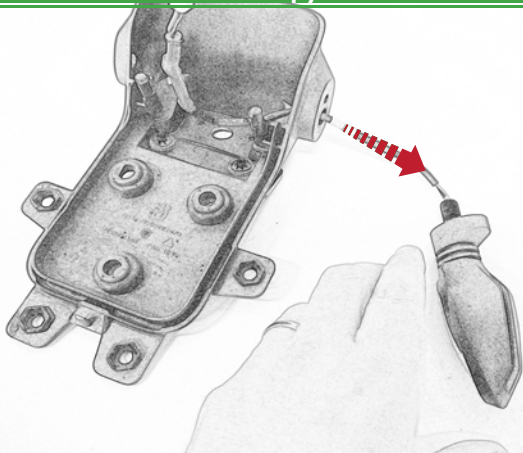

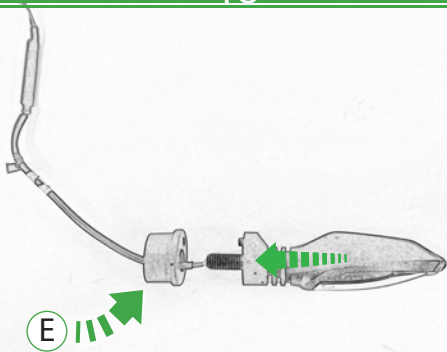


E

Repeat
Both Sides

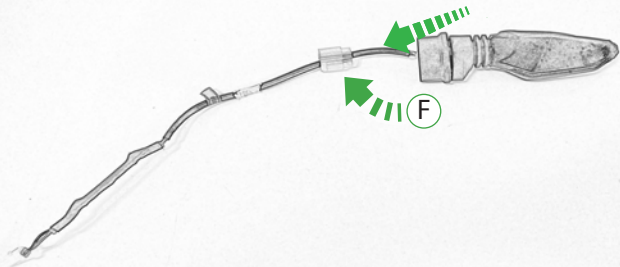


Repeat
Both Sides

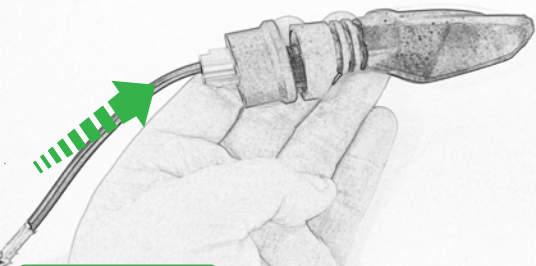


 **Do Not Fully Tighten**

Repeat Both Sides

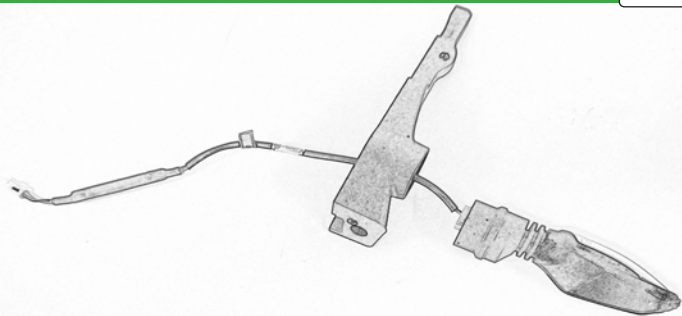


Repeat
Both Sides

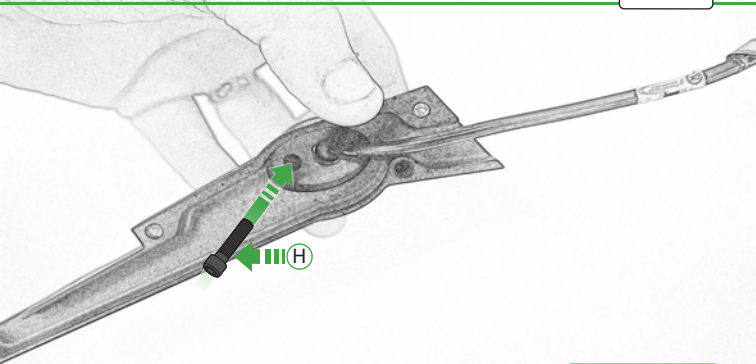



Repeat
Both Sides




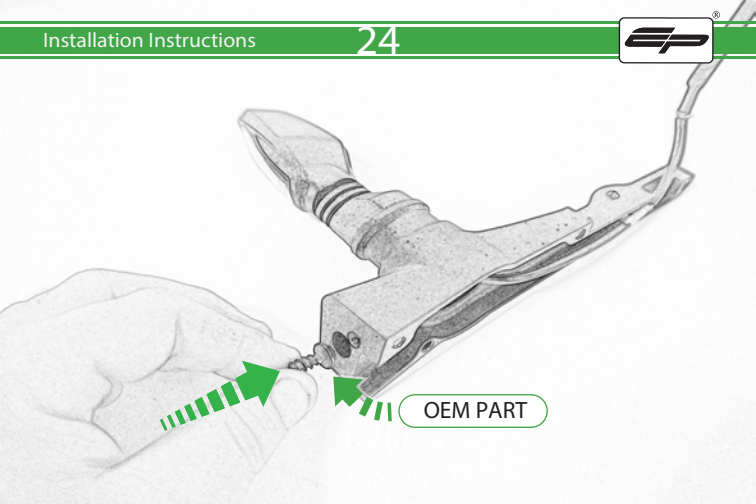

OEM PART

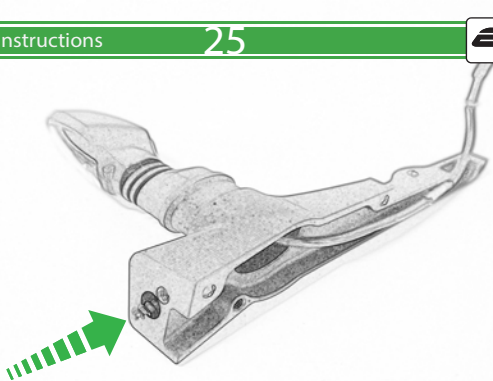


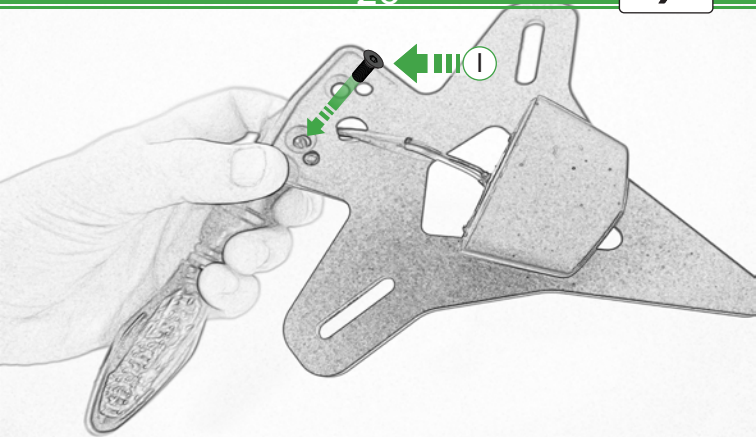


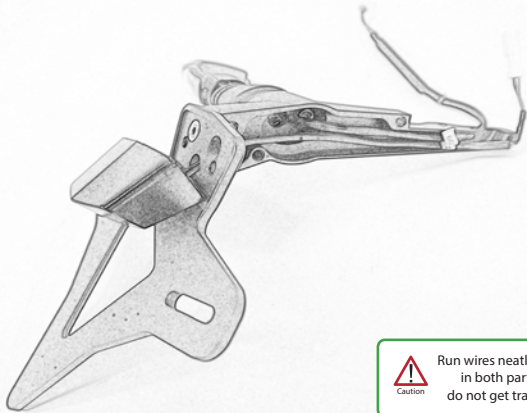


Caution


Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

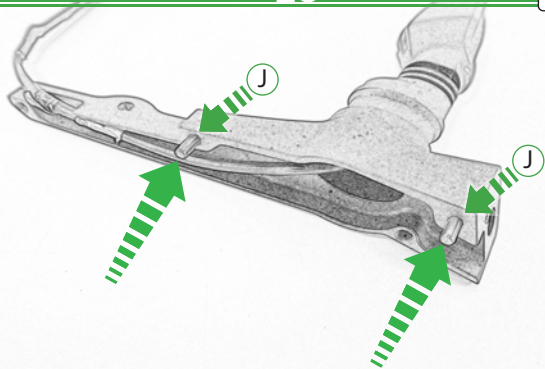


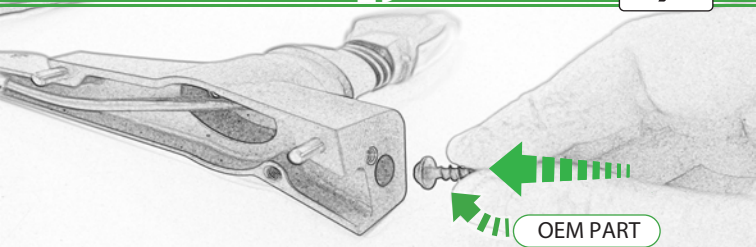

OEM PART

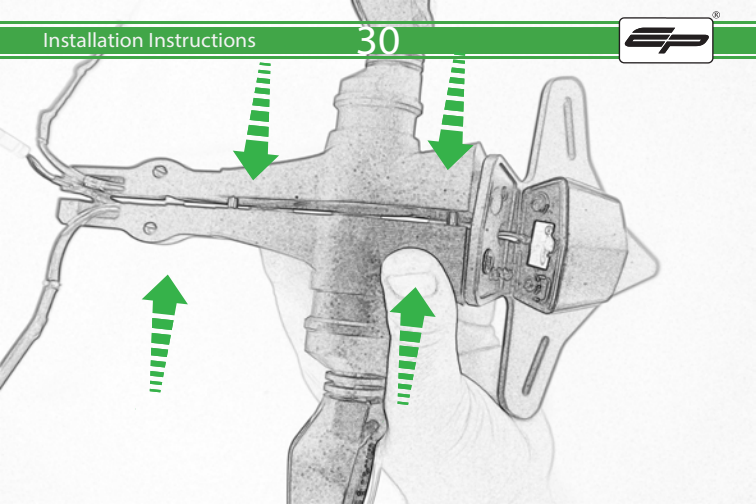


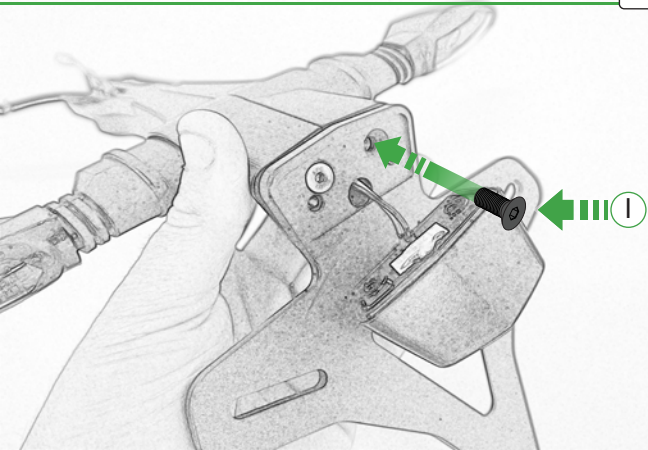


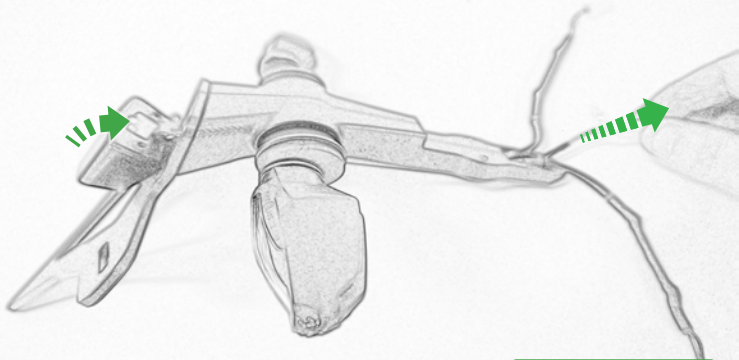



Caution

Pull Wire
Through Tail Tidy

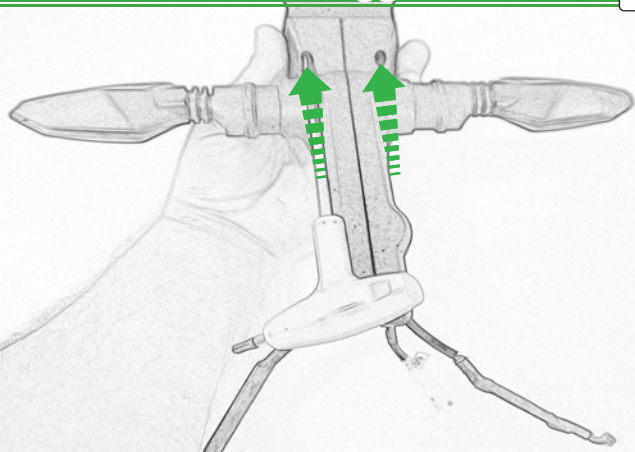

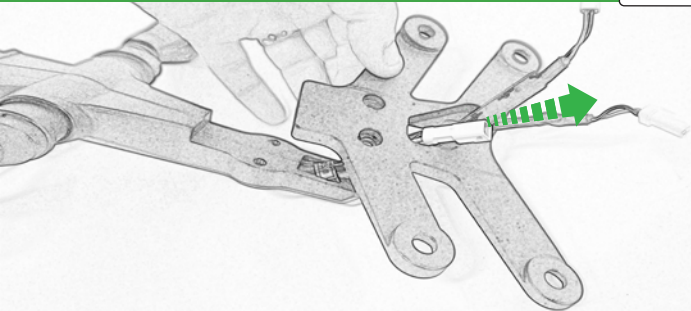

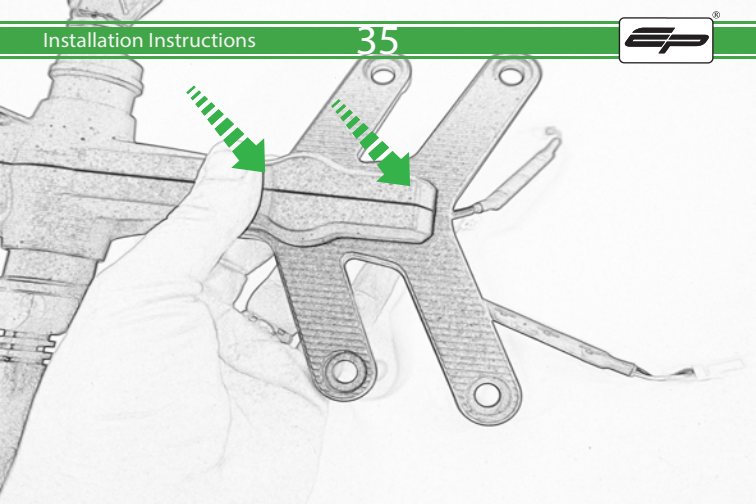

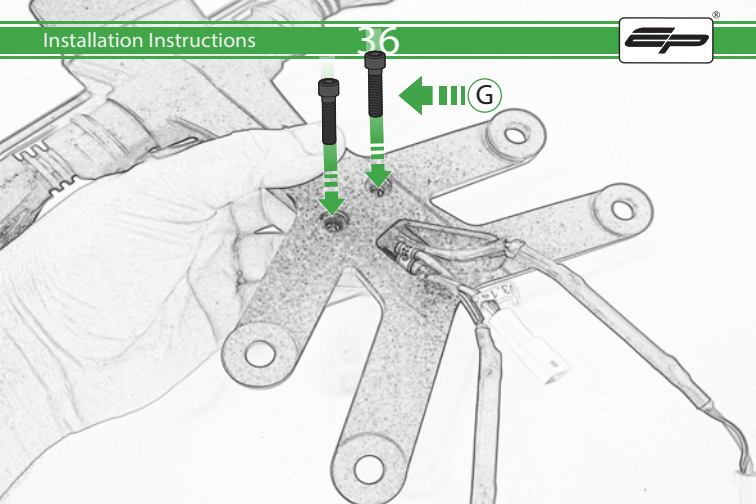




$\phi 22,5\text{mm}$




Use Target for
Drilling Hole

10750
06252600
104 - C

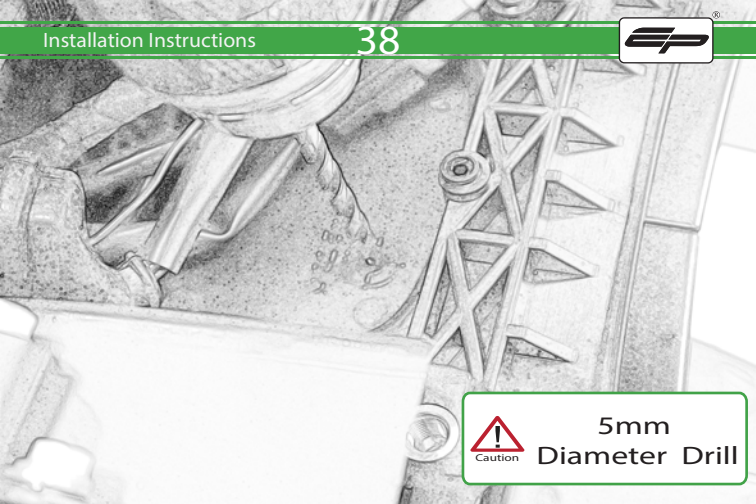


Caution



5mm
Diameter Drill

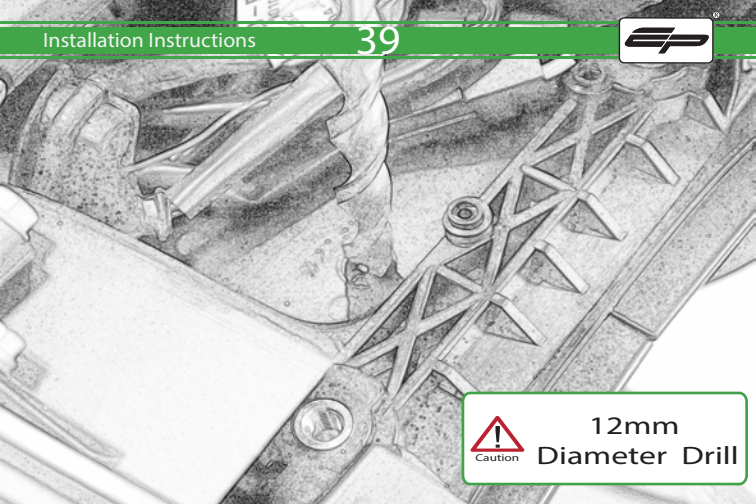



Caution


12mm
Diameter Drill


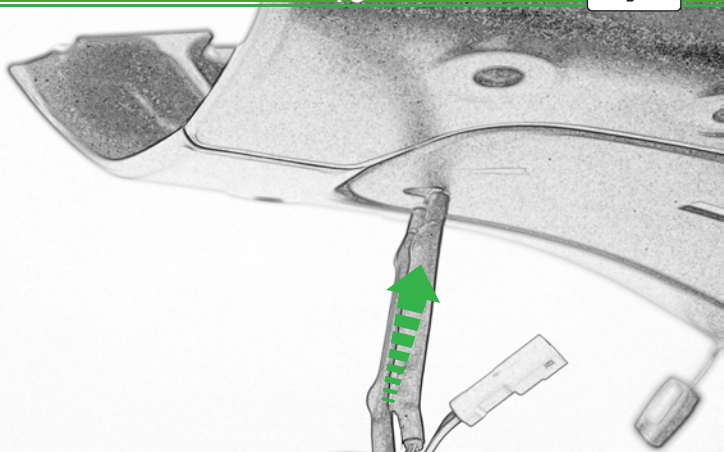


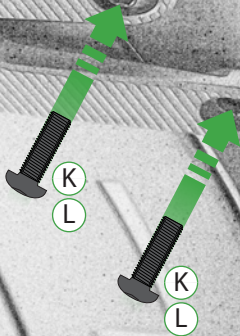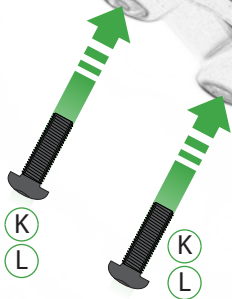

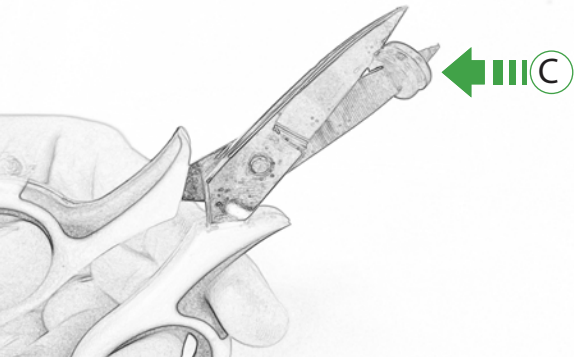


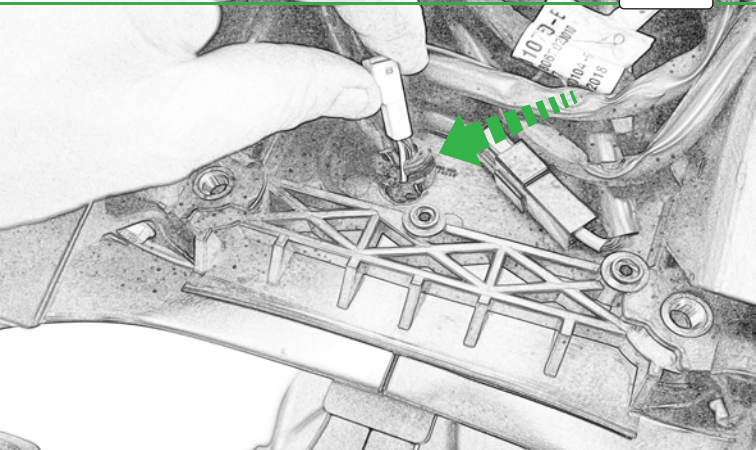


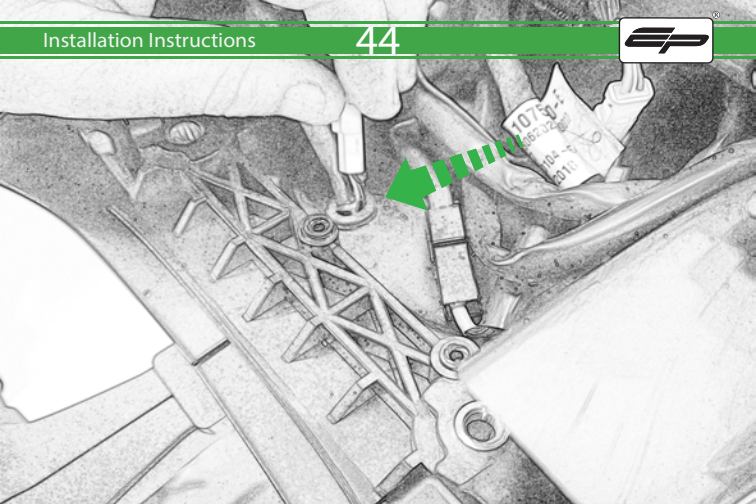

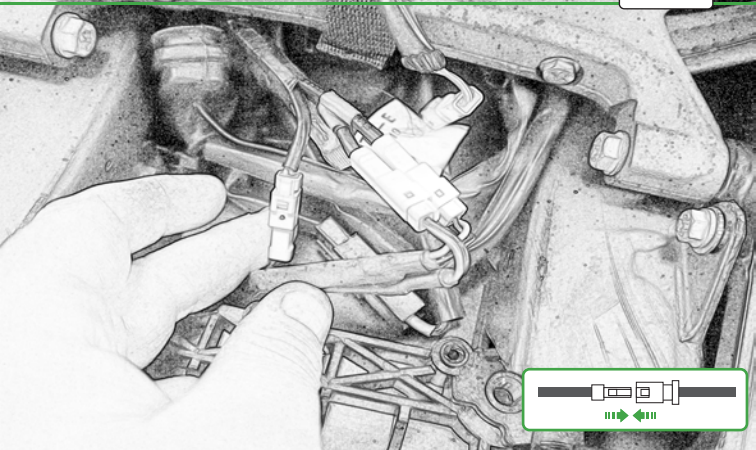



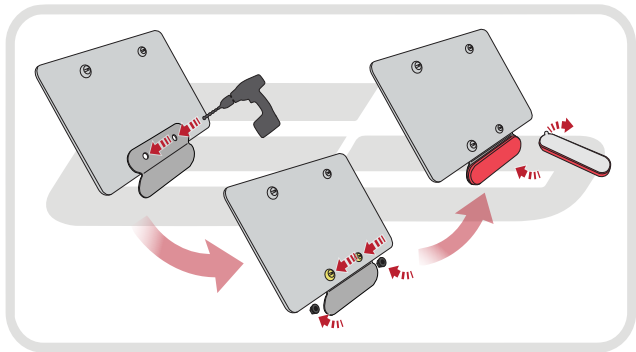

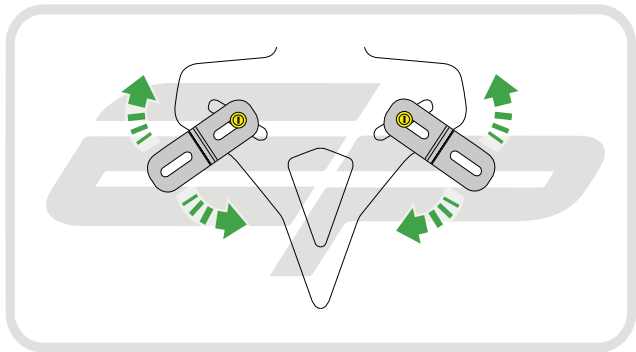



 **ESSENTIAL CHECKS** 

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com