



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


KTM / Husqvarna Bar End Weights

Installation Instructions





Kit Contents PRN013800 / PRN013802


- Ⓐ 2 x Bar End Weights

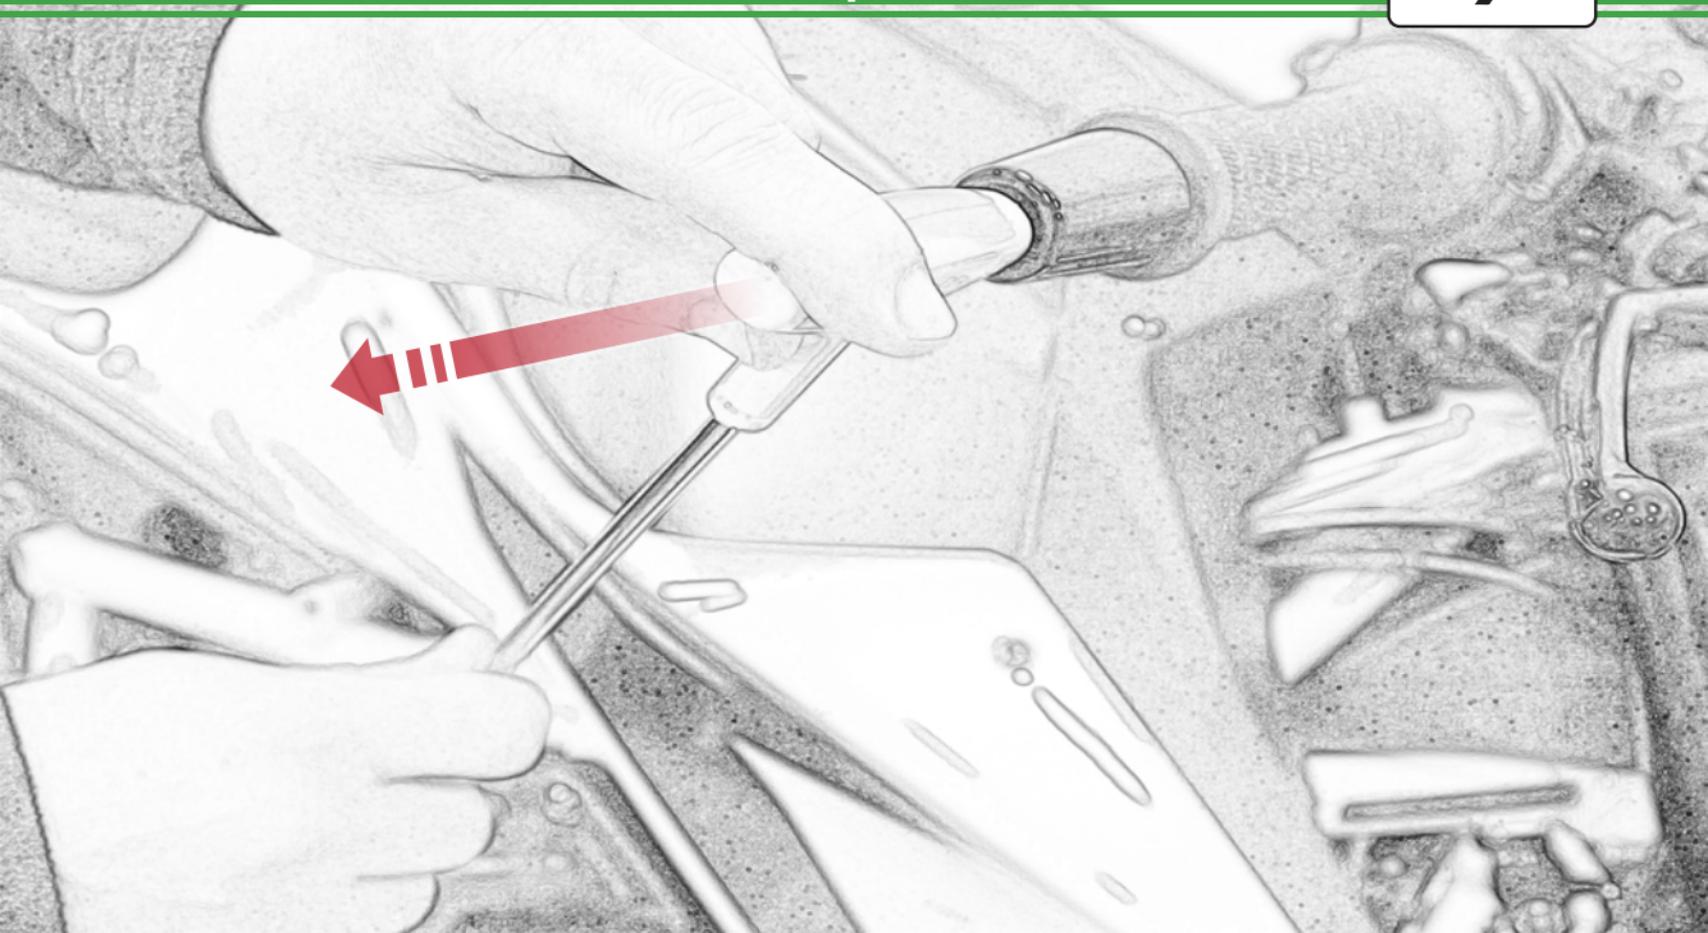




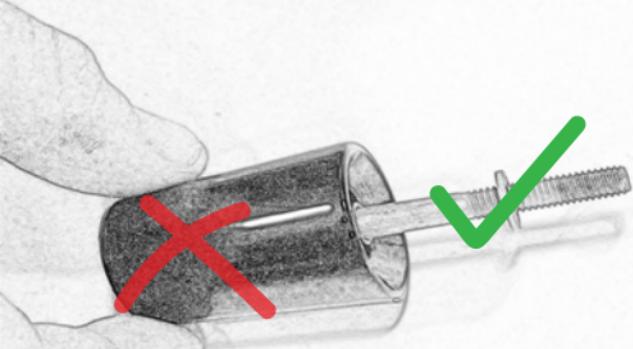


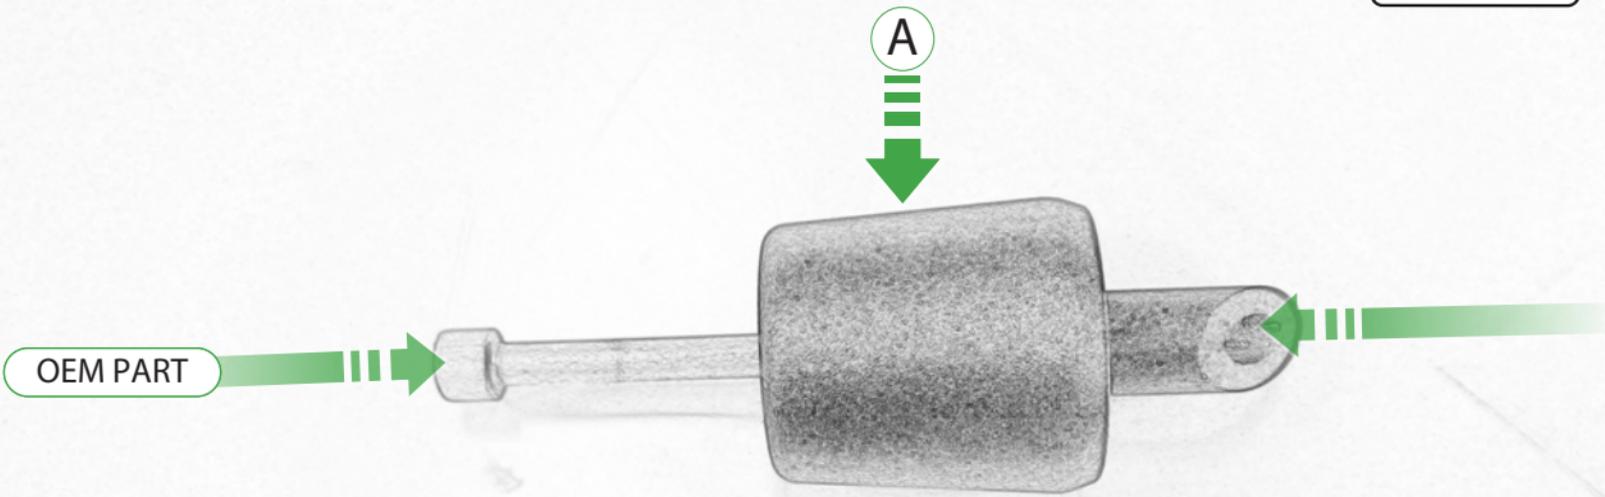

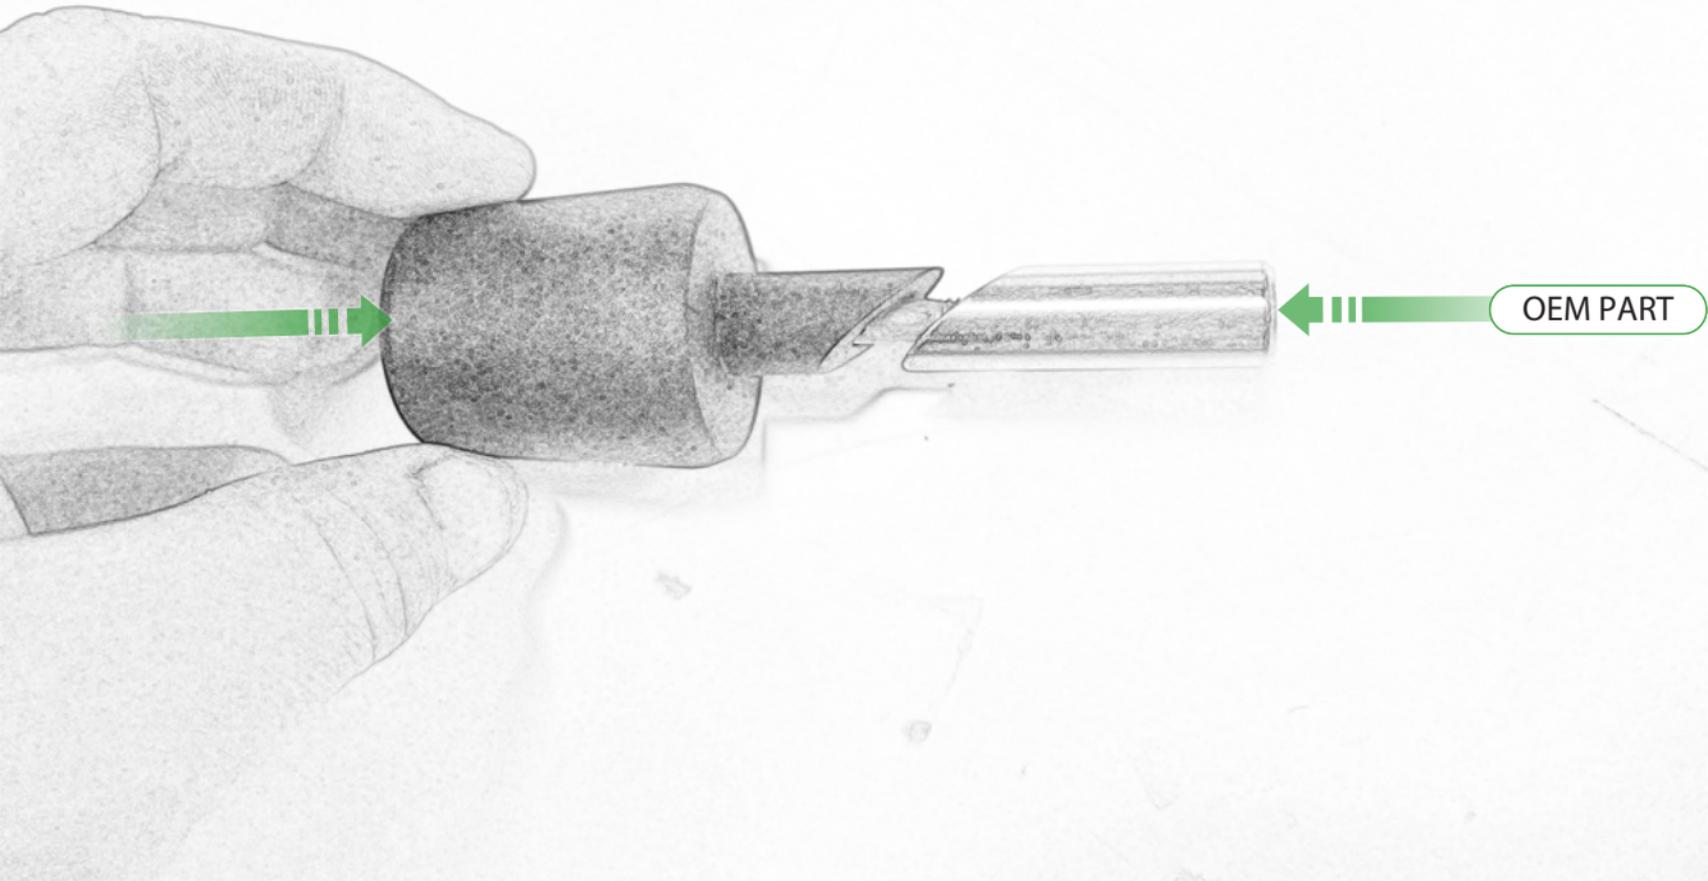

OEM PART

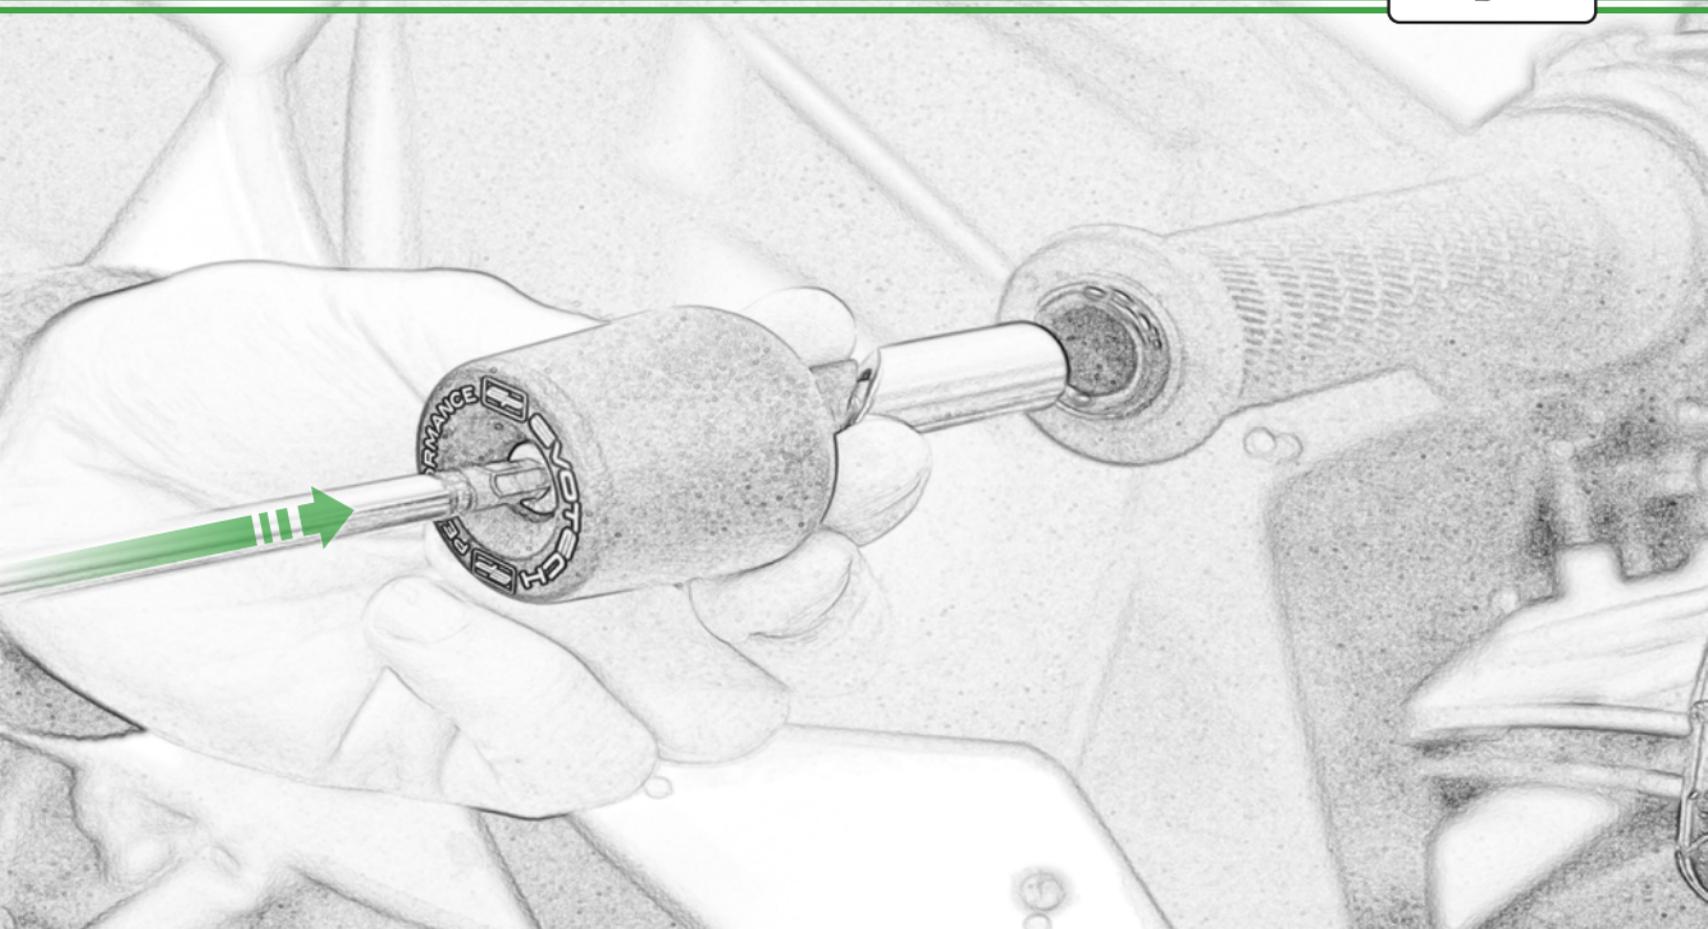

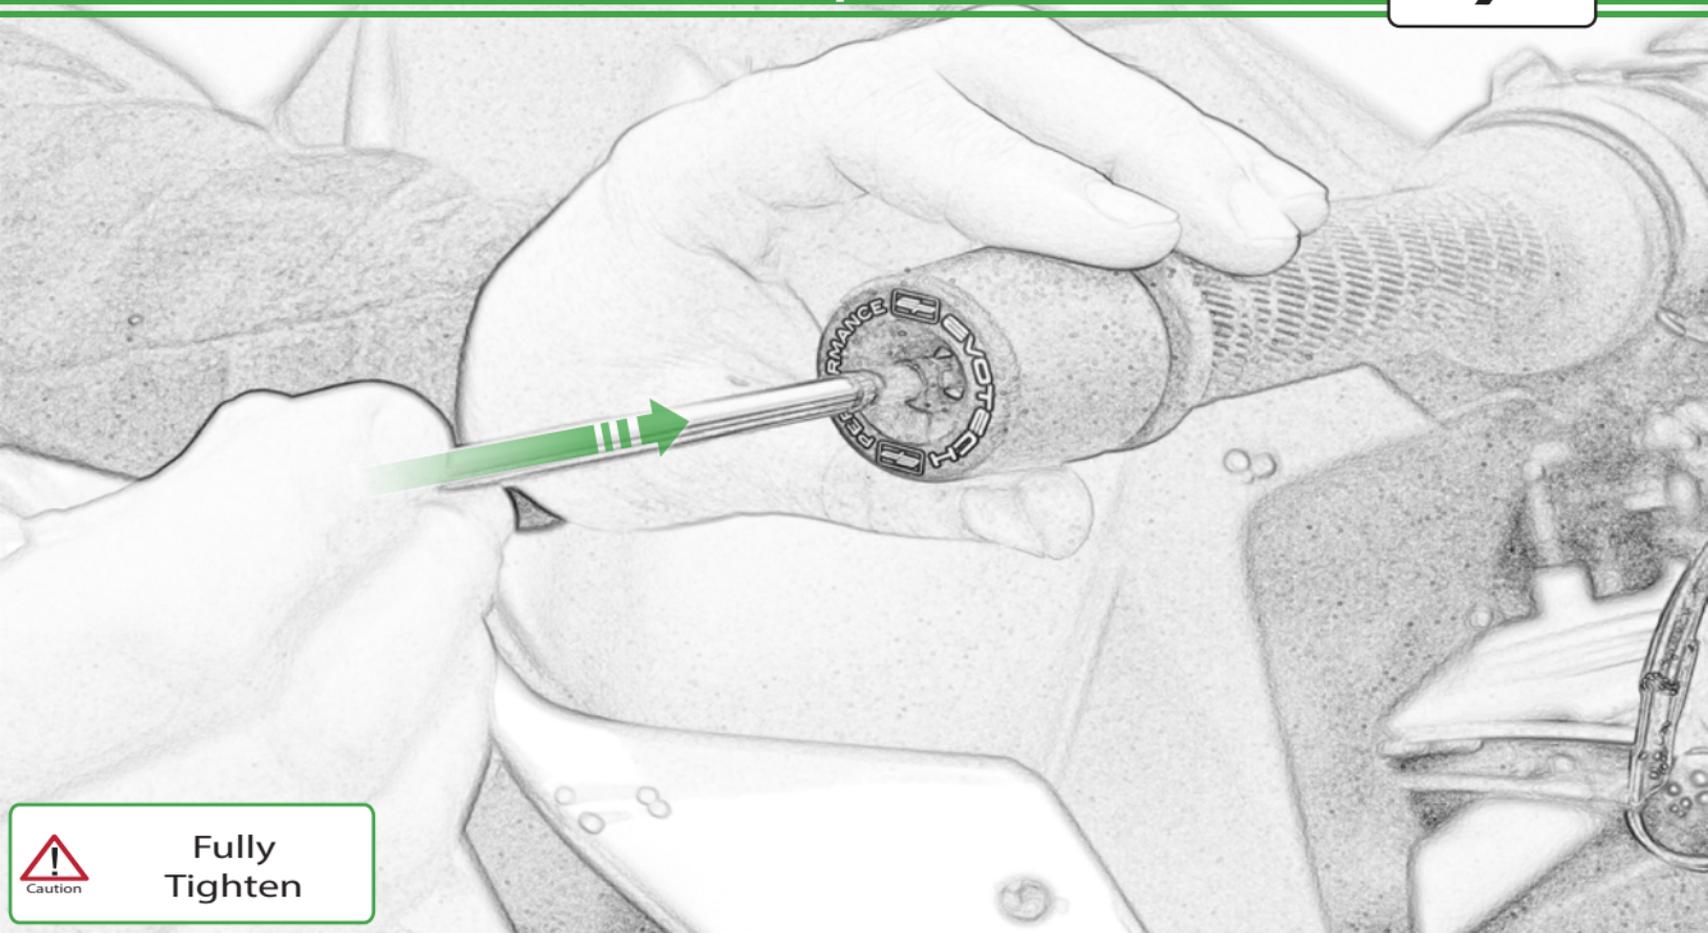

Caution

Fully
Tighten



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com