



**EVOTECH**®  
P E R F O R M A N C E


[www.evotech-performance.com](http://www.evotech-performance.com)


Generic Bar Clamp  
Quad Lock Sat Nav Mount Instruction




## Kit Contents

- Ⓐ 1 x Pivot Plate
- Ⓑ 1 x Left Hand Arm
- Ⓒ 1 x Right Hand Arm
- Ⓓ 1 x Quad Lock Plate
- Ⓔ 1 x Quad Lock Mount
- Ⓕ 2 x M5 x 8mm Black Button Head Bolt
- Ⓖ 2 x Spacer
- Ⓗ 2 x M5 x 12 Caphead Bolt
- Ⓘ 2 x Lobe Screw
- ⓰ 2 x M8 Caphead Bolt

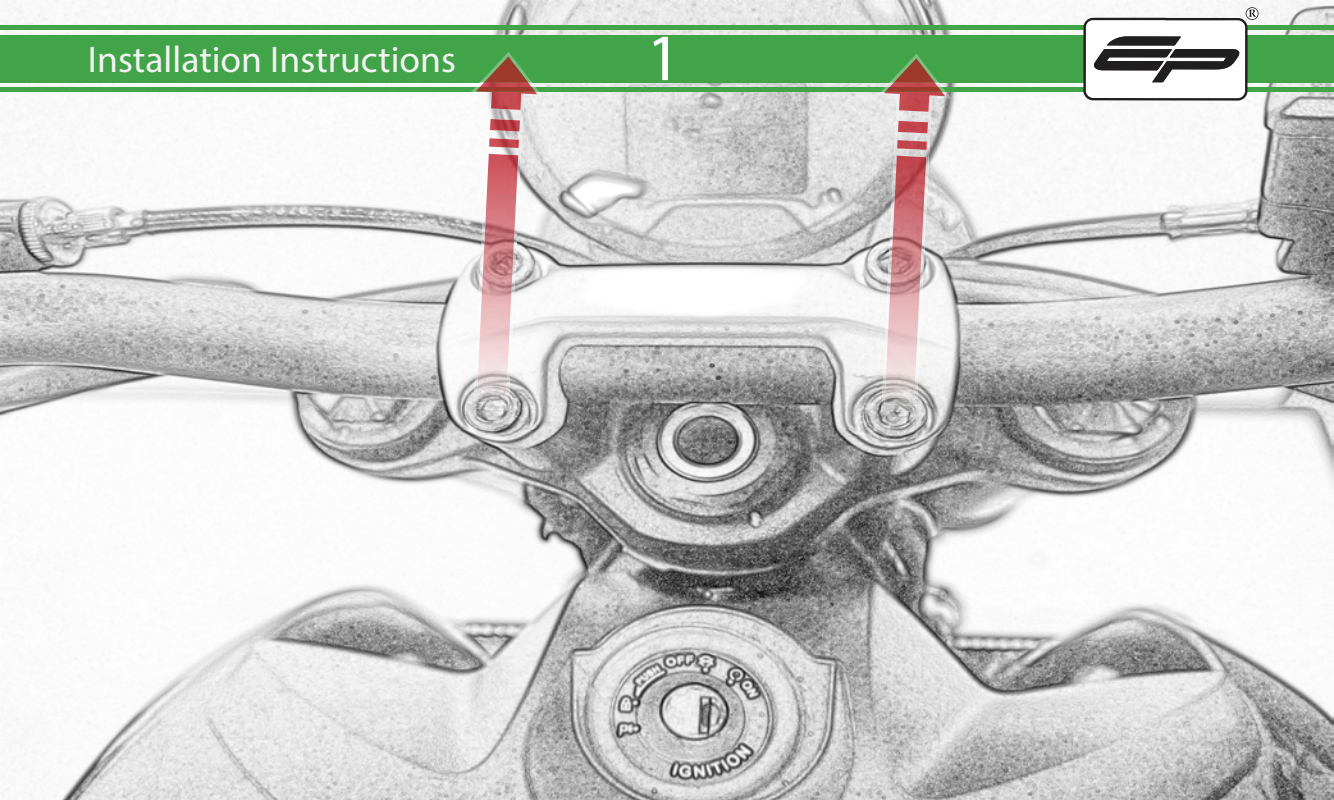


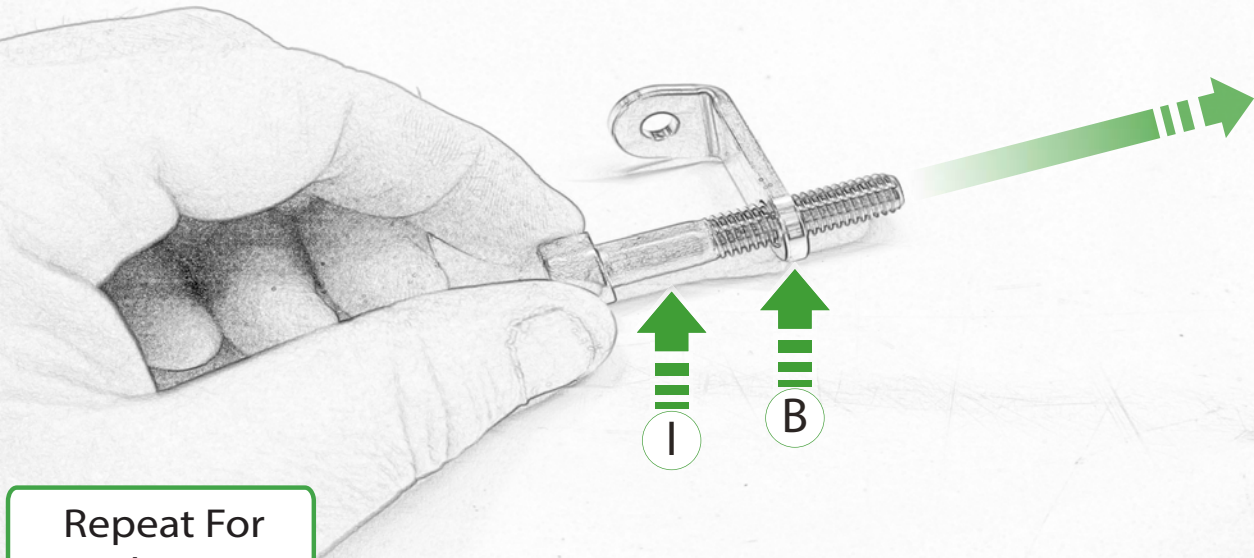



Repeat For  
Both Arms

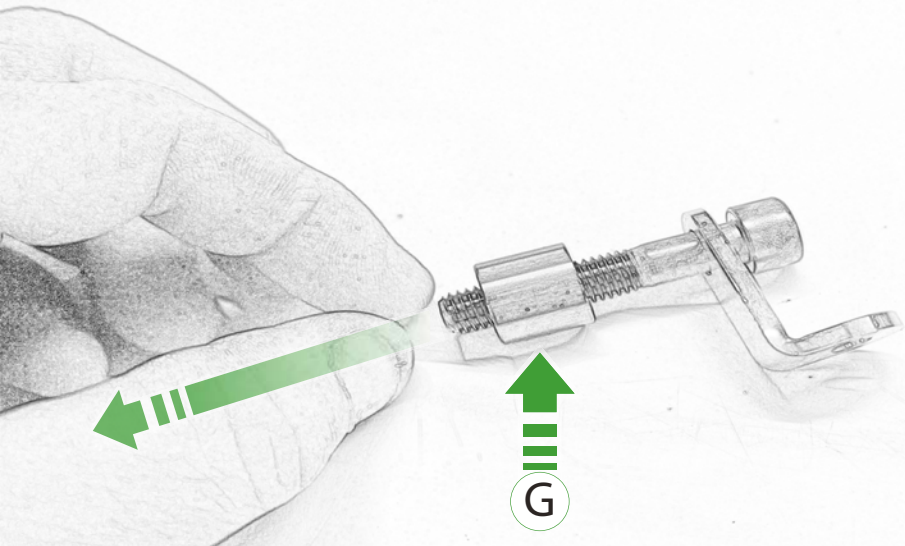

Repeat For  
Both Arms

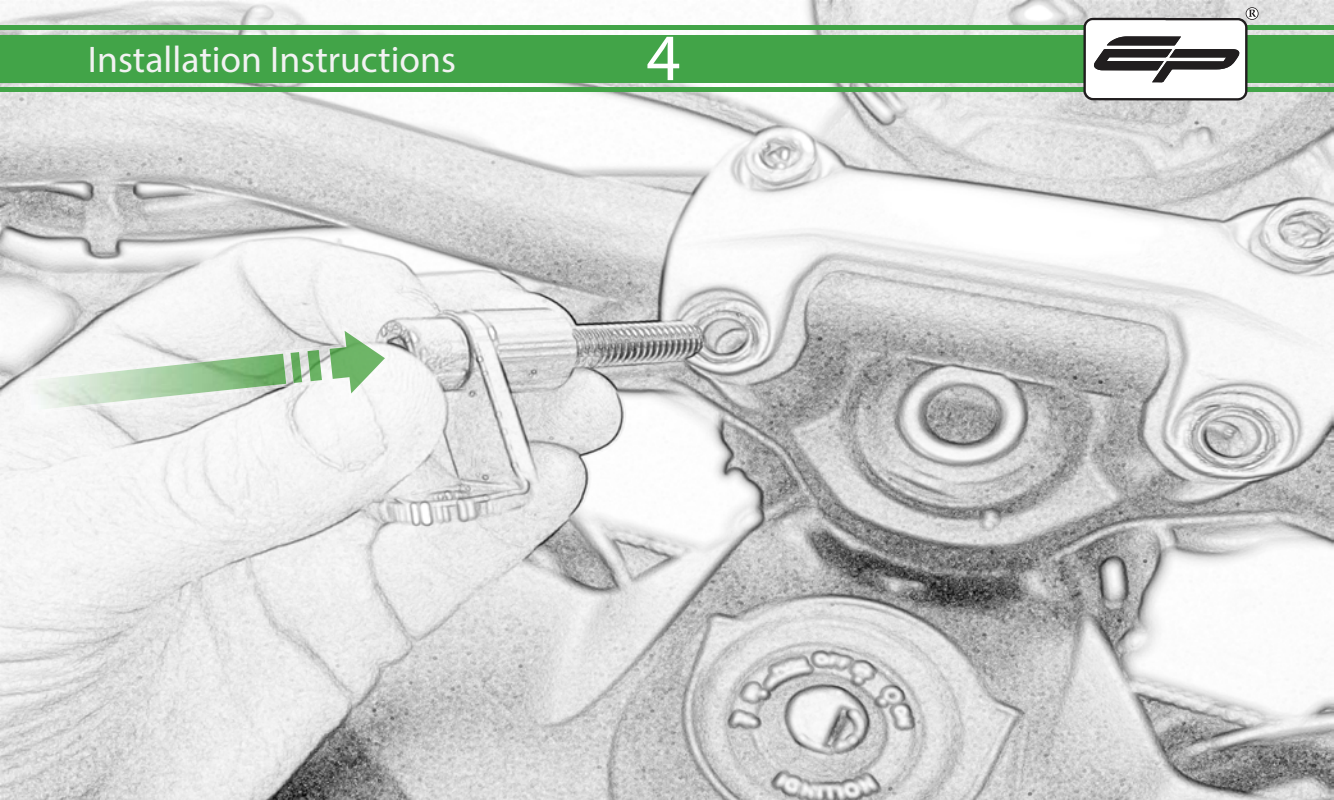

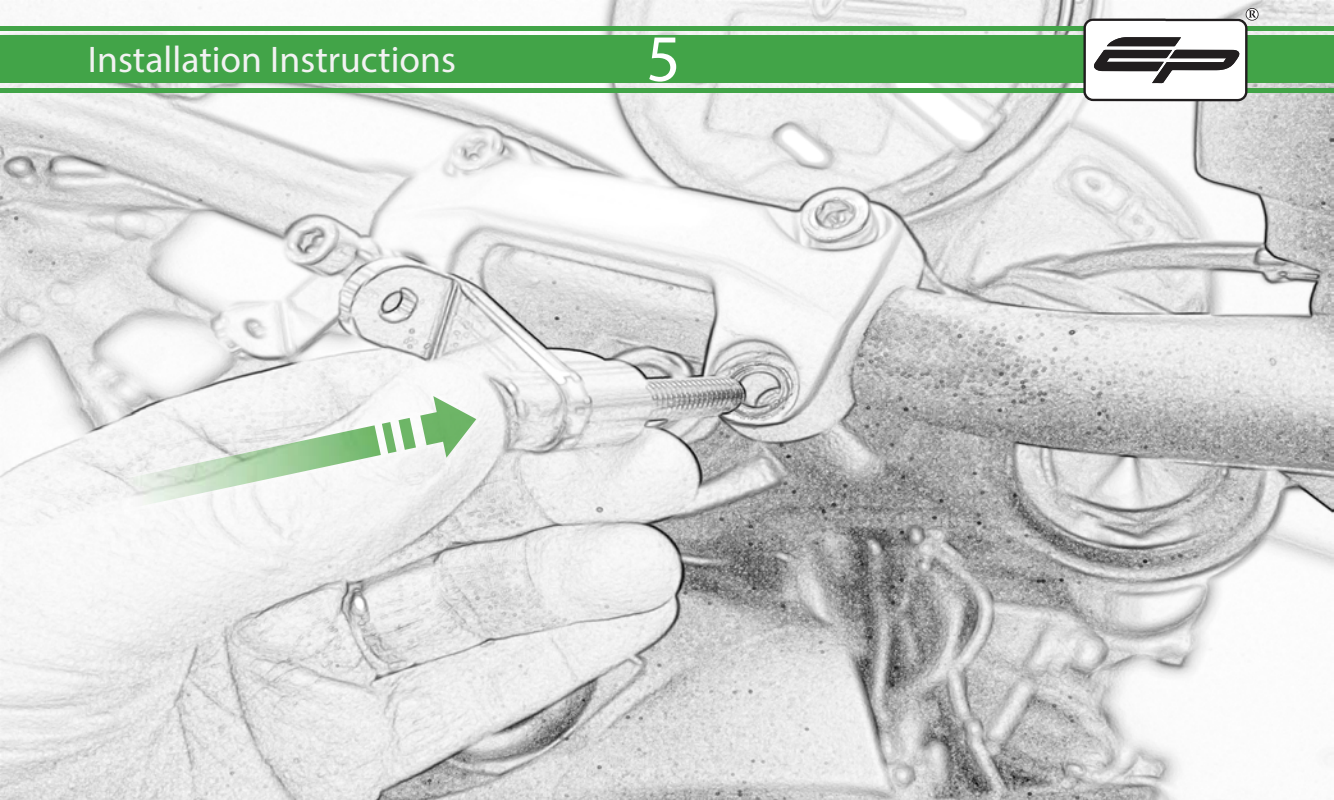


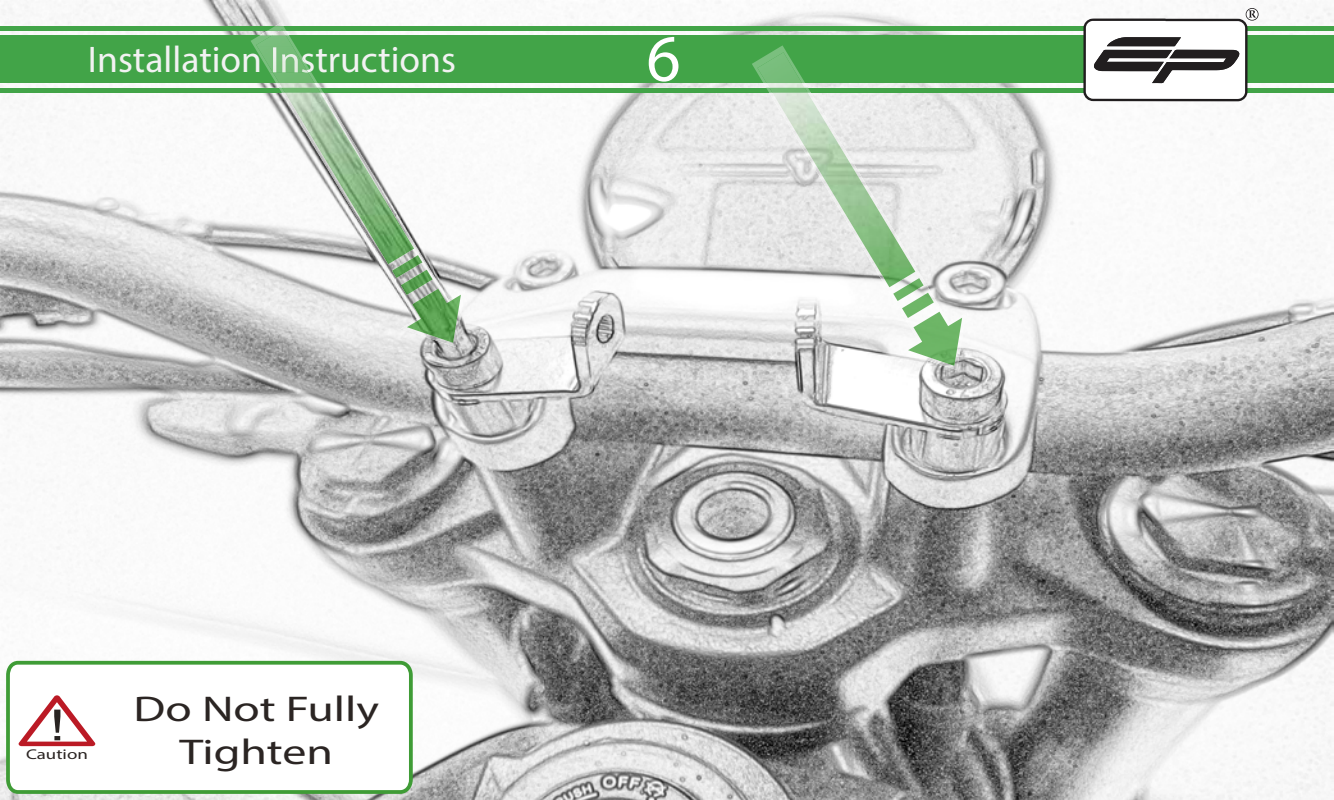


Caution


Do Not Fully Tighten




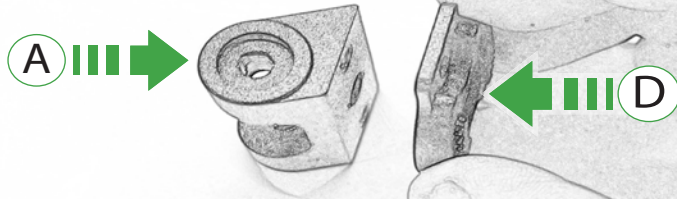





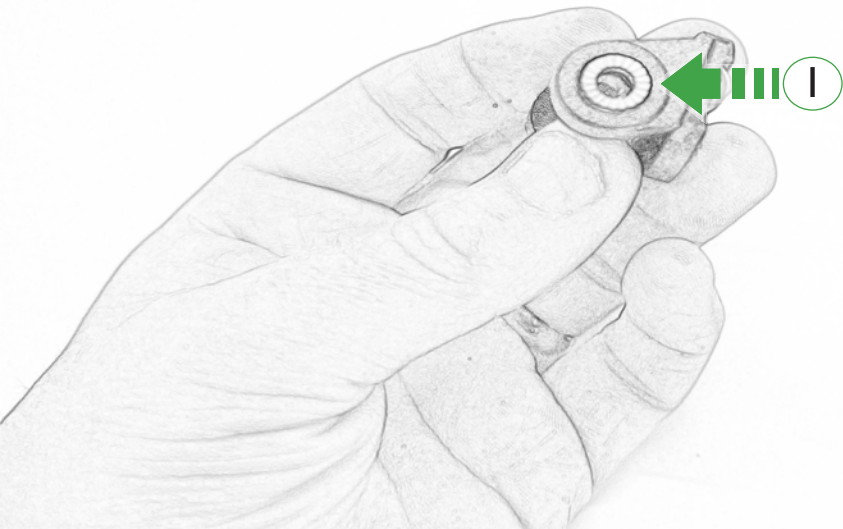


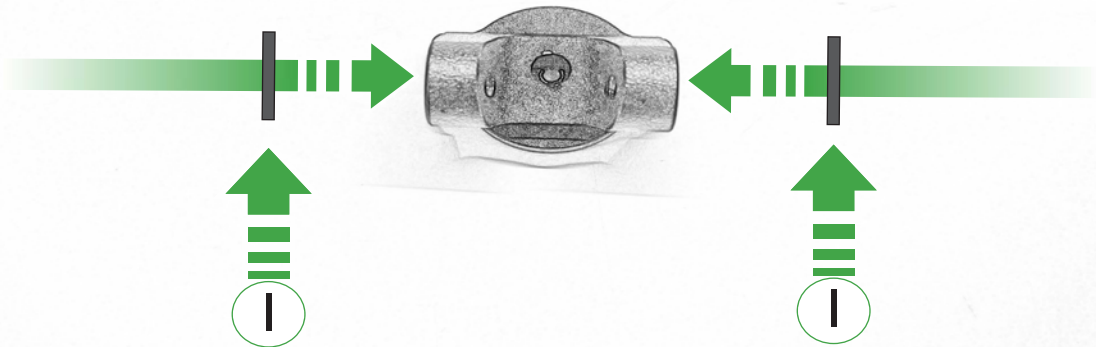

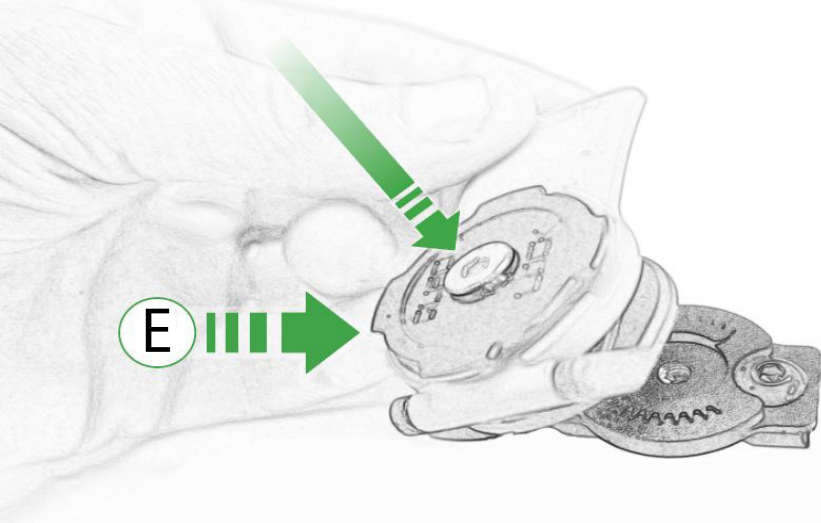

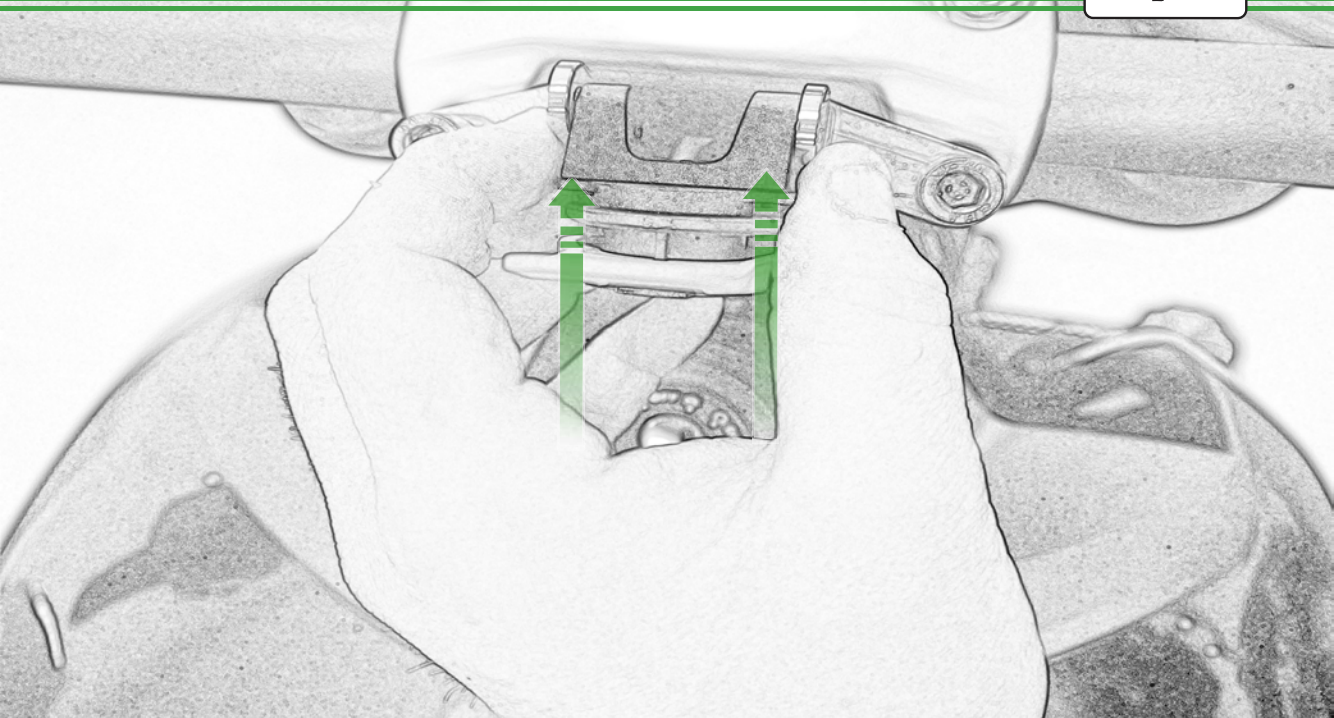

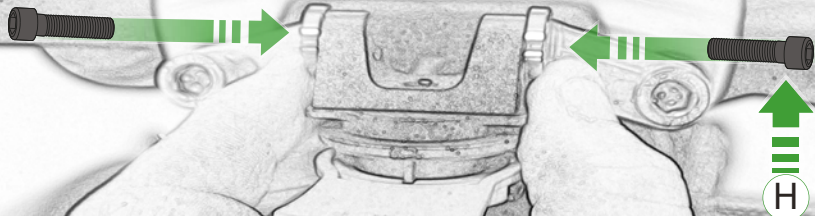

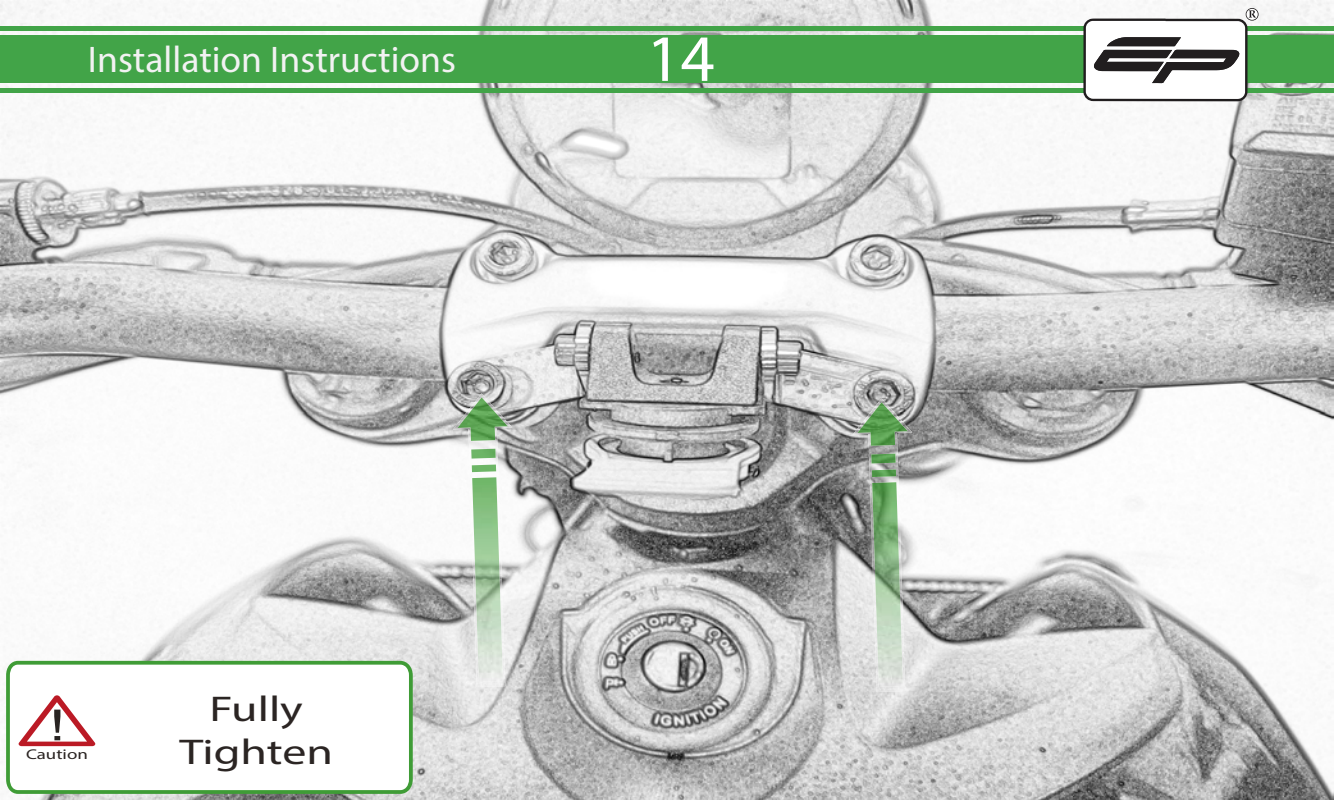

Caution

Fully  
Tighten





## ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)